 


- D** Montageanleitung
- GB** Assembly instructions
- NL** Handleiding voor de montage
- PL** Instrukcja montażu
- HU** Szerelési útmutató
- RO** Instrucțiuni de montaj
- FR** Notice de montage
- IT** Istruzioni di montaggio
- CZ** Montážní návod
- SK** Návod na montáž
- TR** Montaj talimatı
- RU** Инструкция по монтажу





Service • Assistenza • Dienstverlening • Serwis
Servis • Szerviz • Сервисная служба

Name • Nom • Nome • Naam Nazwa • Imięno • Назво • Név Dejmitke • Isim • Название	Flint
Nr. • No. • N° • Номер • Č. • Sz	7.7541
Typ • Type • Tip • Típus • Tipo Тип	

 



- 1. ASL 291x330x15mm 1
- 2. ASR 291x330x15mm 1
- 3. MSL 291x315x15mm 1
- 4. MSR 291x315x15mm 1
- 5. BL 1400x330x15mm 1
- 6. B0 1400x330x15mm 1
- 7. BLE 1399x61x15mm 1
- 8. ZB 687x315x15mm 1
- 9. EB 326x315x15mm 2
- 10. RW 1381x303x3mm 1

e11		8x	t6		16x
f1		8x	x8		8x
l		12x	y4		1x
n		21x	y14		8x
r		8x	z		15x

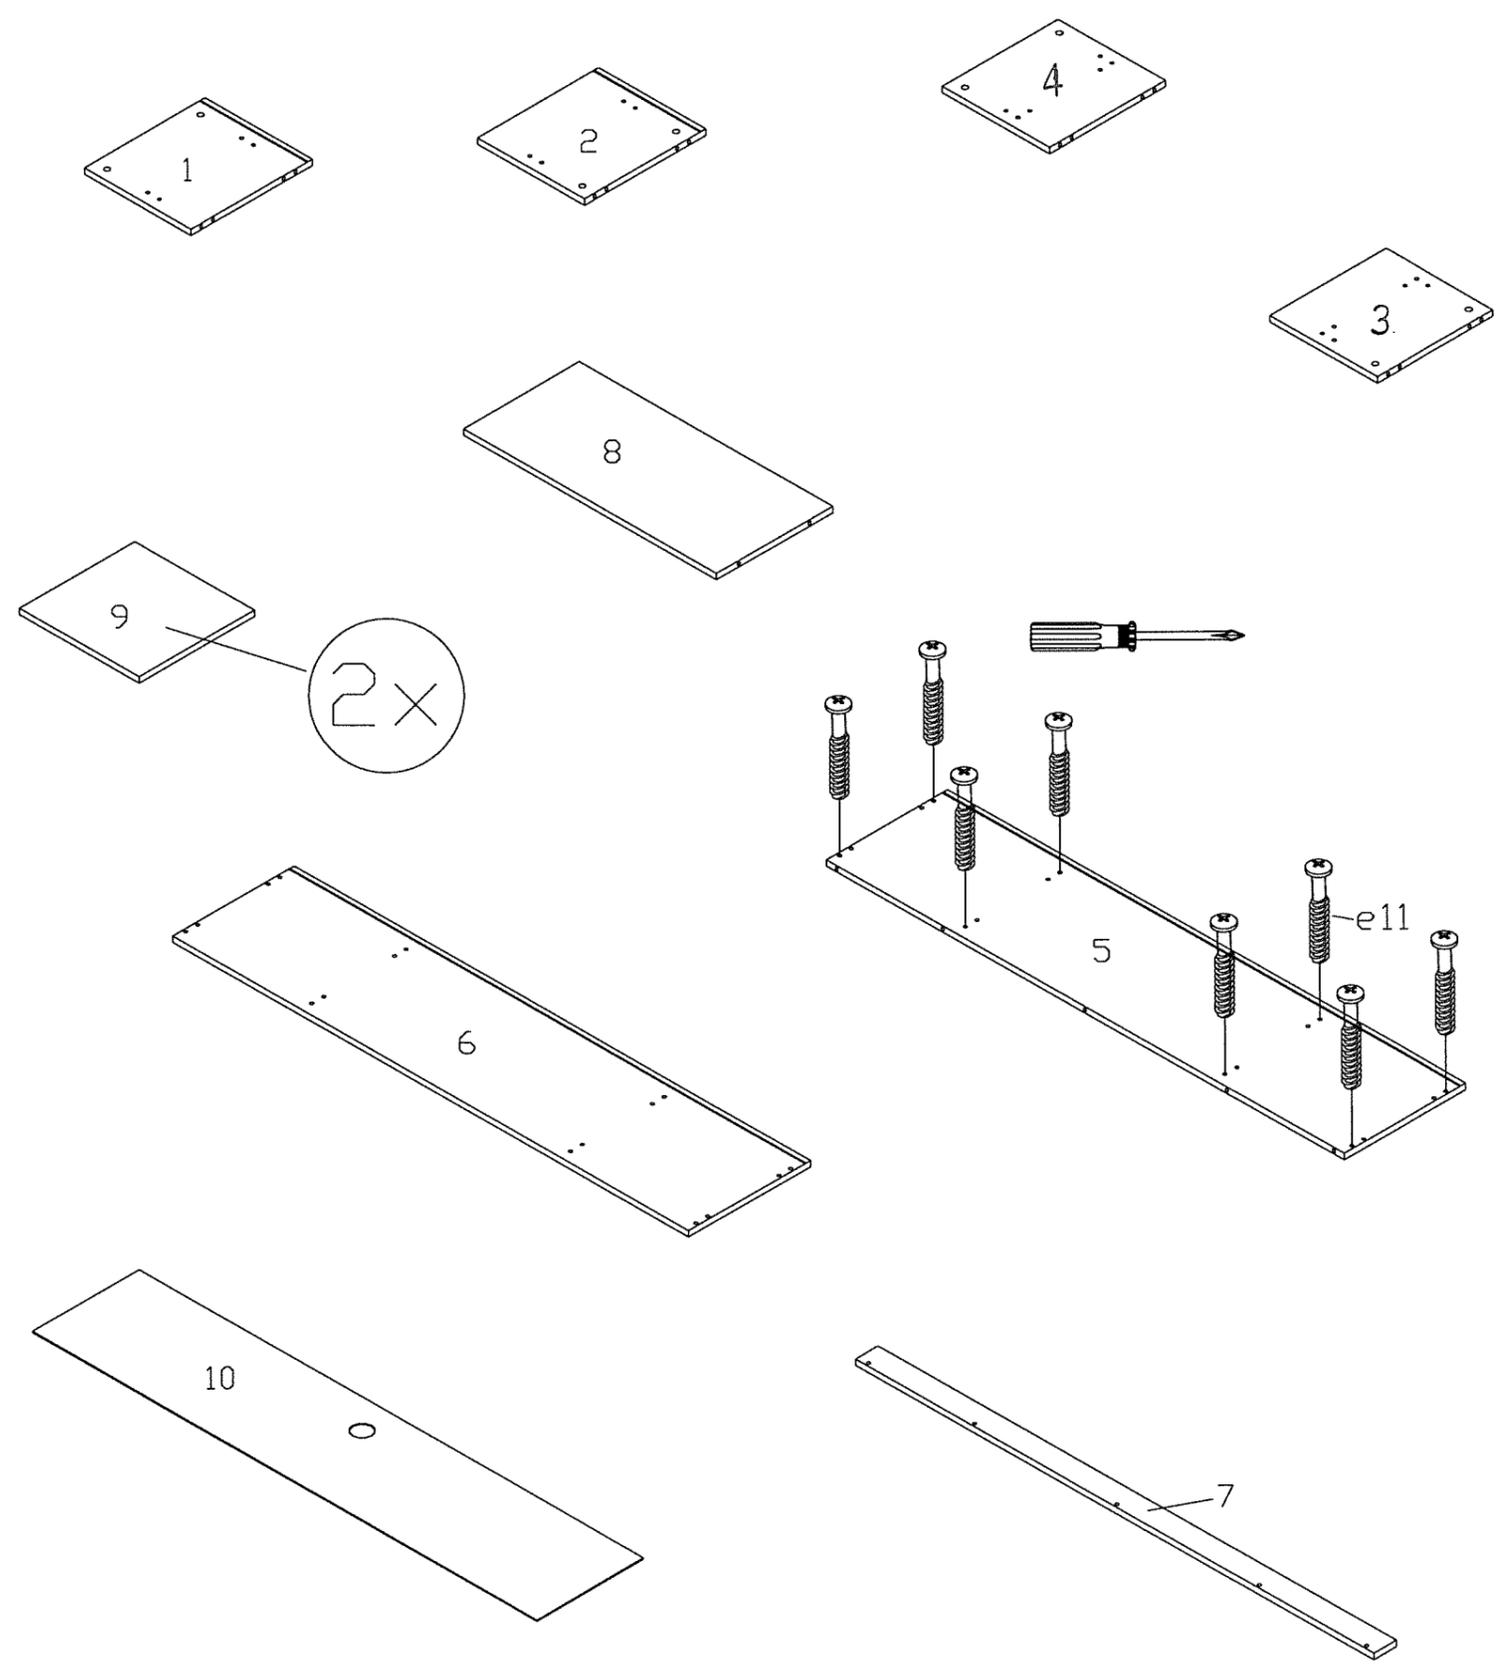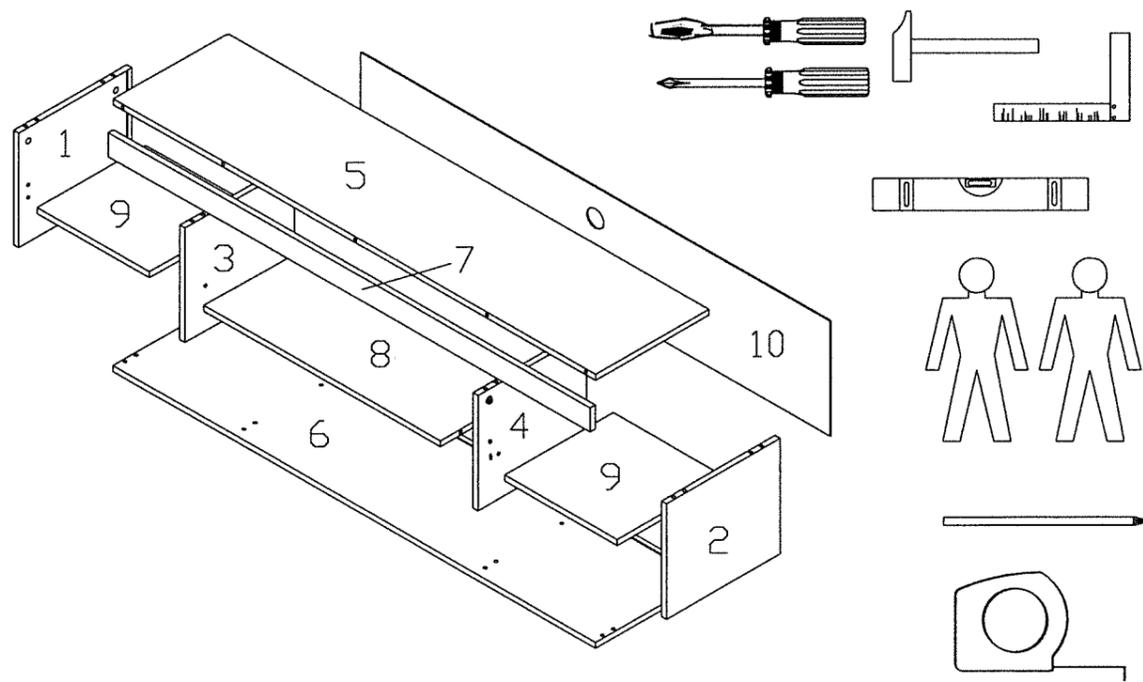


1

 
l		4x
---	---	----

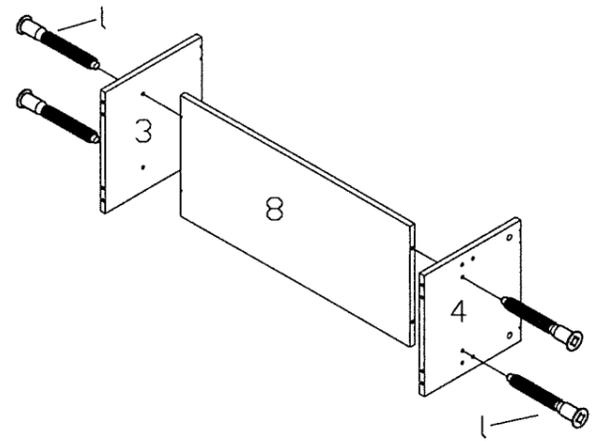


3

 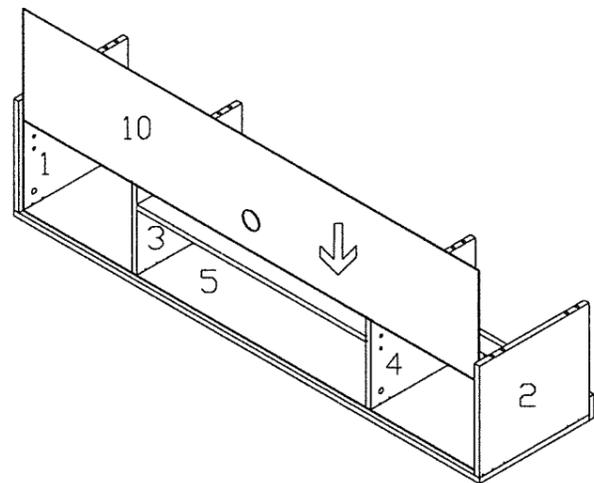



5

t6		16x
x8		8x
y14		8x

 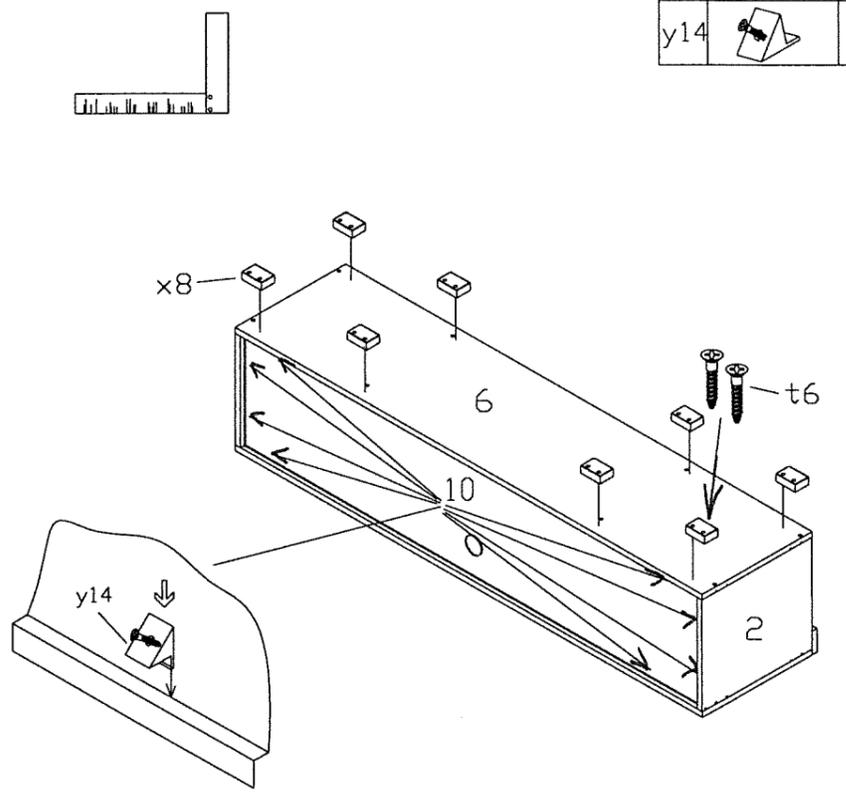



2

n		21x
y4		1x
f1		8x

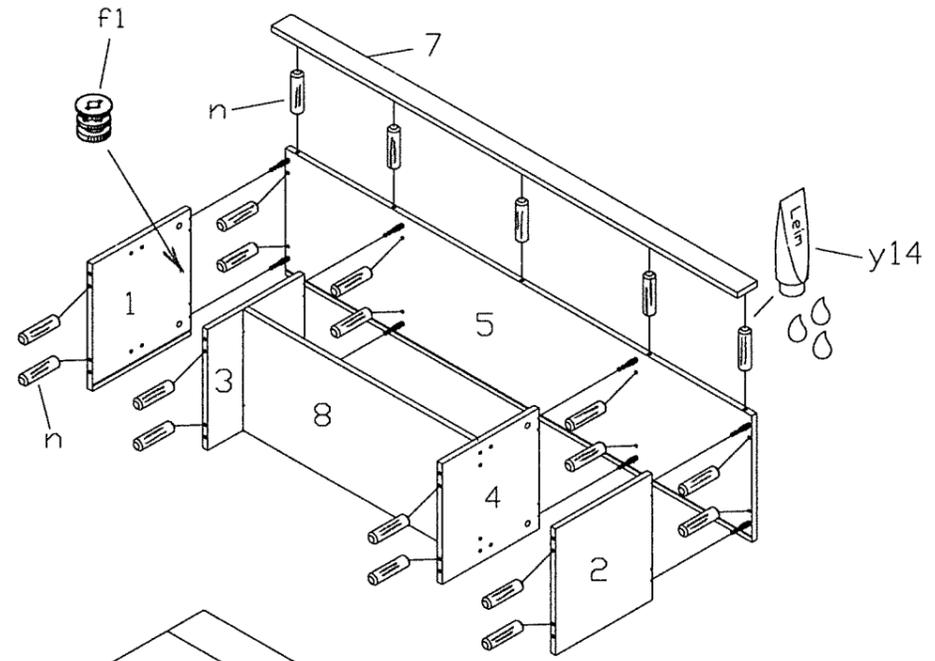

4

l		8x
z		15x

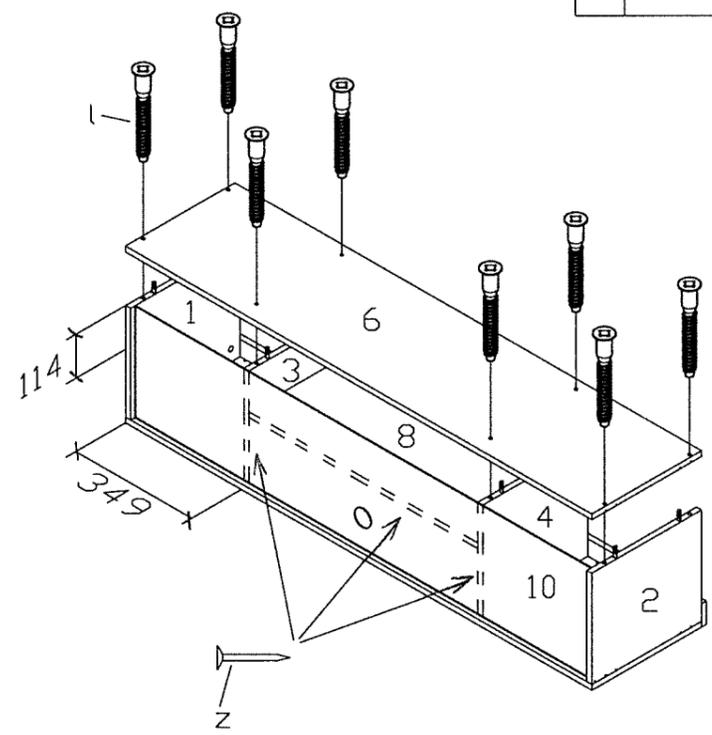

6

r		8x
---	---	----

