



Cesar DL

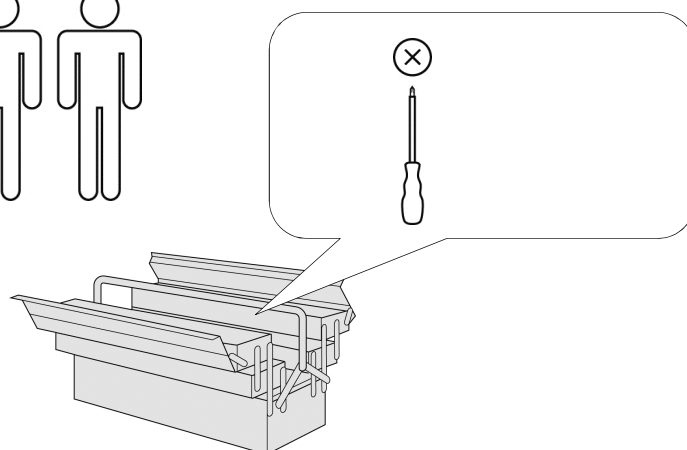

- | | | | |
|----|------------------------|----|-----------------------------|
| D | Montageanleitung | GB | Assembly instructions |
| FR | Notice de montage | NL | Handleiding voor de montage |
| CZ | Montážní návod | IT | Istruzioni di montaggio |
| RO | Instructiuni de montaj | RU | инструкция по сборке |
| PL | Instrukcja montazu | SK | Návod na montáž |
| HU | Szerelési útmutató | TR | Montaj talimati |

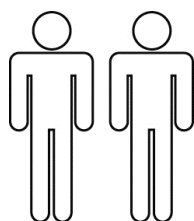

Service • Assistenza • Dienstverlening • Serwis

Servis • Szerviz • Сервисная служба

Name • Nom • Nome • Naam
Nazwa • Jméno • Názov • Név
Denumire • İsim • Название




Cesar

Nr. • No. • N° • Номер • Č • Sz

SH42


Typ • Type • Tip • Típus • Tipo
Тип


DL

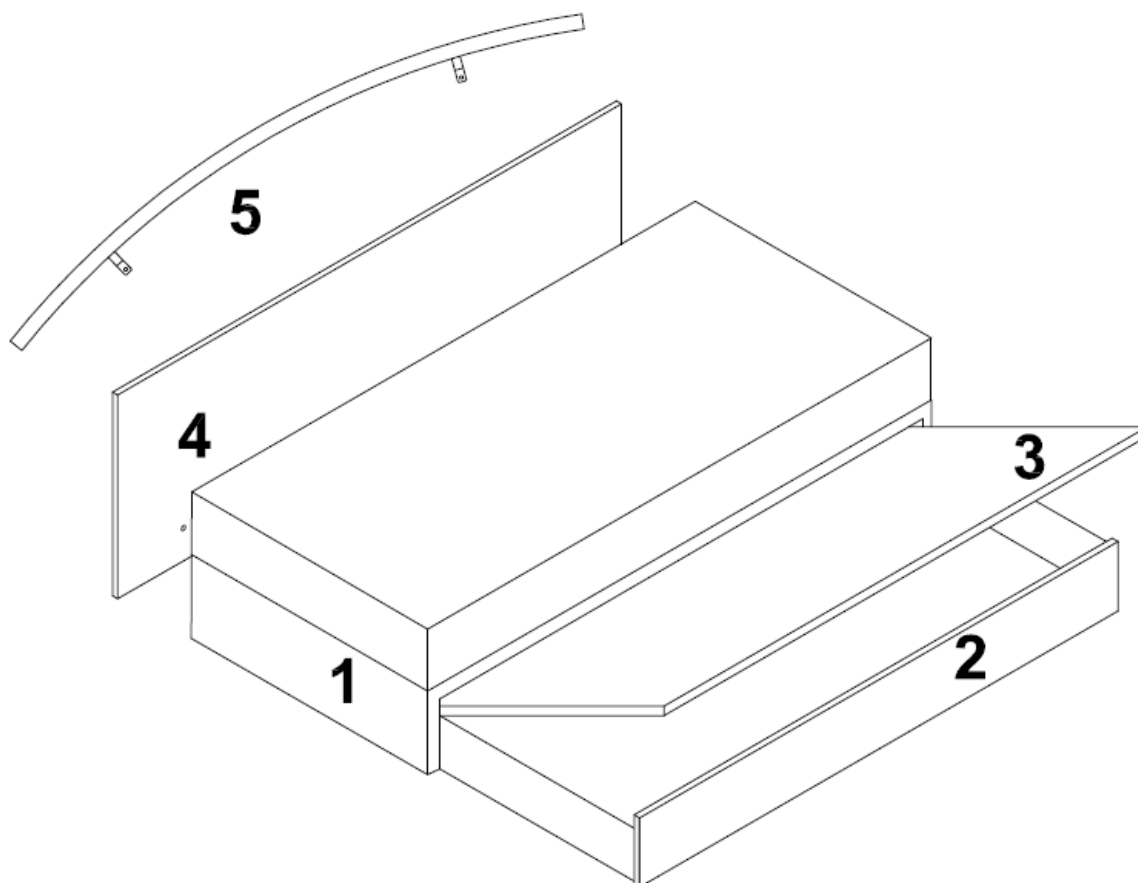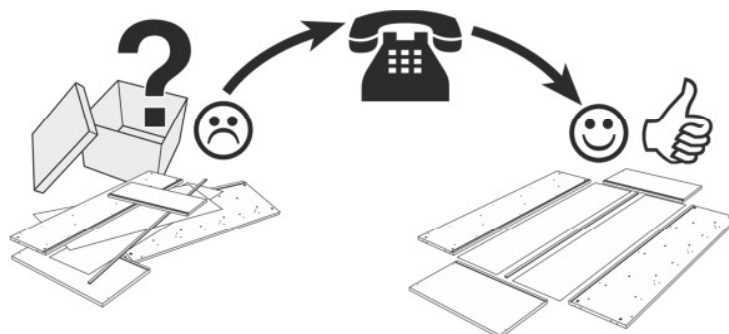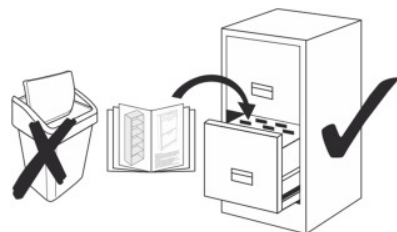

A	B
	
3x 6x45	3x M8

 

A	B	
		
3x 6x45	3x M8	

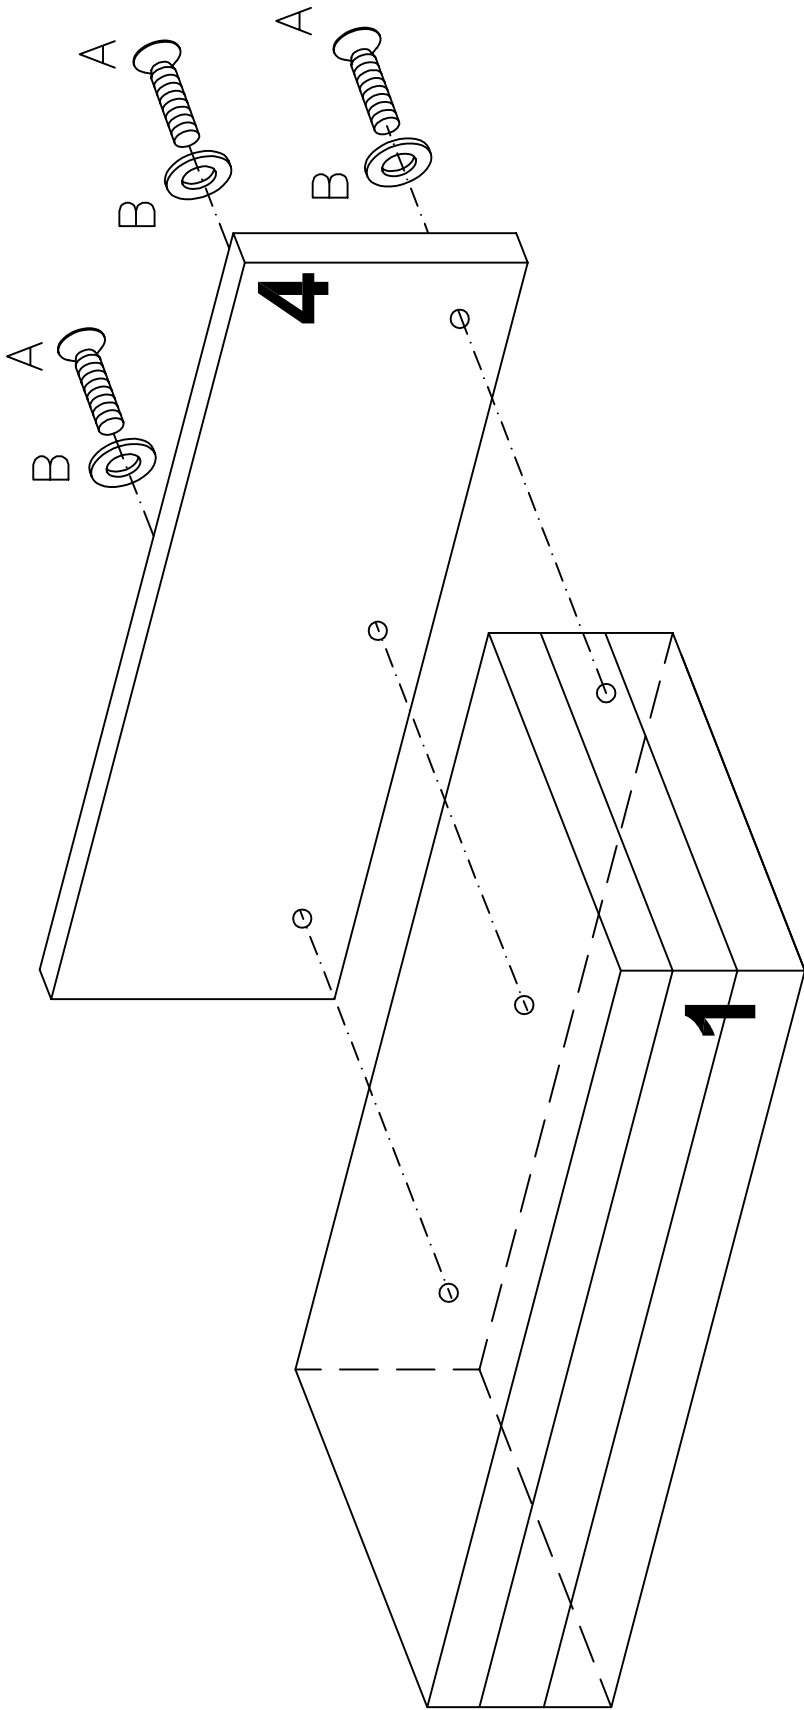

DL_Cesar_RÜ_3xSenk_6x45