 
 
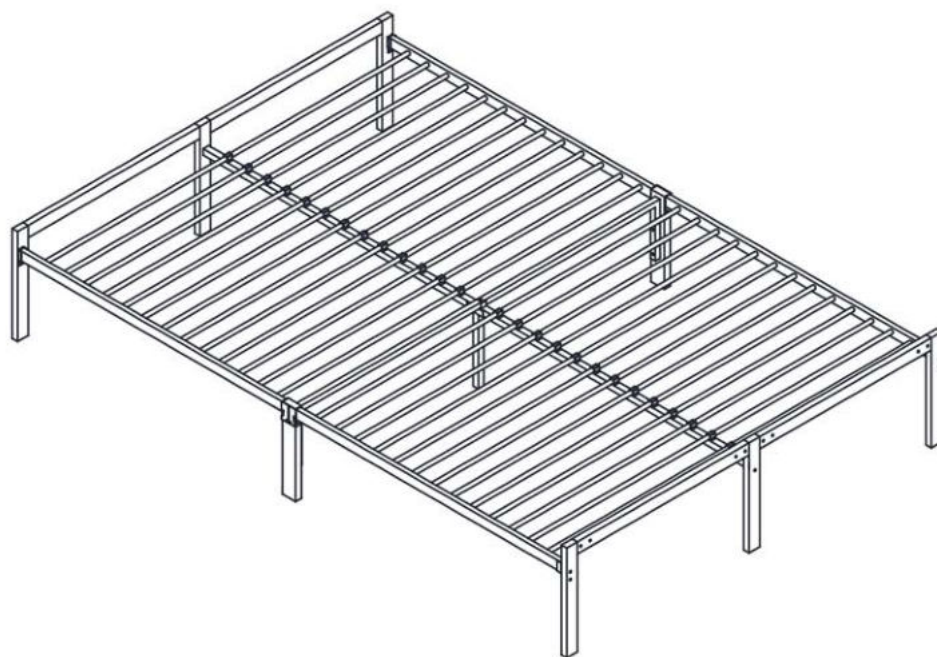 


Art. Nr.8488 0035/9319 4035/1465 0262

 
LKZ 48694

 
 
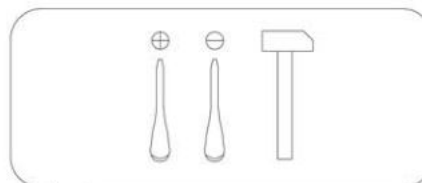 


- | | |
|---|-------------------------------------|
| (D) Montageanleitung | (GB) Assembly instructions |
| (FR) Notice de montage | (IT) Istruzioni di montaggio |
| (NL) Handleiding voor de montage | (PL) Instrukcja montazu |
| (CZ) Montážní návod | (SK) Návod na montáž |
| (HU) Szerelési útmutató | (RO) Instrukțiuni de montaj |
| (TR) Montaj talimati | (RU) Инструкция по монтажу |

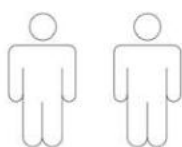

 
0
10
20
30
40
50
60
70
80
90
100
110
120
130
140
150
160
170
180
190
200

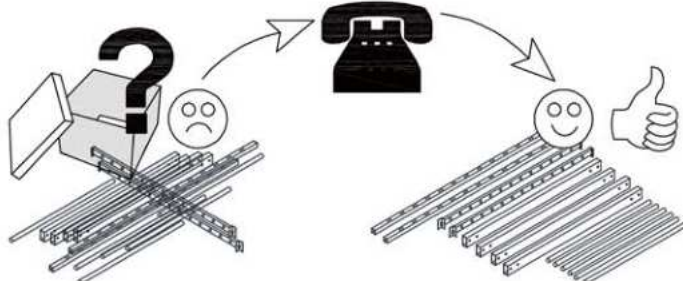Service • Assistenza • Dienstverlening • Serwis Servis • Szerviz • Сервисная служба	
Name • Nom • Nome • Naam Nazwa • Jméno • Názov • Név Denumire • İsim • Название	
Nr. • No. • N° • Номер • Č. • Sz	8488 0035,9319 4035,1465 0262
Typ • Type • Тип • Тип	
	
 	

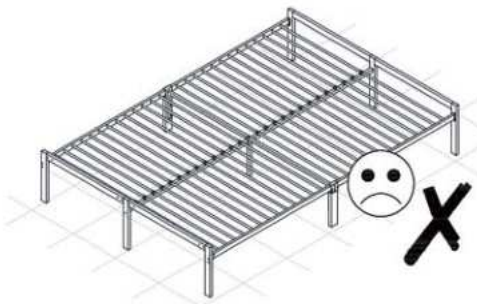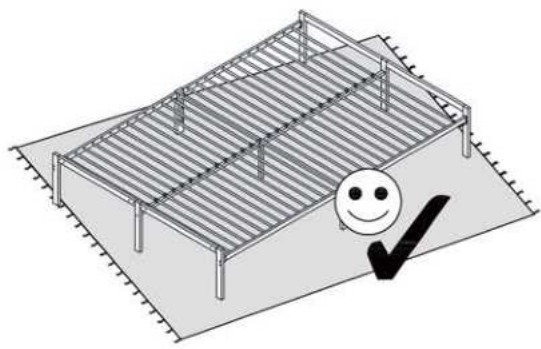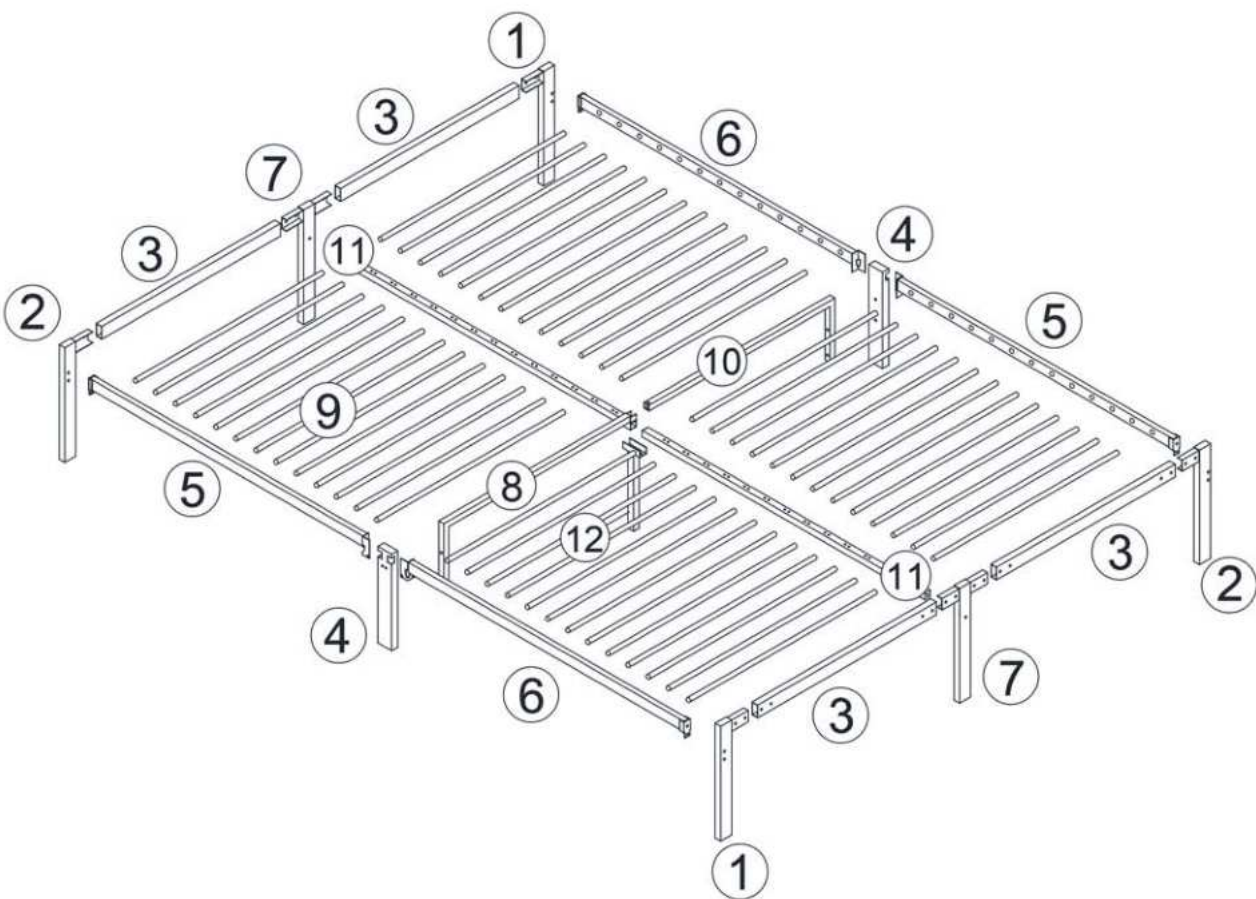

 
 
 


A M8x35mm x8	B M6x60mm x3	C M6x30mm x4	D M6x15mm x4	E M8 x18
F M8 x4	G x4	H x26	I x1	J x1

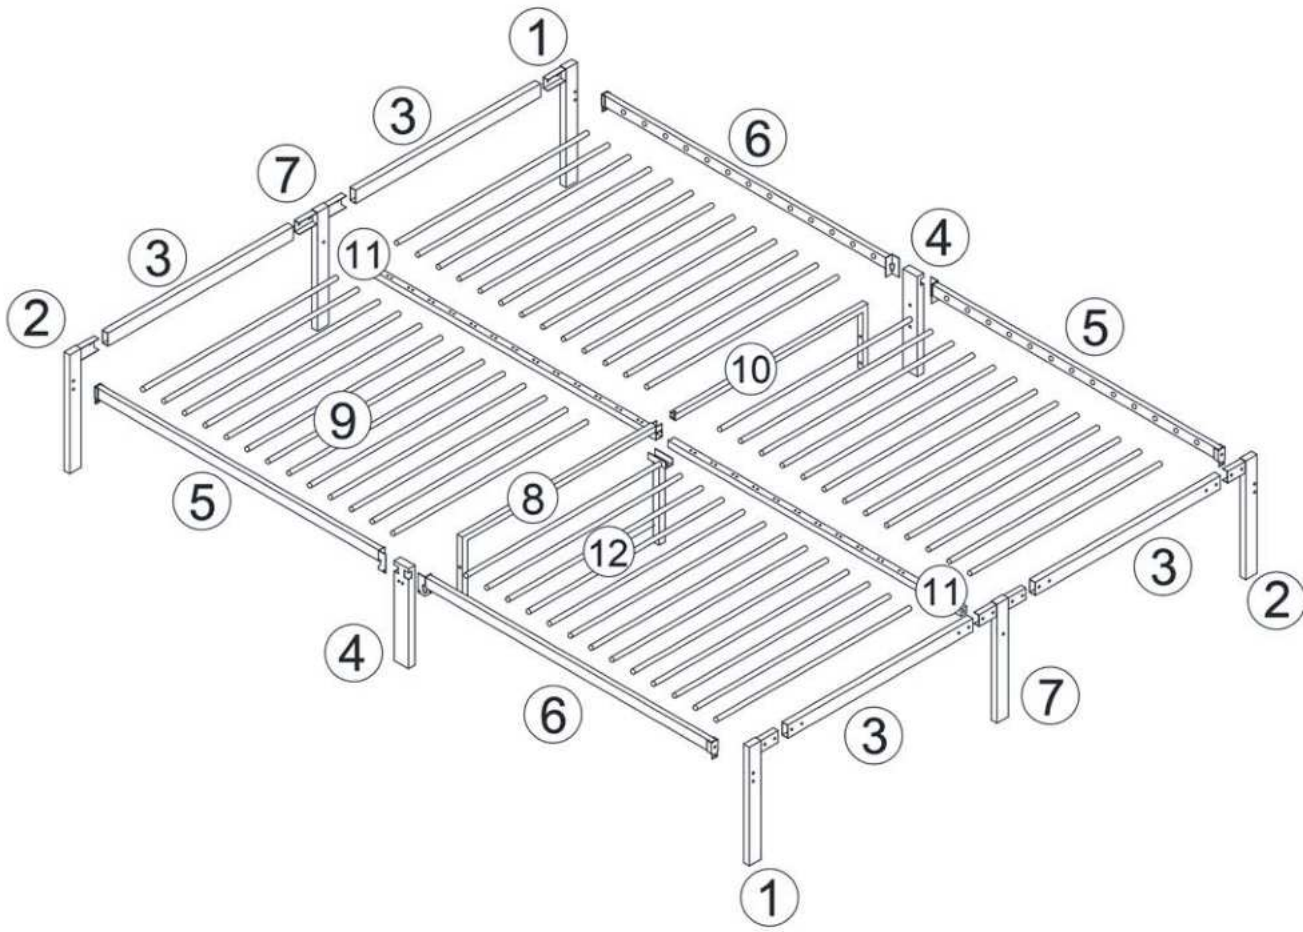

 
 
1 x2	2 x2	3 x4	4 x2	5 x2	6 x2
7 x2	8 x1	9 x52	10 x1	11 x2	12 x1

step 1

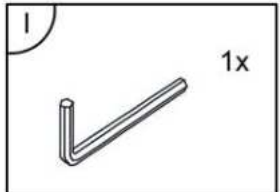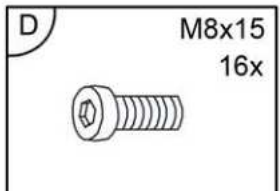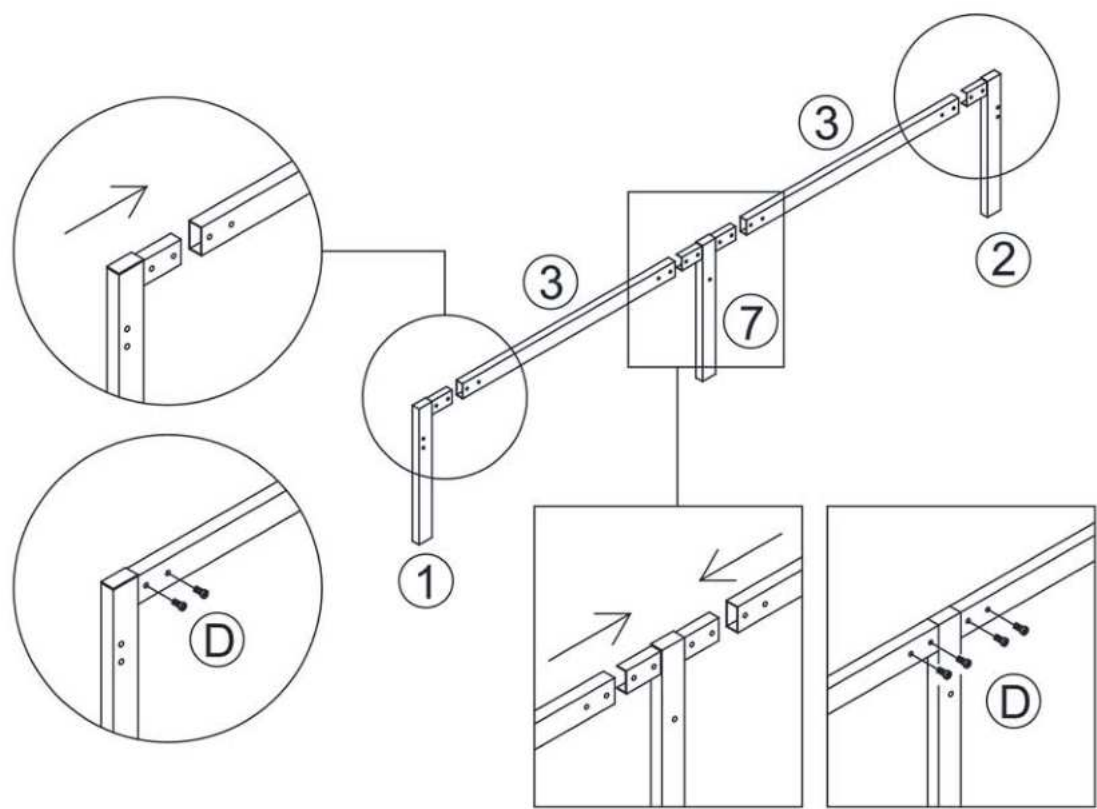 


 
×2

step 2

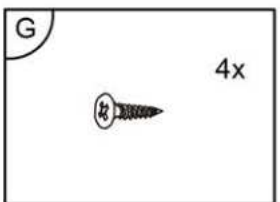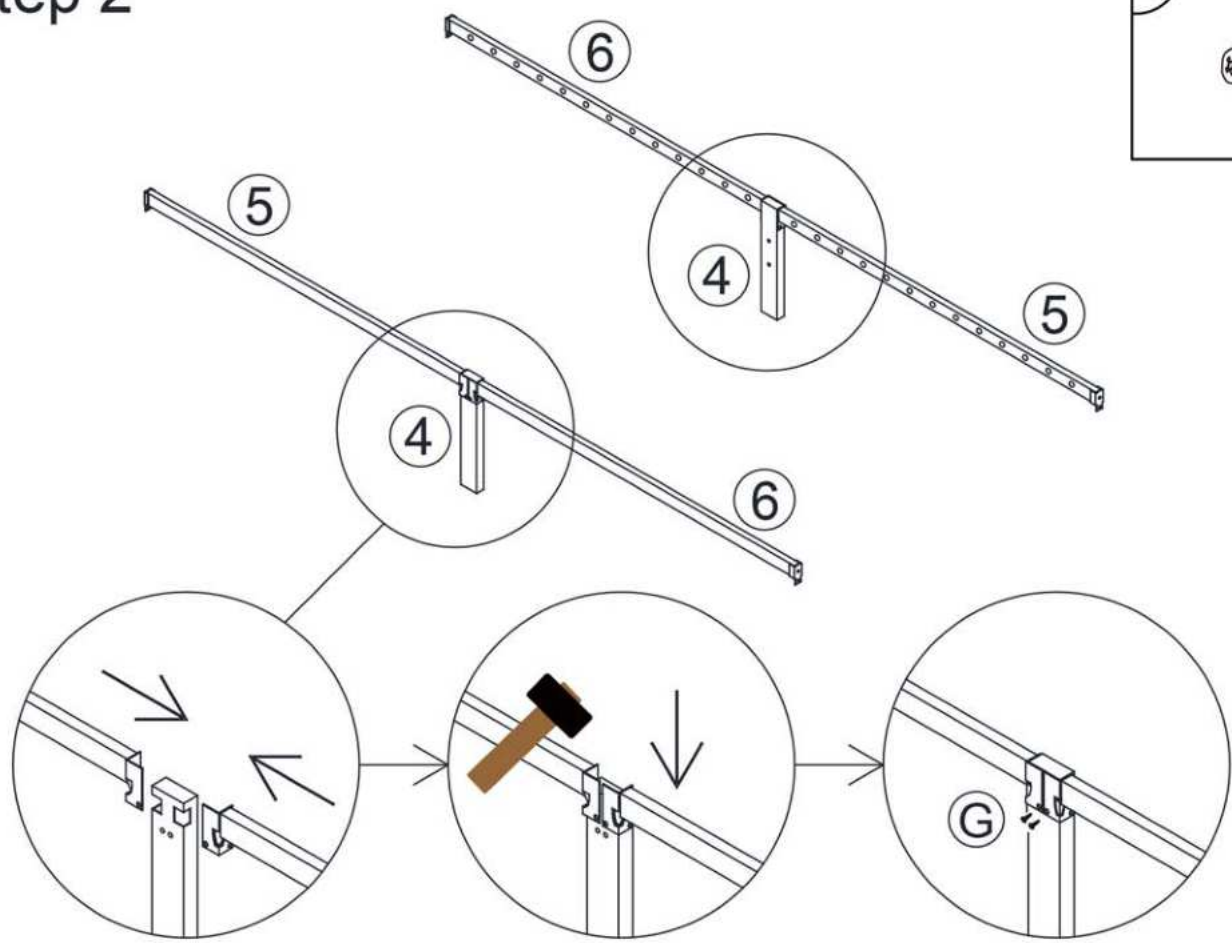 


 
step 3

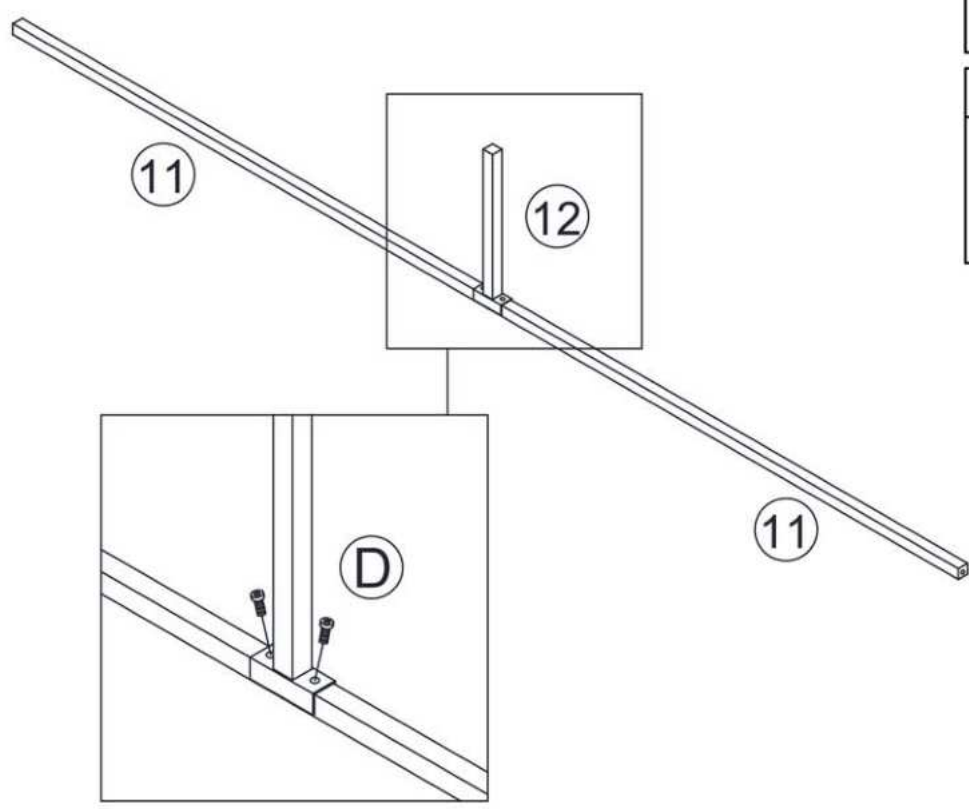

- D M8x15 2x

- I
 1x

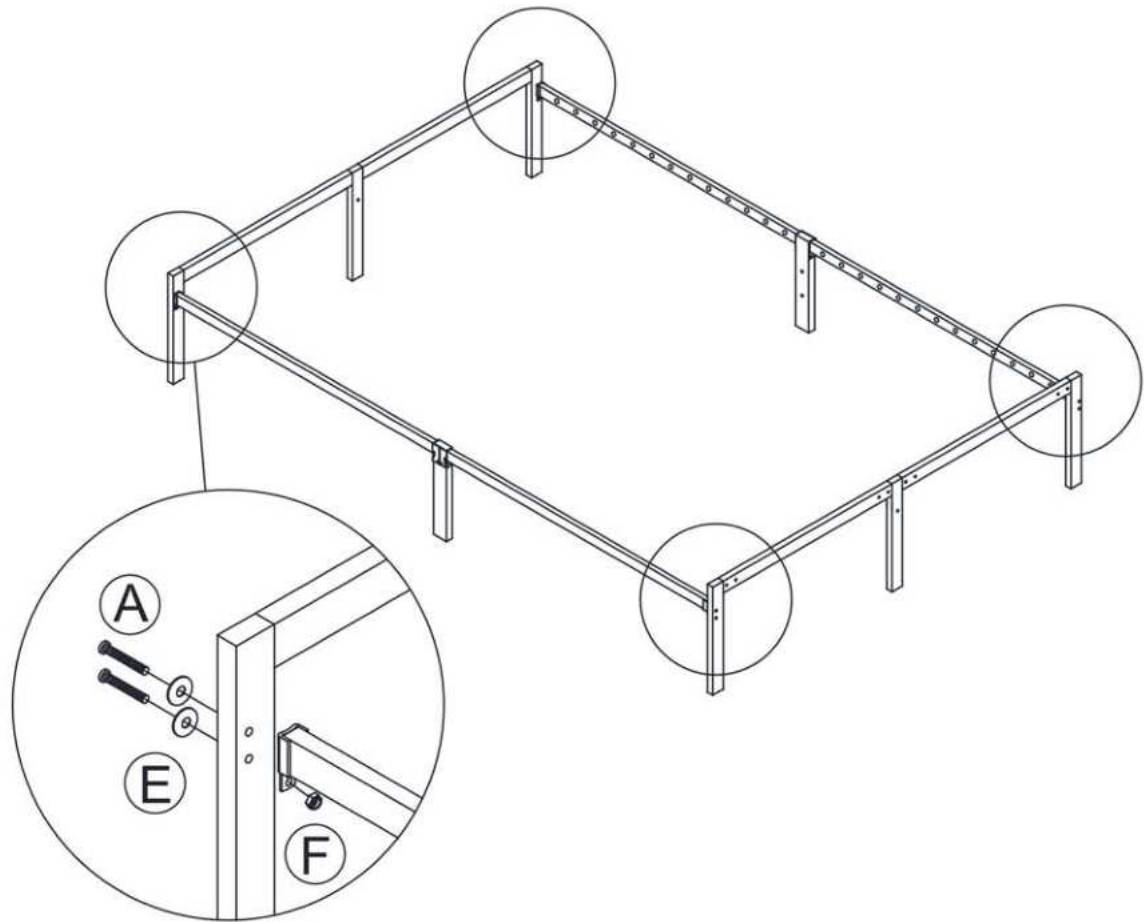step 4



 
- A M8x35 8x

- E 8x

- F M8 4x

- I 1x

- J 1x

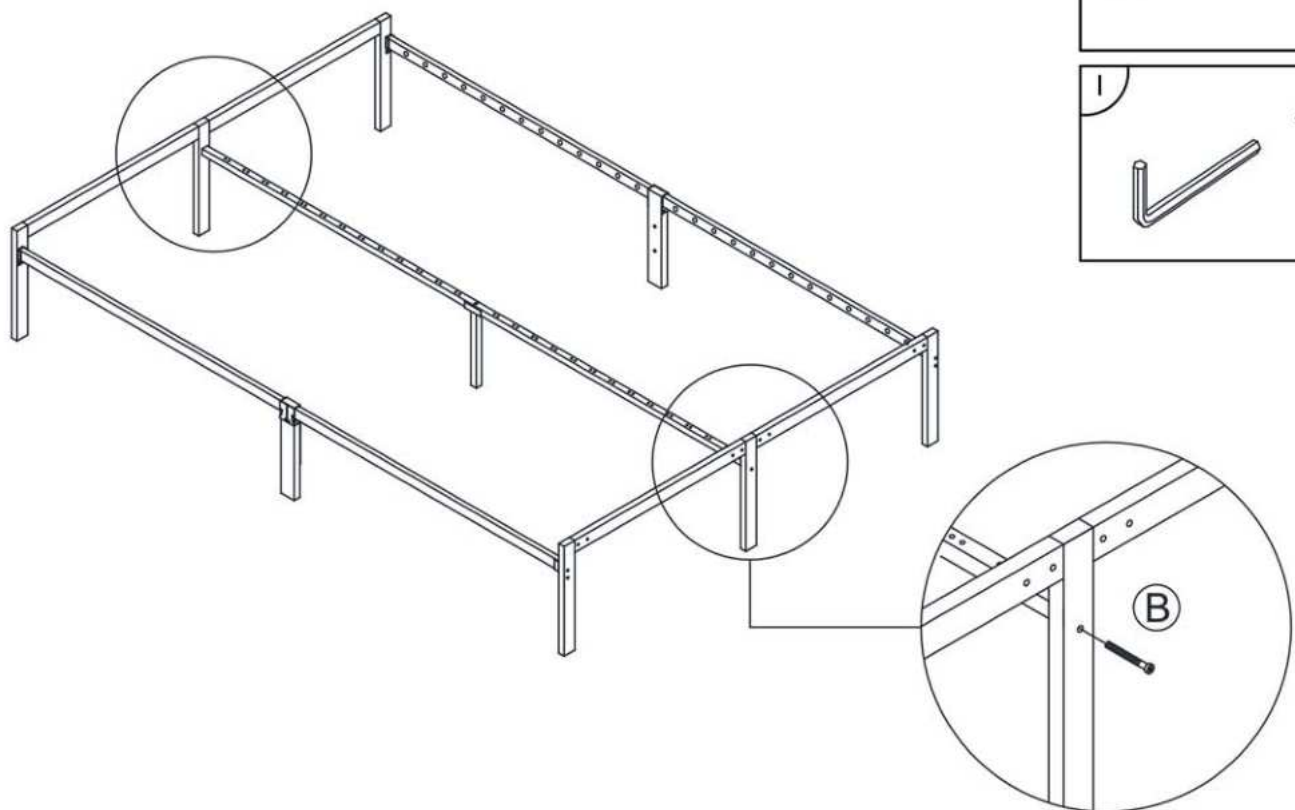 

step 5



B M6x60
2x

I 1x

step 6

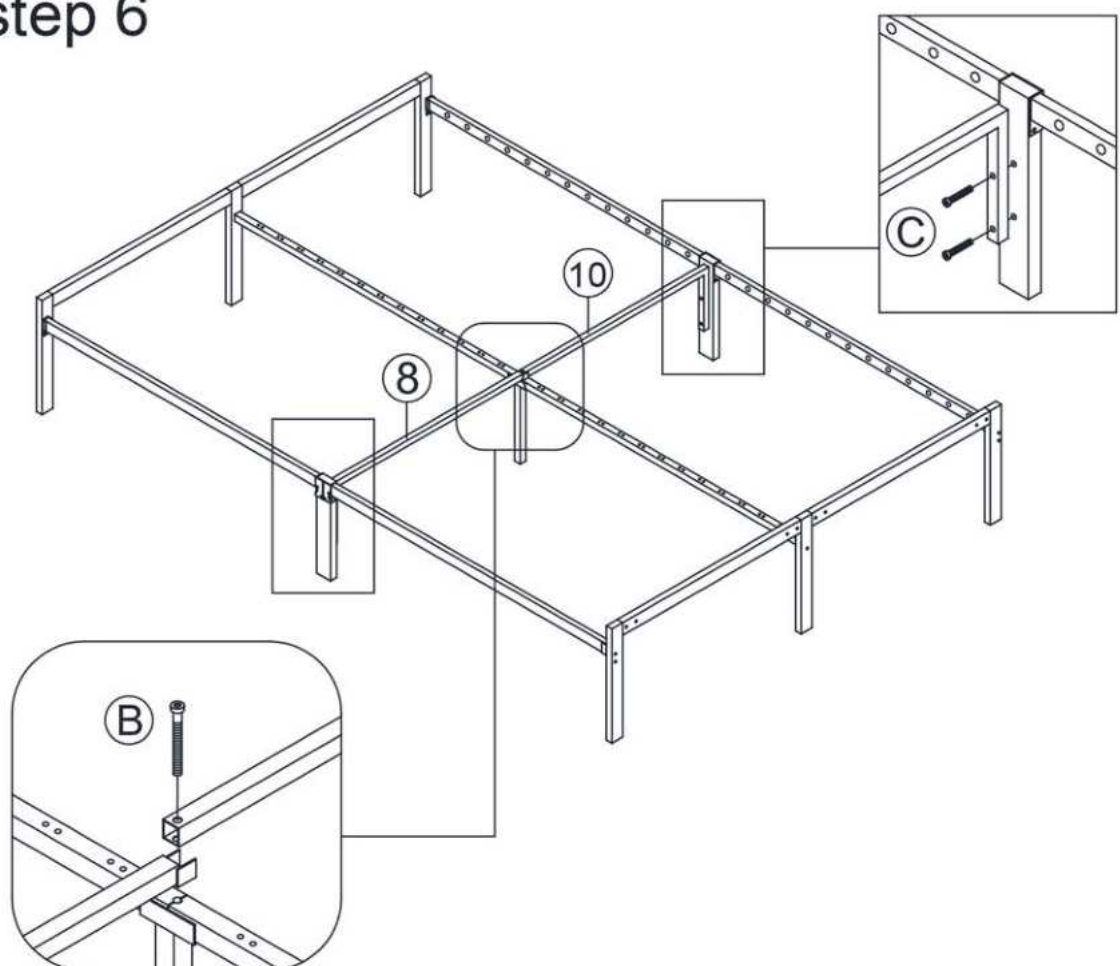

B M6x60
1x

C M6x30
4x

I 1x

step 7

