

Ⓛ Aufbauanleitung

Ⓛ Notice de montage

Ⓛ Handleiding voor de montage

Ⓛ Montážní návod

Ⓛ Szerelési útmutató

Ⓛ Montaj talimatları

Ⓛ Assembly instruction

Ⓛ Istruzione di montaggio

 
 
 
 
 
 
Ⓛ Instrukcja montażu

Ⓛ Navod na montaž

Ⓛ Instrucțiuni de montaj

Ⓛ Инструкция по монтажу

# 36-1006-46-07M

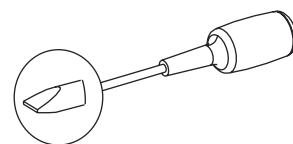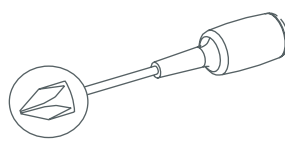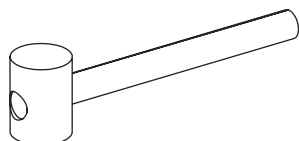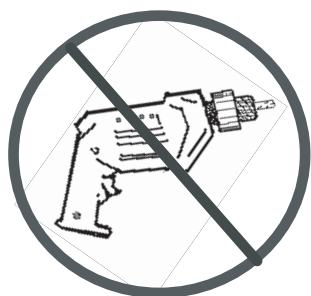
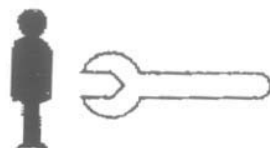
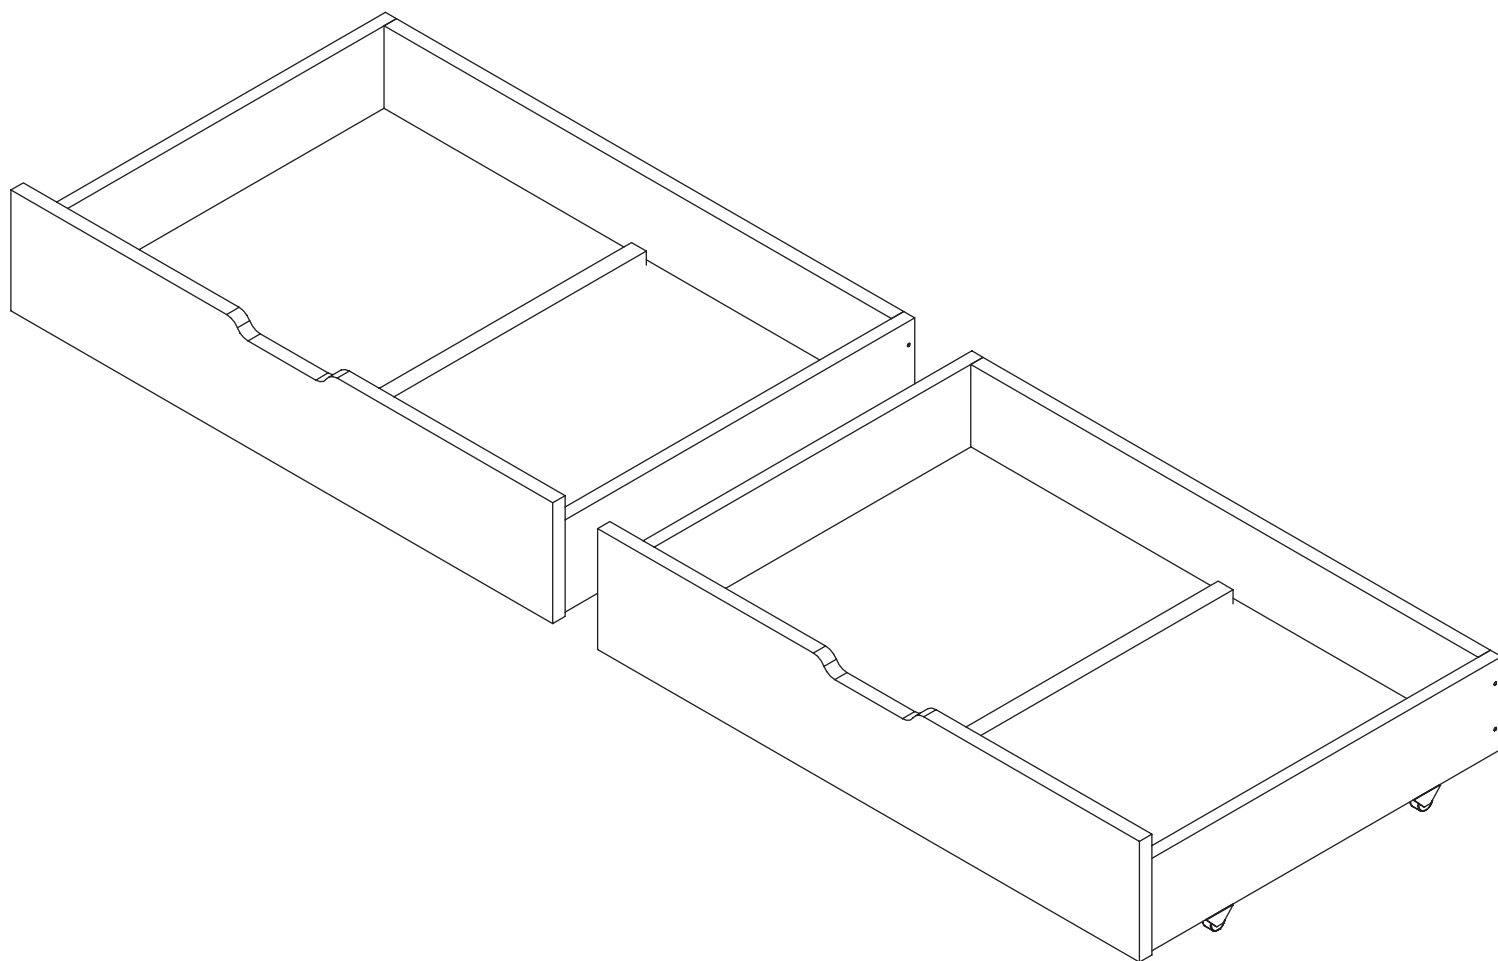


# Service • Assistenza • Dienstverlening • Serwis Servis • Szerviz • Сервисная служба



Name • Nom • Nome • Naam • Nazwa • Jméno • Názov  
Név • Denumire • Isim • Название

Nr. • No. • N° • Č • Sz • Номер

   
Typ • Type • Tip • Tipus • Druh • Тиро • Тип

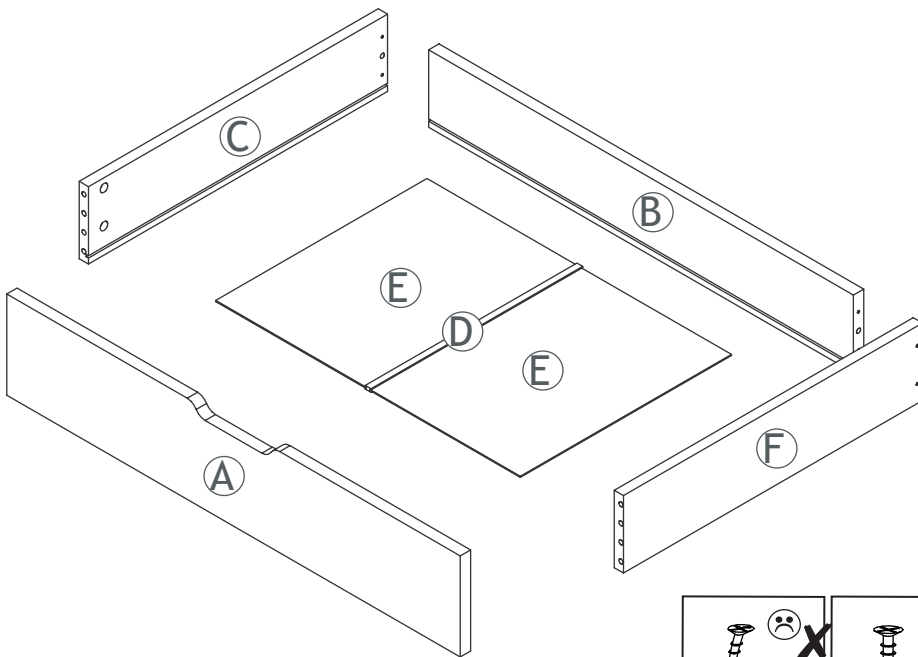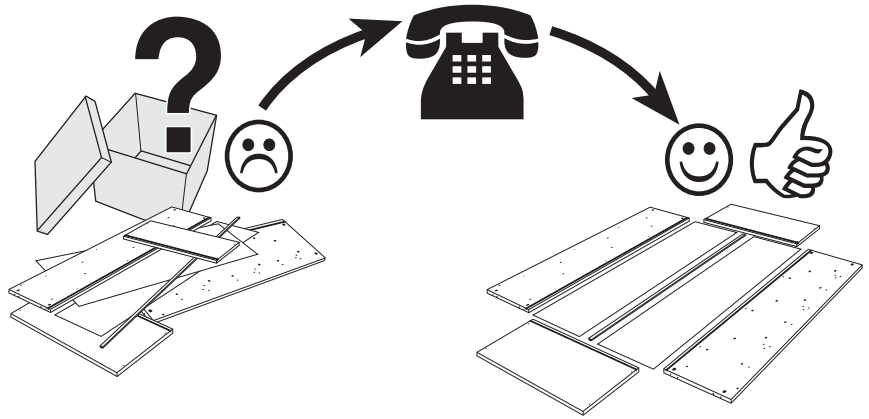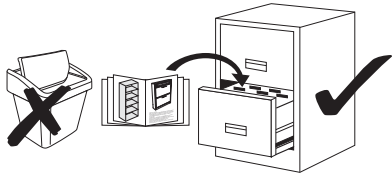


<b>A</b>	006181-46	x2
<b>B</b>	006281-46	x2
<b>C</b>	006382-46	x2
<b>D</b>	149410-32	x2
<b>E</b>	006580-52	x4
<b>F</b>	006381-46	x2

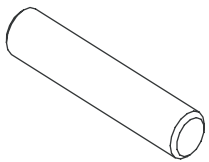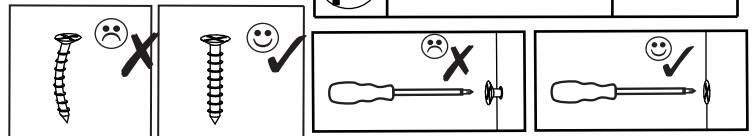  

6


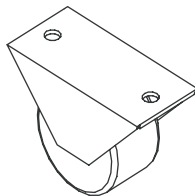 


13

 

14

  
1-000001=

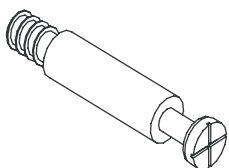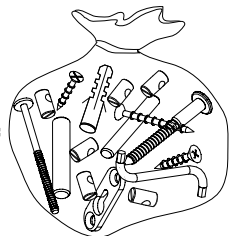

17



 
18

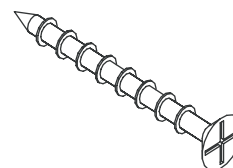


19

		mm	
6	1-000013-00	8x40	x12
13	1-000117-07	D=28	x8
14	1-000091-07	3x20	x16
17	1-000046-07	L34	x8
18	1-000048-07	15x12	x8
19	1-000057-57	3,5x40	x8

 
1.

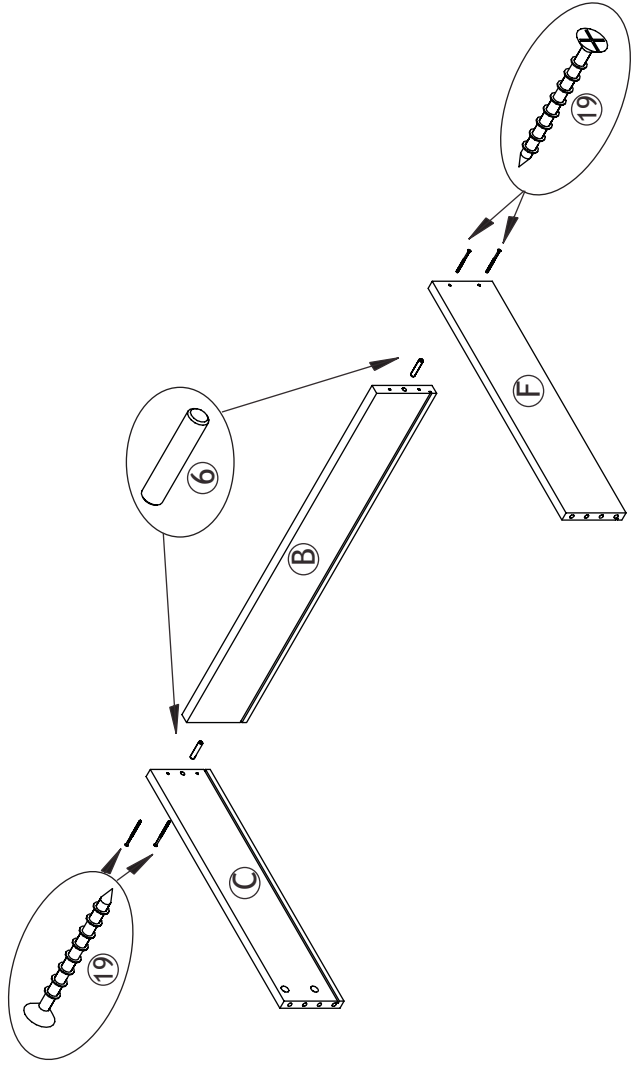

 2.

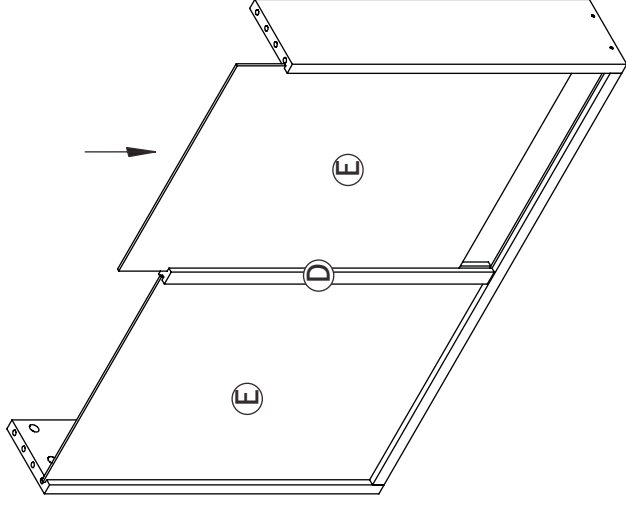

 3.

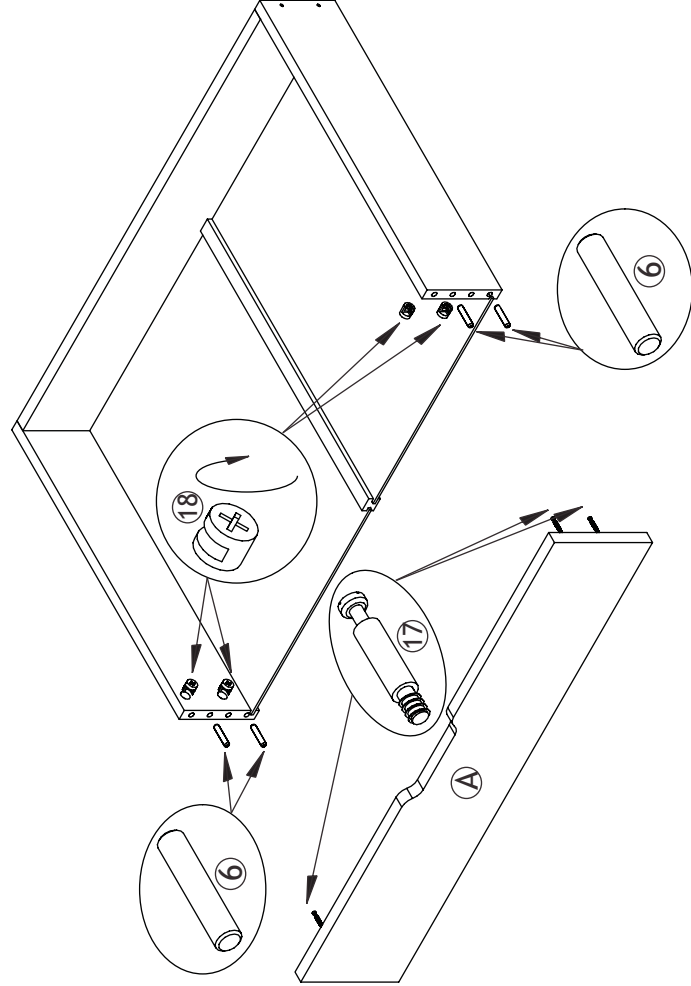

4.

