 
 
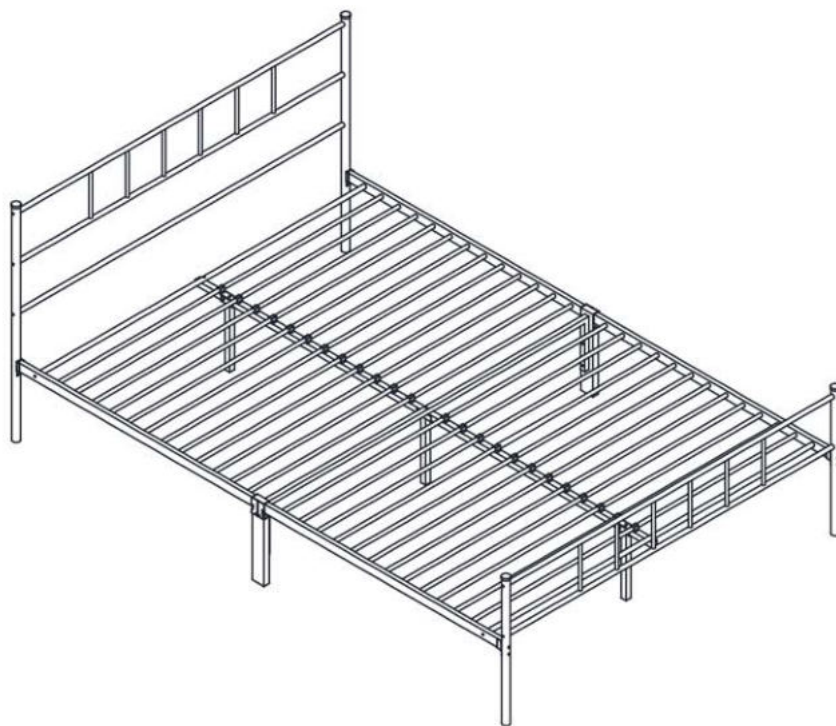 
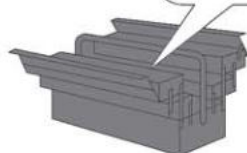 


Art. Nr.2698 3111/2564 9759/8866 8923



LKZ 48694



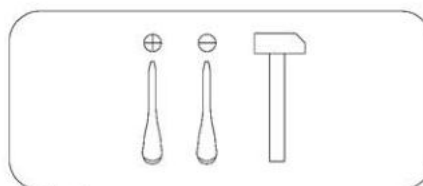


- | | |
|---|-------------------------------------|
| (D) Montageanleitung | (GB) Assembly instructions |
| (FR) Notice de montage | (IT) Istruzioni di montaggio |
| (NL) Handleiding voor de montage | (PL) Instrukcja montazu |
| (CZ) Montážní návod | (SK) Návod na montáž |
| (HU) Szerelési útmutató | (RO) Instrukțiuni de montaj |
| (TR) Montaj talimati | (RU) Инструкция по монтажу |

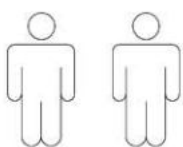

  
0
10
20
30
40
50
60
70
80
90
100
110
120
130
140
150
160
170
180
190
200

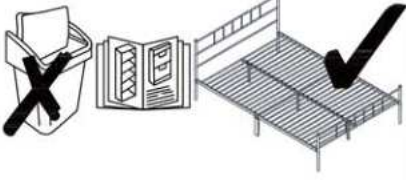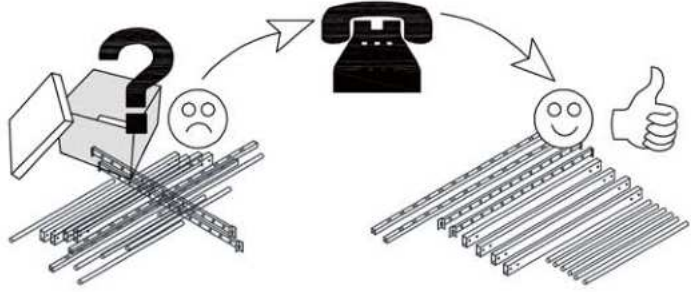Service • Assistenza • Dienstverlening • Serwis Servis • Szerviz • Сервисная служба	
Name • Nom • Nome • Naam Nazwa • Jméno • Názov • Név Denumire • İsim • Название	
Nr. • No. • N° • Номер • Č. • Sz	2698 3111,2564 9759,8866 8923
Typ • Type • Тип • Тип	
	
	

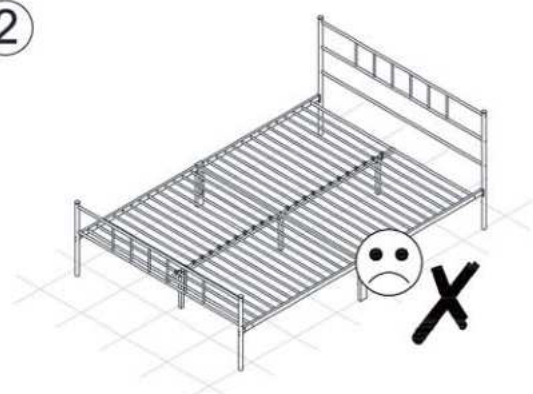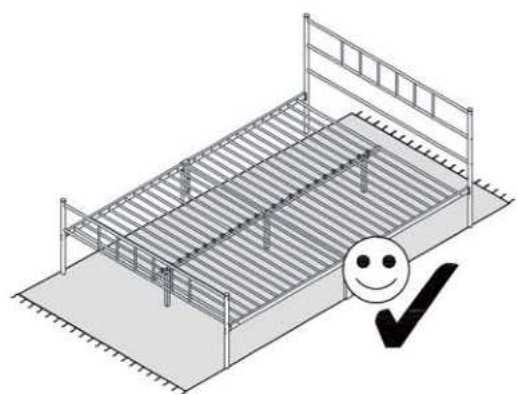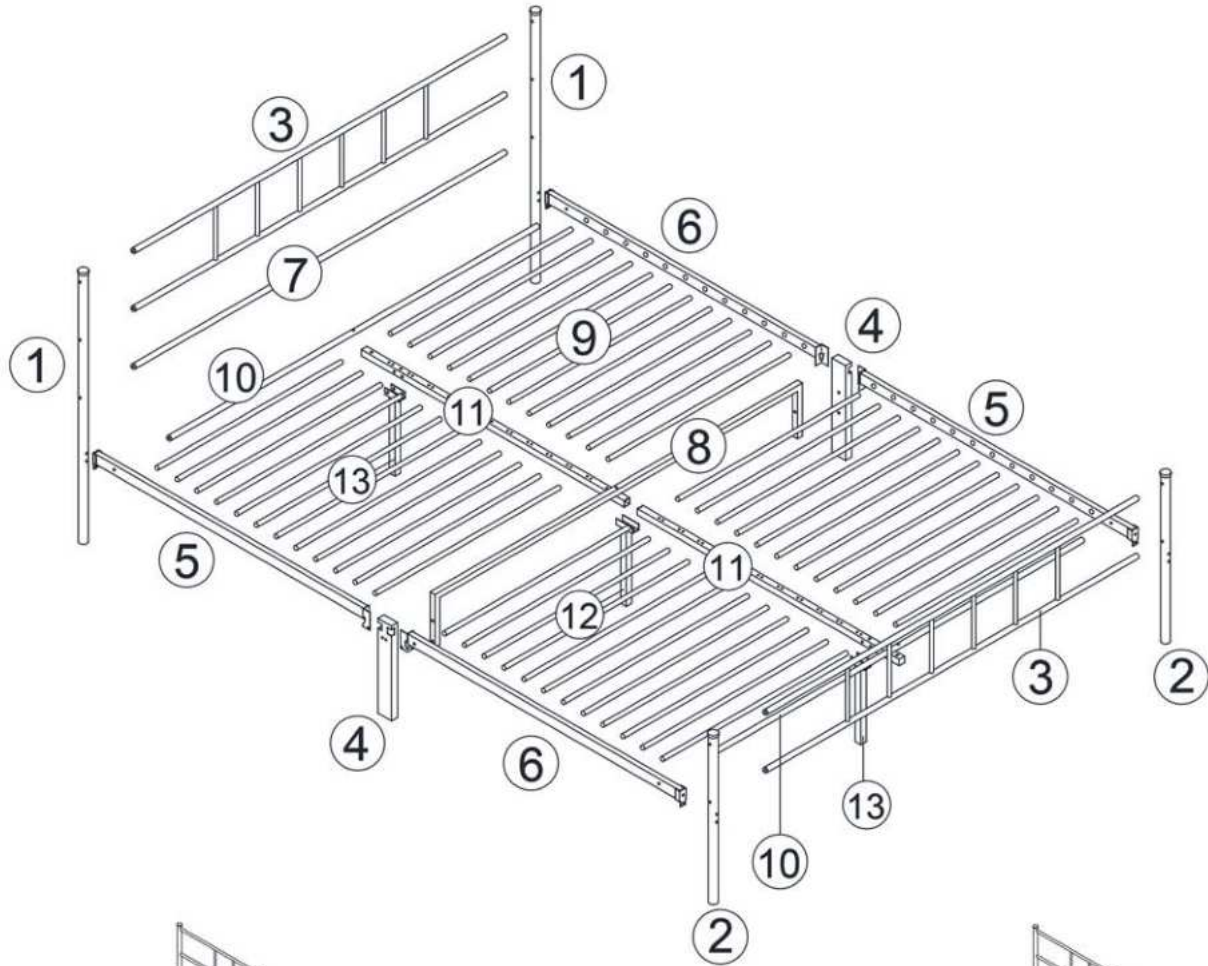   




A M8x45mm x8	B M6x60mm x13	C M6x40mm x14	D M6x15mm x2	E x18	F M8 x4
G M6 x6	H x24	I x1	J x1	K x4	

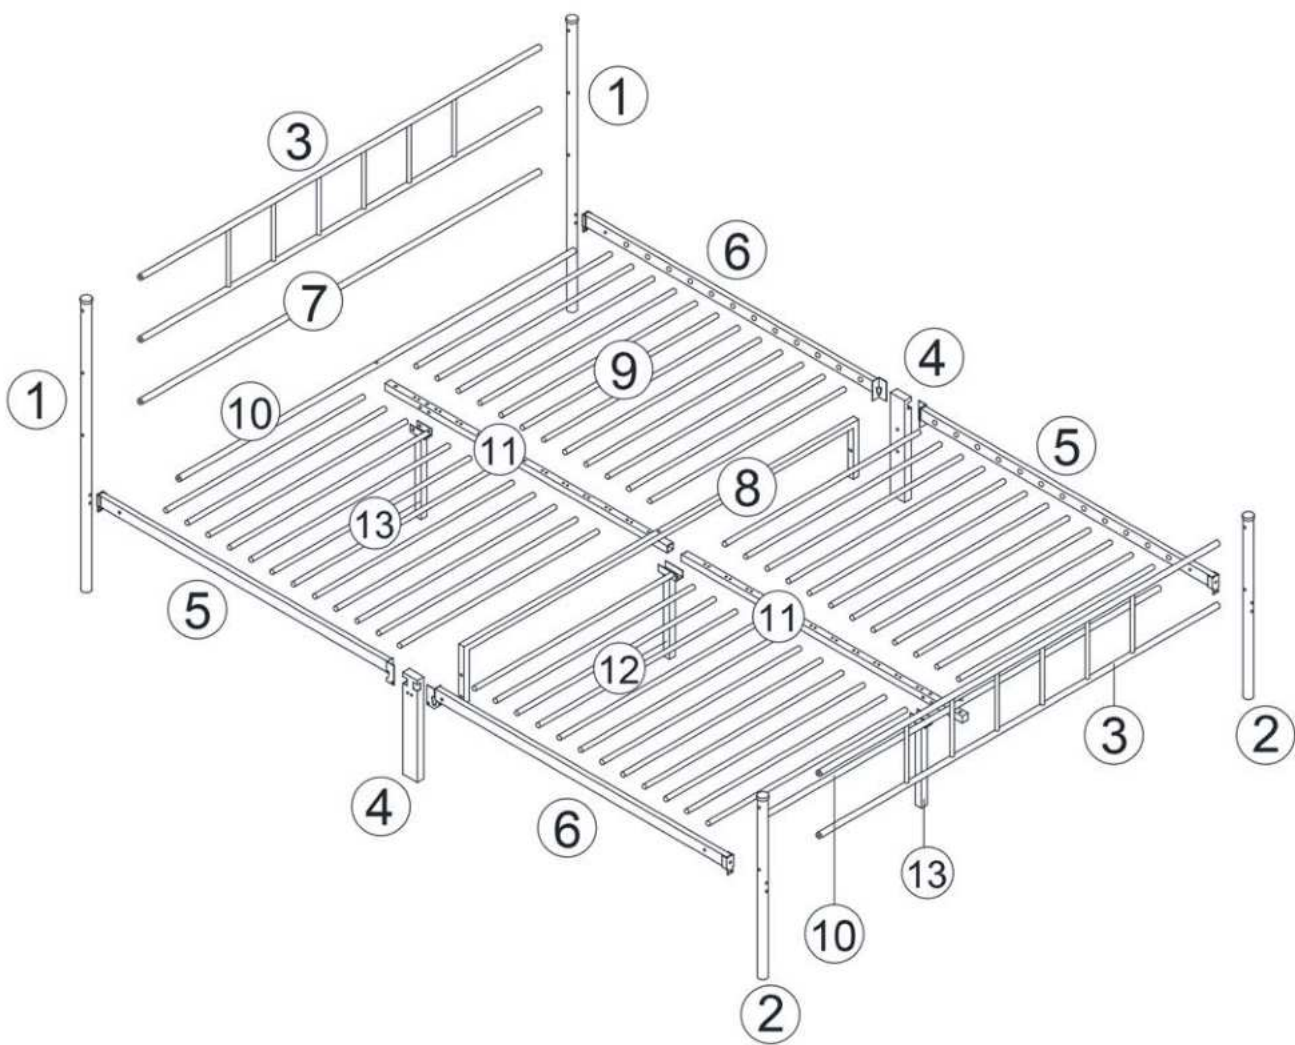 


1 x2	2 x2	3 x2	4 x2	5 x2	6 x2
7 x1	8 x1	9 x48	10 x2	11 x2	12 x1
13 x2					

 
step 1

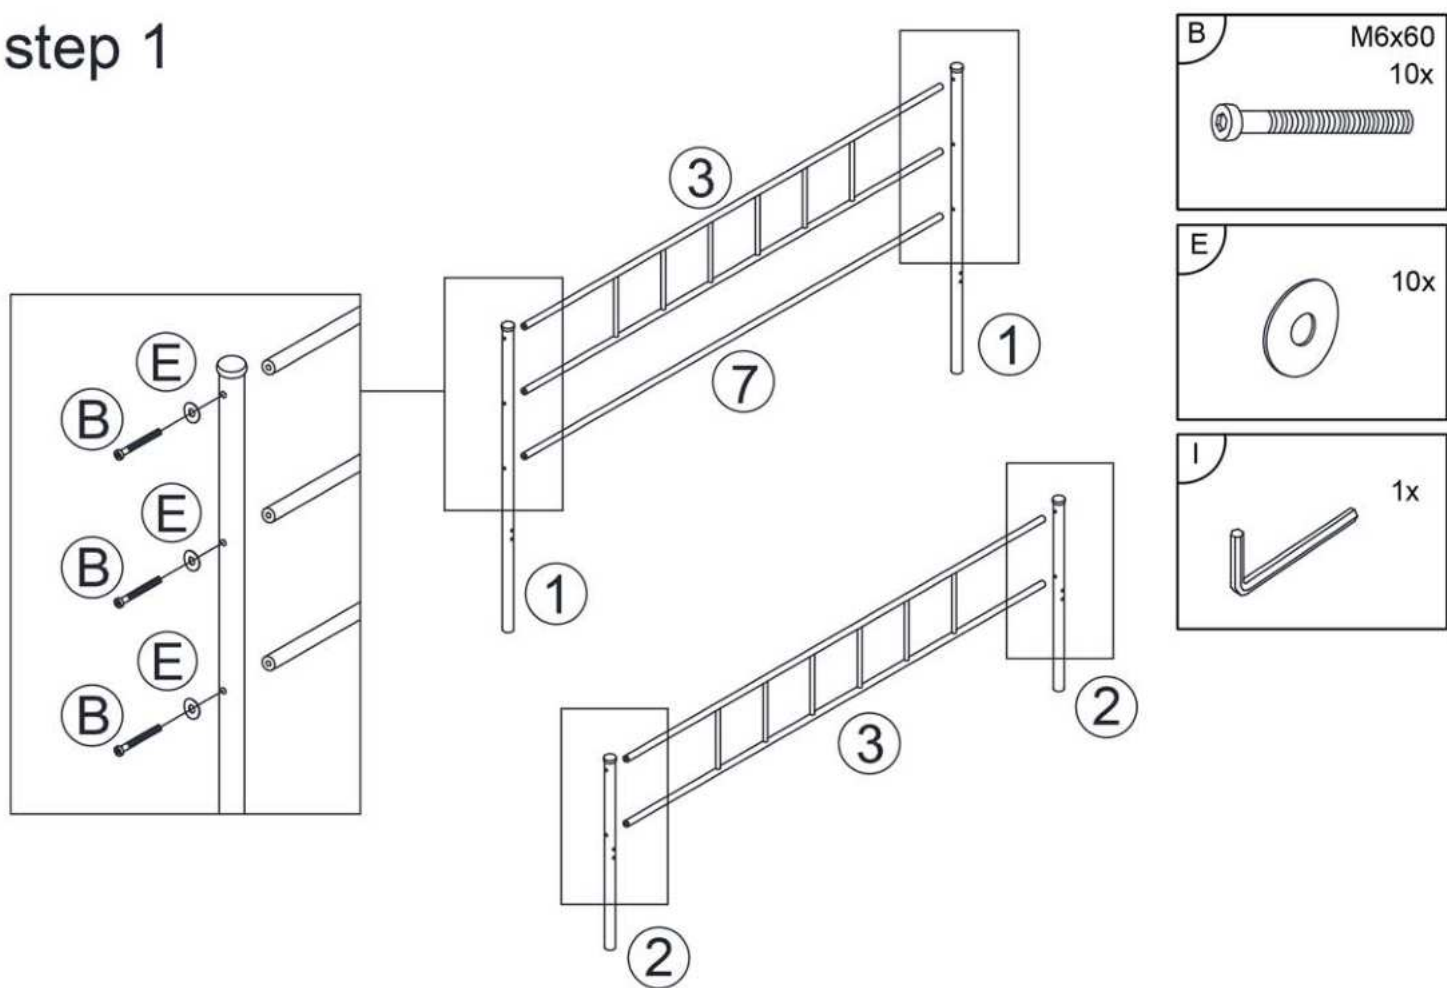

 step 2

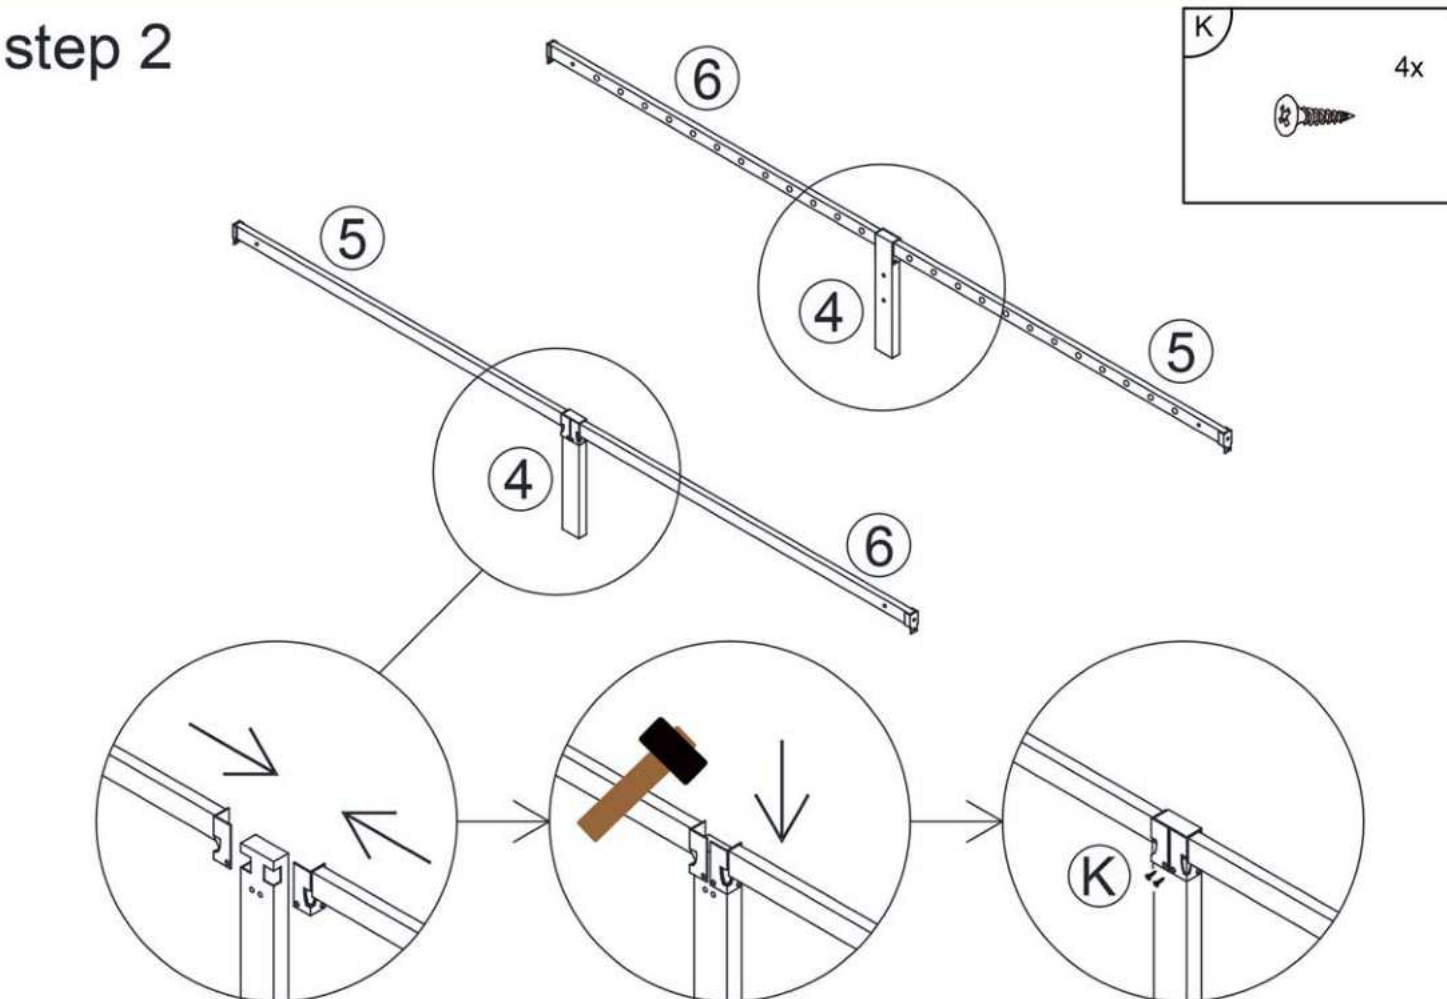

 step 3

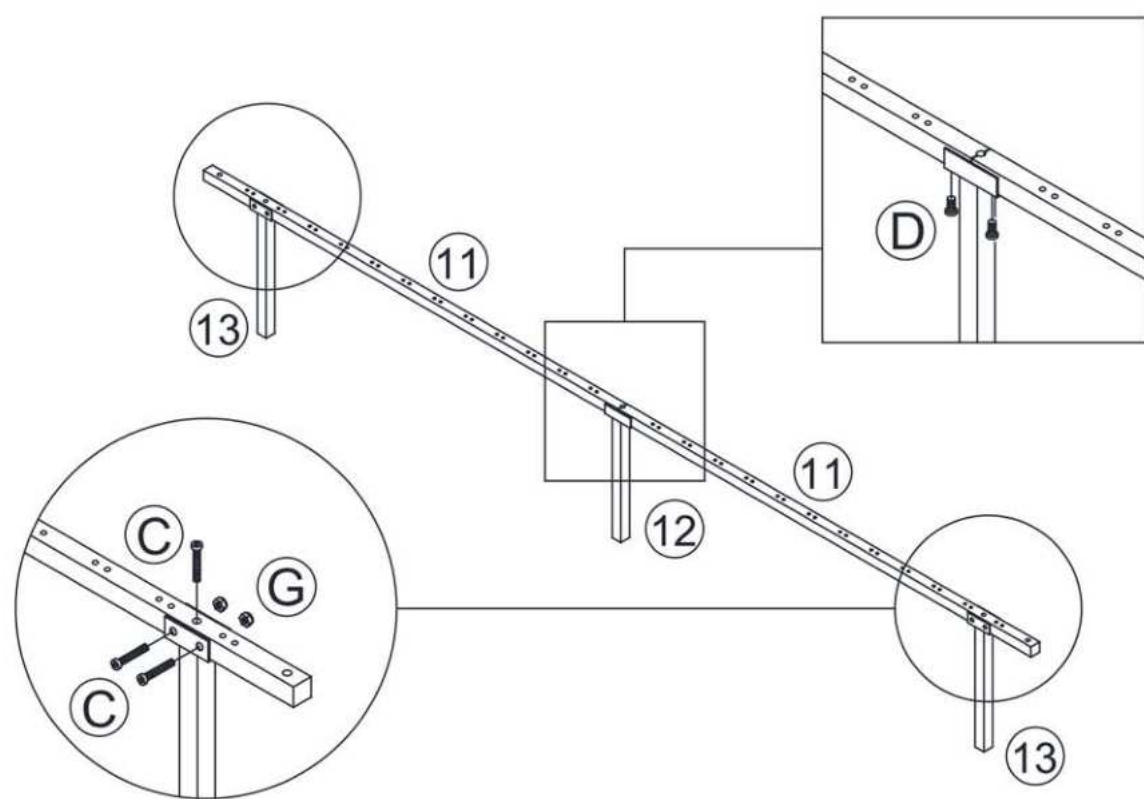

C M6x40
6x



D M6x15
2x



G M6
4x



 
I 1x



J 1x



step 4

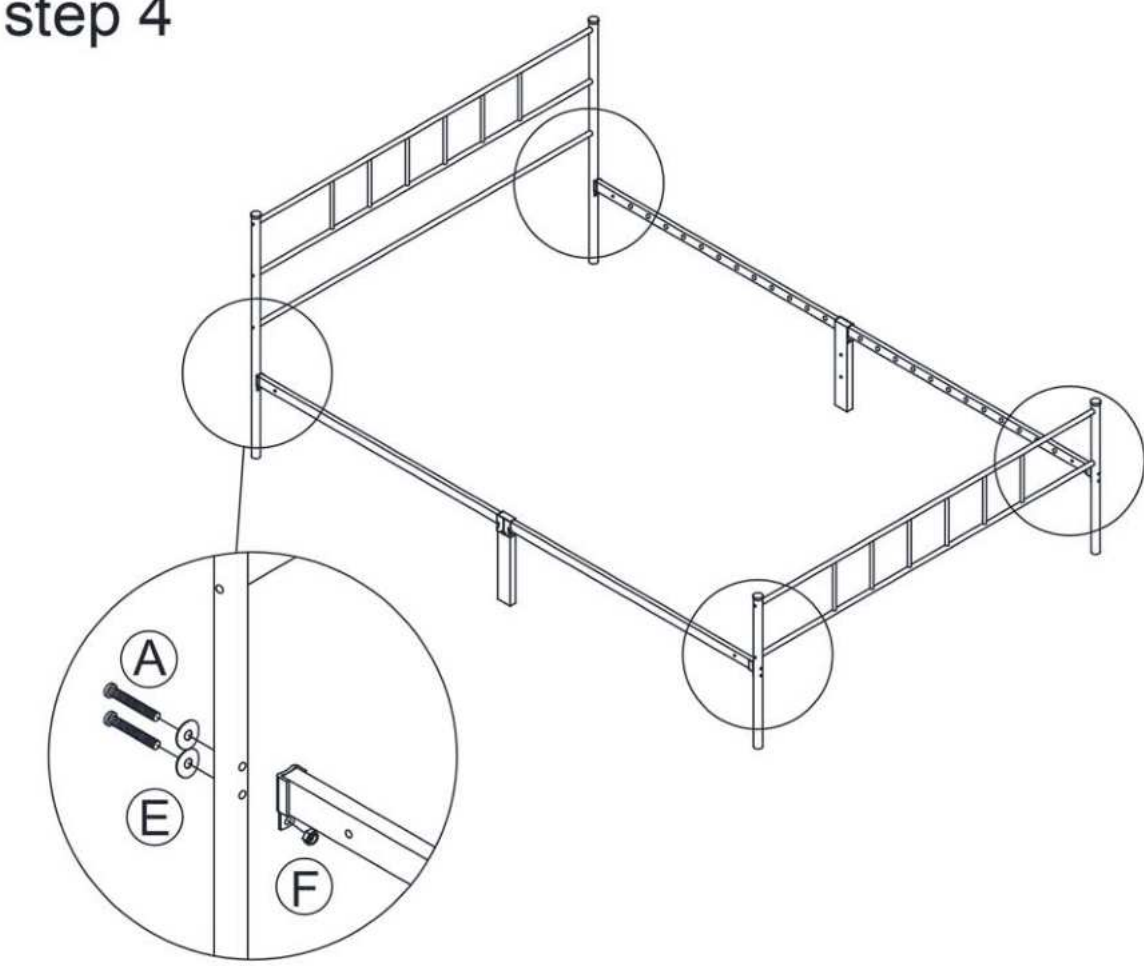

A M8x45
8x



E 8x



 
F M8
4x






I 1x








J 1x



   step 5

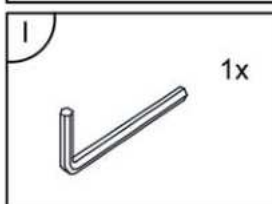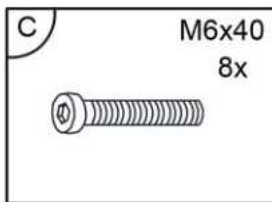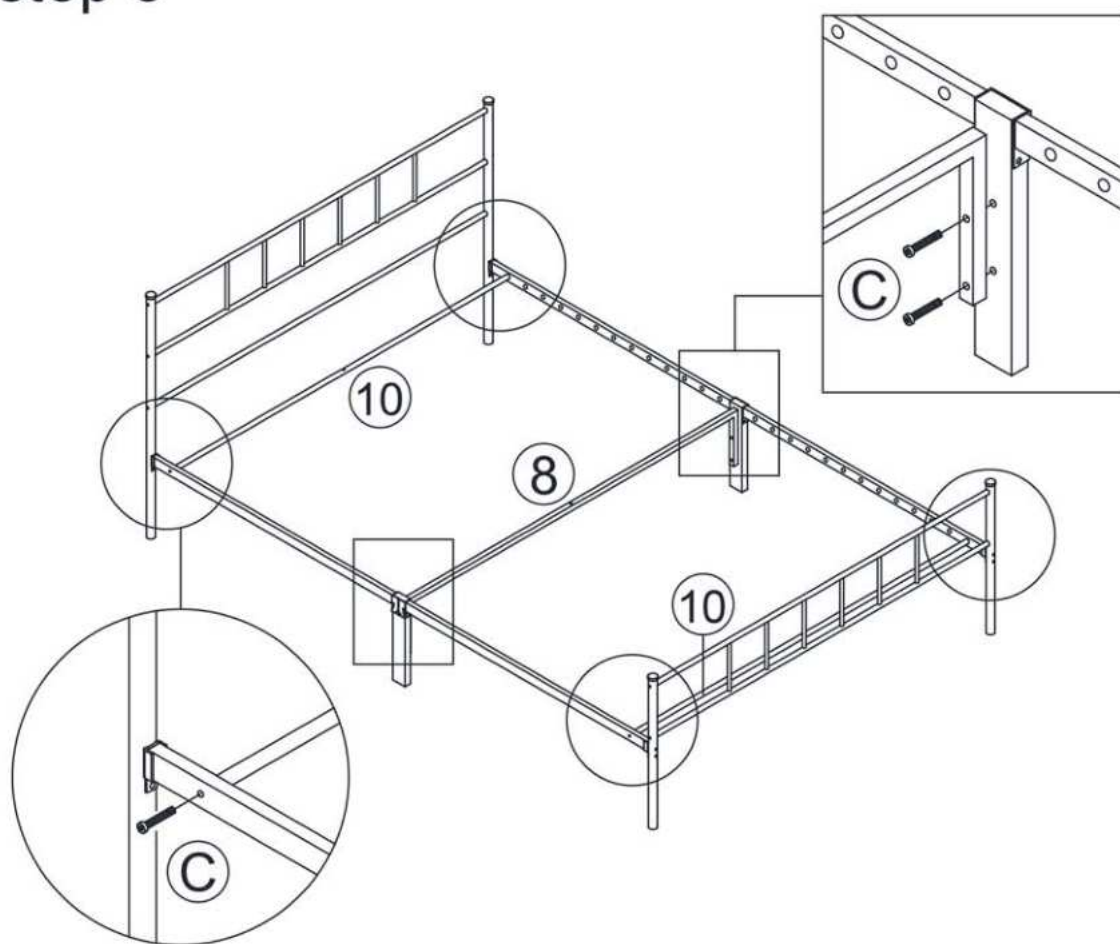

     step 6

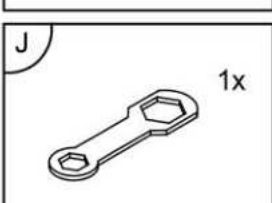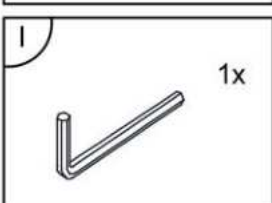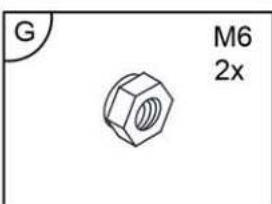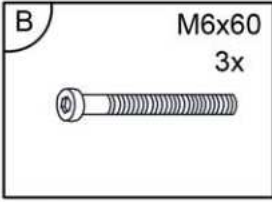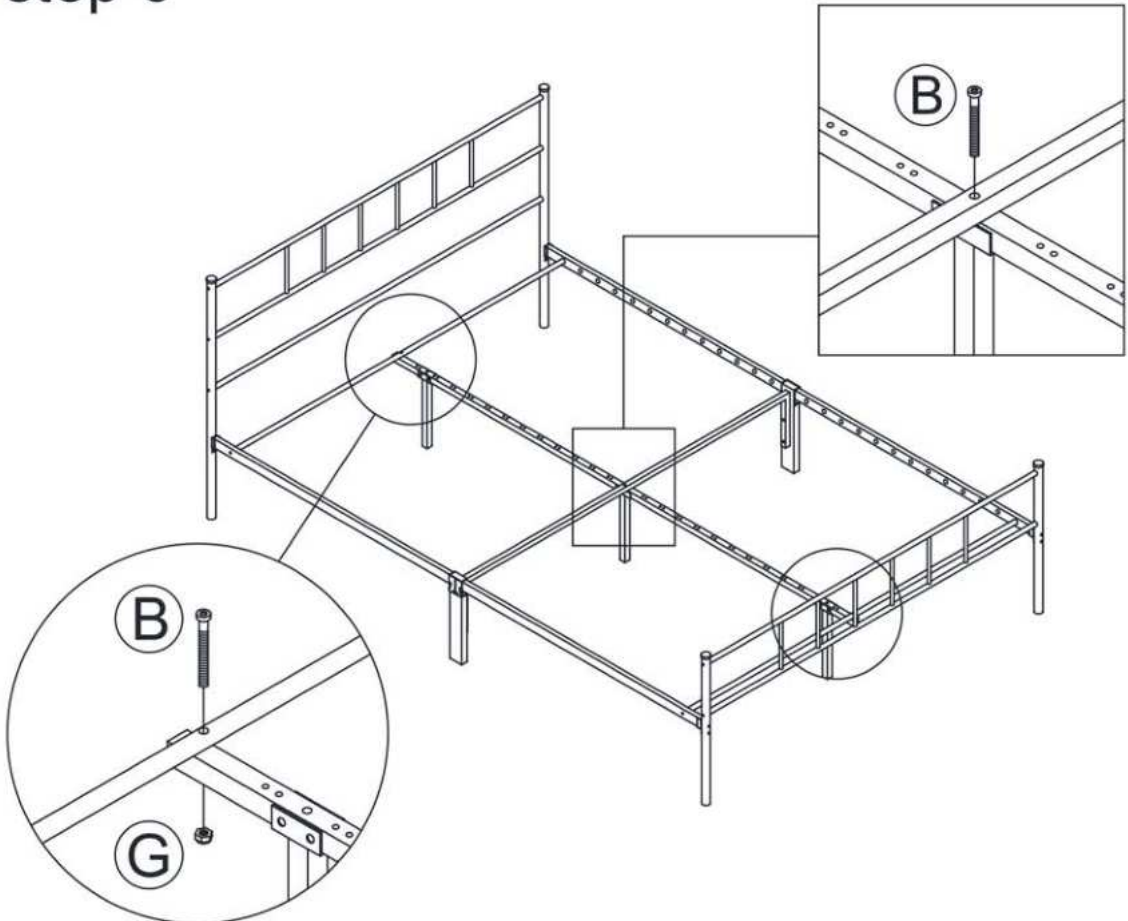

step 7

