 


BE-0281

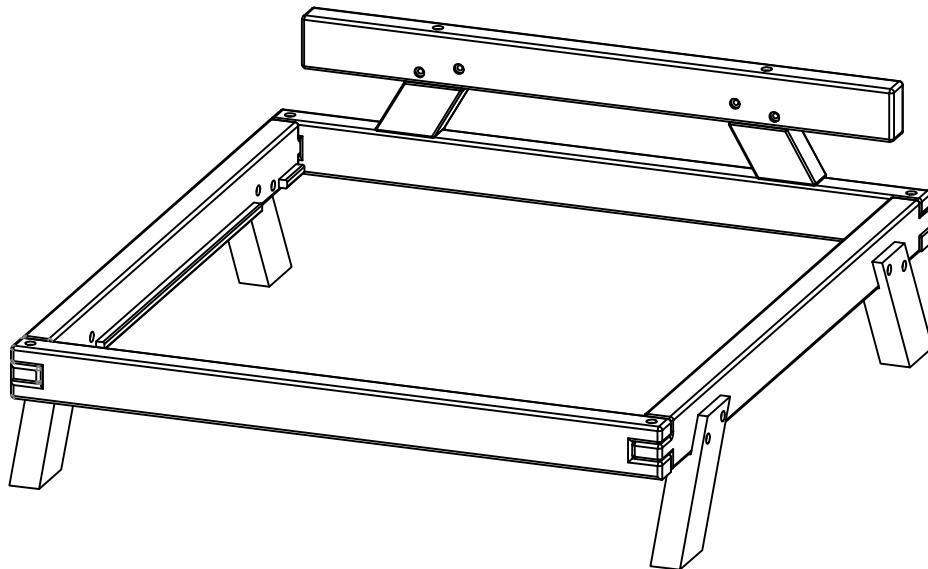

D

Montageanleitung
BE-0281

GB

Assembly instructions
BE-0281

FR

Notice de montage
BE-0281

IT

Istruzioni di montaggio
BE-0281

NL

Handleiding voor de montage
BE-0281

PL

instrukcja montazu
BE-0281

CZ

Montazni navod
BE-0281

SK

Navod na montaz
BE-0281

HU

Szerelési utmutato
BE-0281

RO

 
Instructiuni de montaj
BE-0281

 
TR

Montaj talimati
BE-0281

RU


Инструкция по монтажу
BE-0281

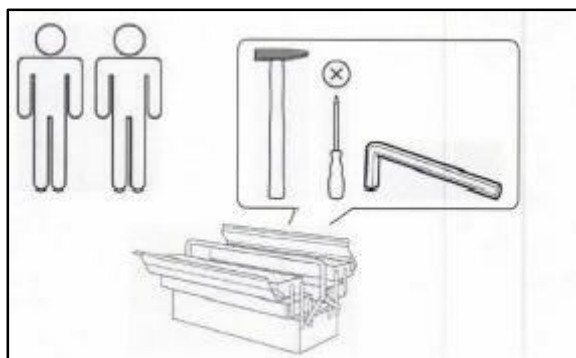




Service - Assistenza - Dienstverlening - Serwis
 Servis - Szerviz - Сèрвисная служба

Name-Nom-Nome-Naam- Nazwa-Jmeno-nazov-Nev- Denimire-Isim-Названиè	BETT	
Nr.-No.- №-Homep-Ç-Sz	BE-0276	
Typ-Type-Tip-Tipus-Tipo-Tup	Fichte	

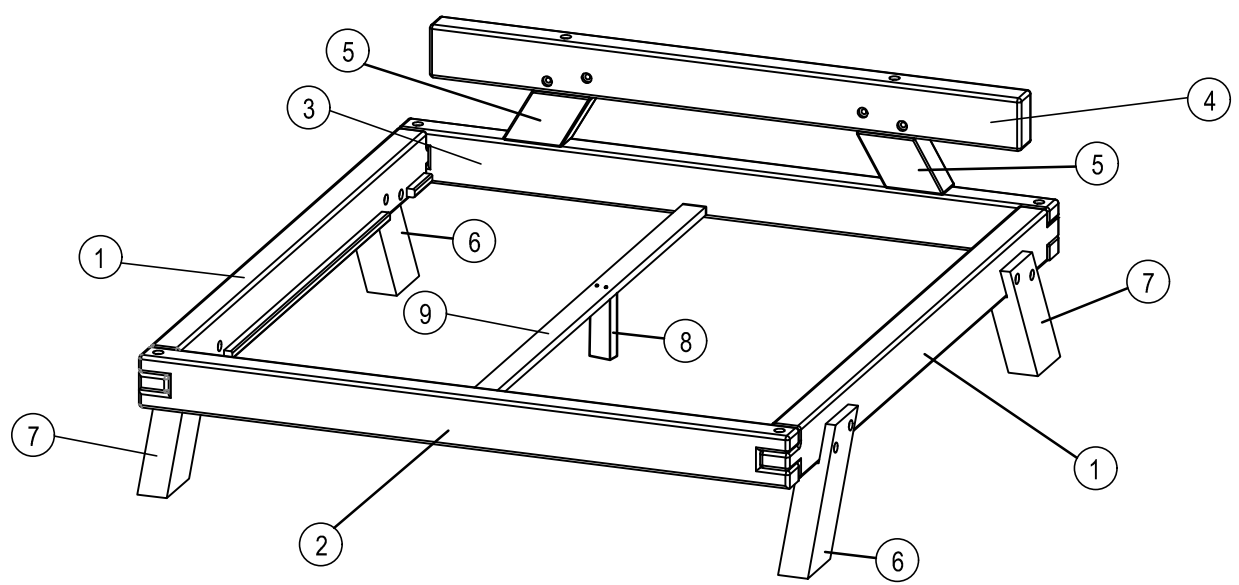 





	"19"	"13"	Ø6x70	
NJx4	x1	x1	Nx2	Mx2


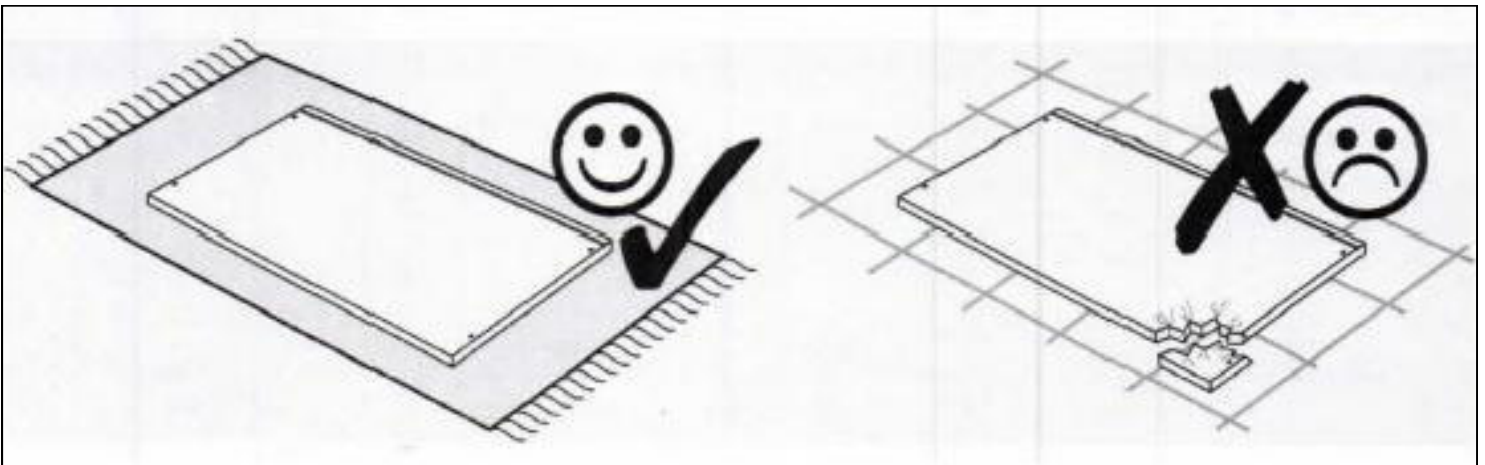 
M12x110	M12Ø25	M12	Ø10x50	M8x180	M8Ø25	M8	M12x80	M12x150	35x35x90	Ø3,5x30	
Ax8	Bx32	Cx16	Dx8	Ex4	Fx4	Gx4	Hx4	Ix4	Jx4	Kx38	Lx2



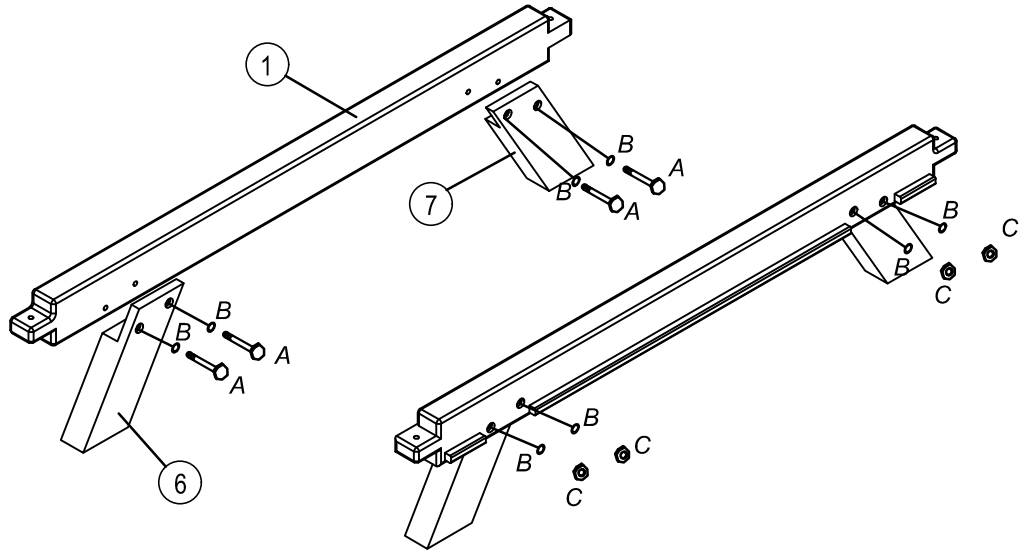 



1

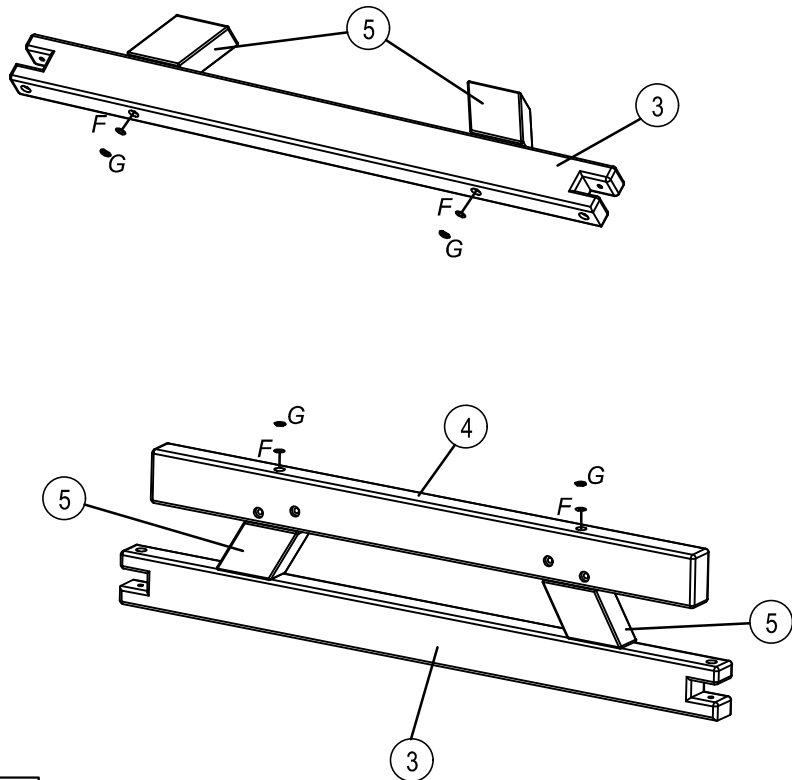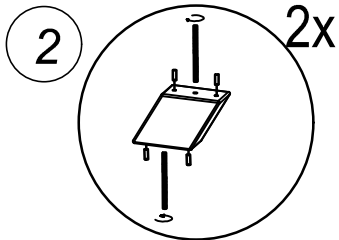  





M12x110	M12Ø25	M12
		
Ax8	Bx16	Cx8




Ø10x50	M8x180	M8Ø25	M8
			
Dx8	Ex4	Fx4	Gx4

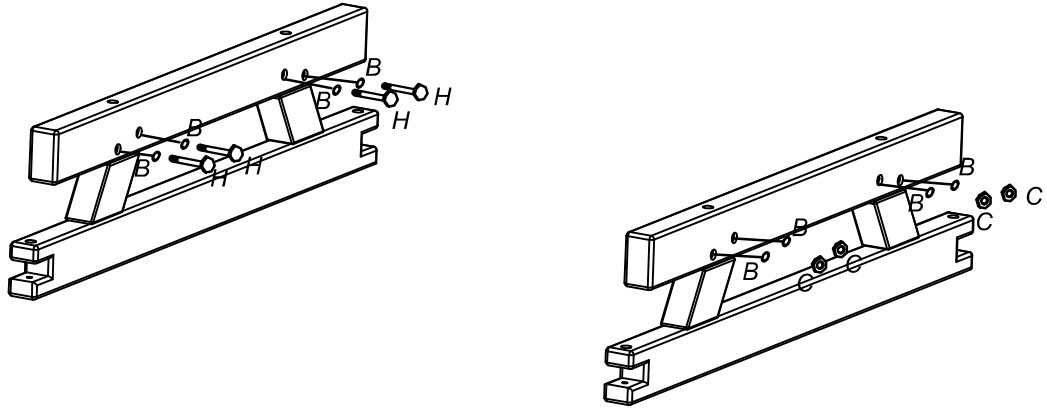 


3

 


M12x80	M12Ø25	M12
		
Hx4	Bx8	Cx4

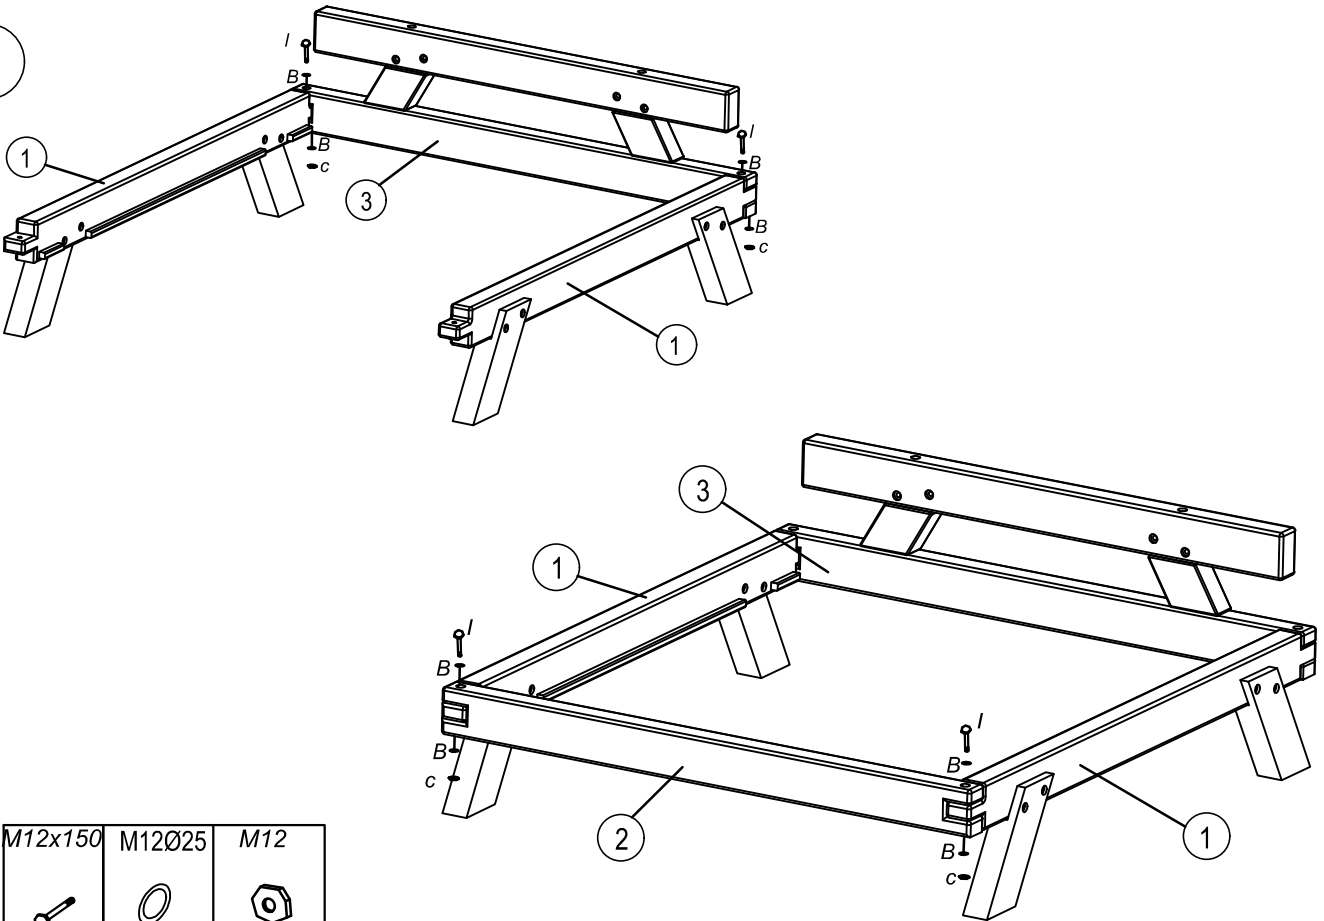 4





M12x150	M12Ø25	M12
		
Ix4	Bx8	Cx4

 5

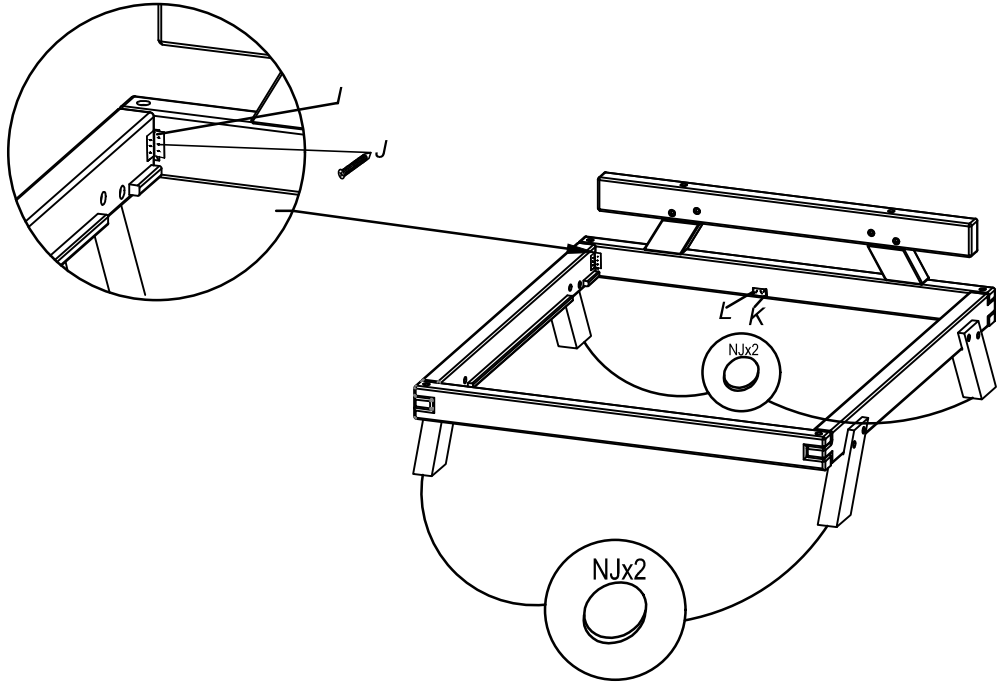

35x35x90	Ø3,5x30		
Jx4	Kx32	Lx2	NJx4

  6

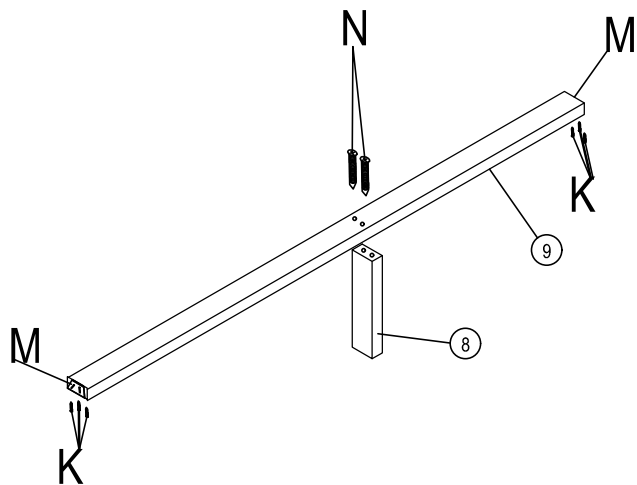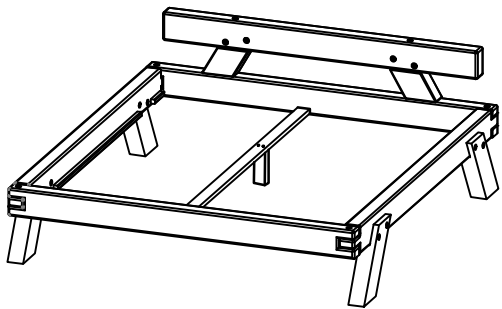

	Ø3,5x30	Ø6x70
Mx2	Kx6	Nx2