

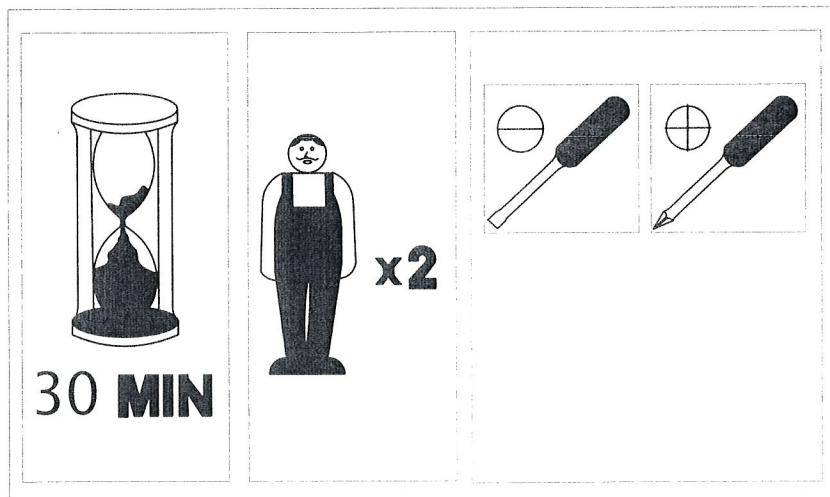


HANAU 1


- (D) Montageanleitung
<< HANAU 1 >>
- (FR) Notice de montage
<< HANAU 1 >>
- (NL) Handleiding voor de montage
<< HANAU 1 >>
- (CZ) Montážní návod
<< HANAU 1 >>
- (HU) Szerelési útmutató
<< HANAU 1 >>
- (TR) Montaj talimati
<< HANAU 1 >>
- (GB) Assembly instructions
<< HANAU 1 >>
- (IT) Istruzioni di montaggio
<< HANAU 1 >>
- (PL) Instrukcja montażu
<< HANAU 1 >>
- (SK) Návod na montáž
<< HANAU 1 >>
- (RO) Instrucțiuni de montaj
<< HANAU 1 >>
- (RU) Инструкция по монтажу
<< HANAU 1 >>

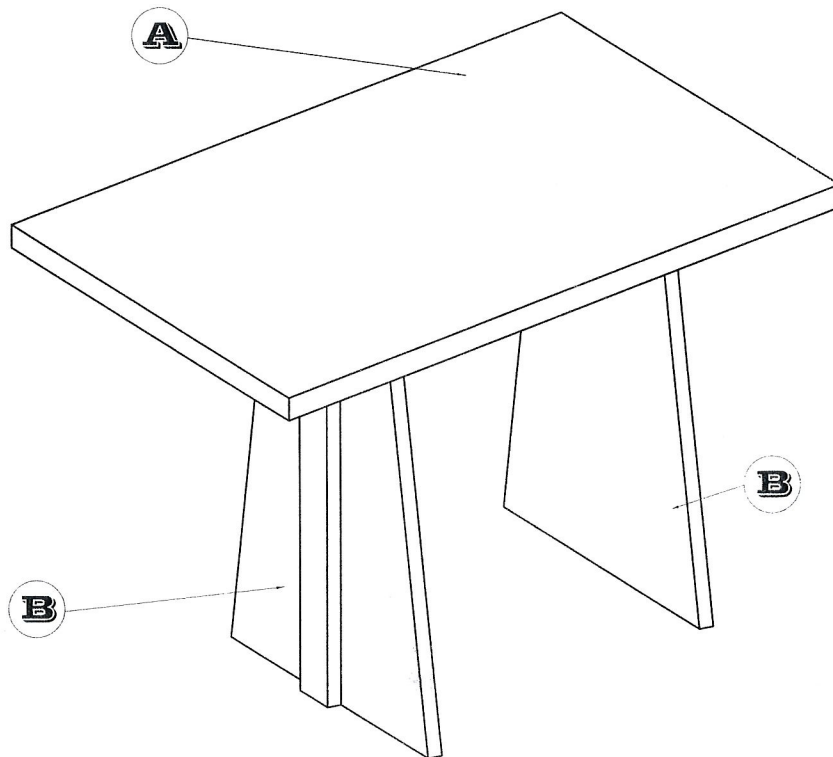


1

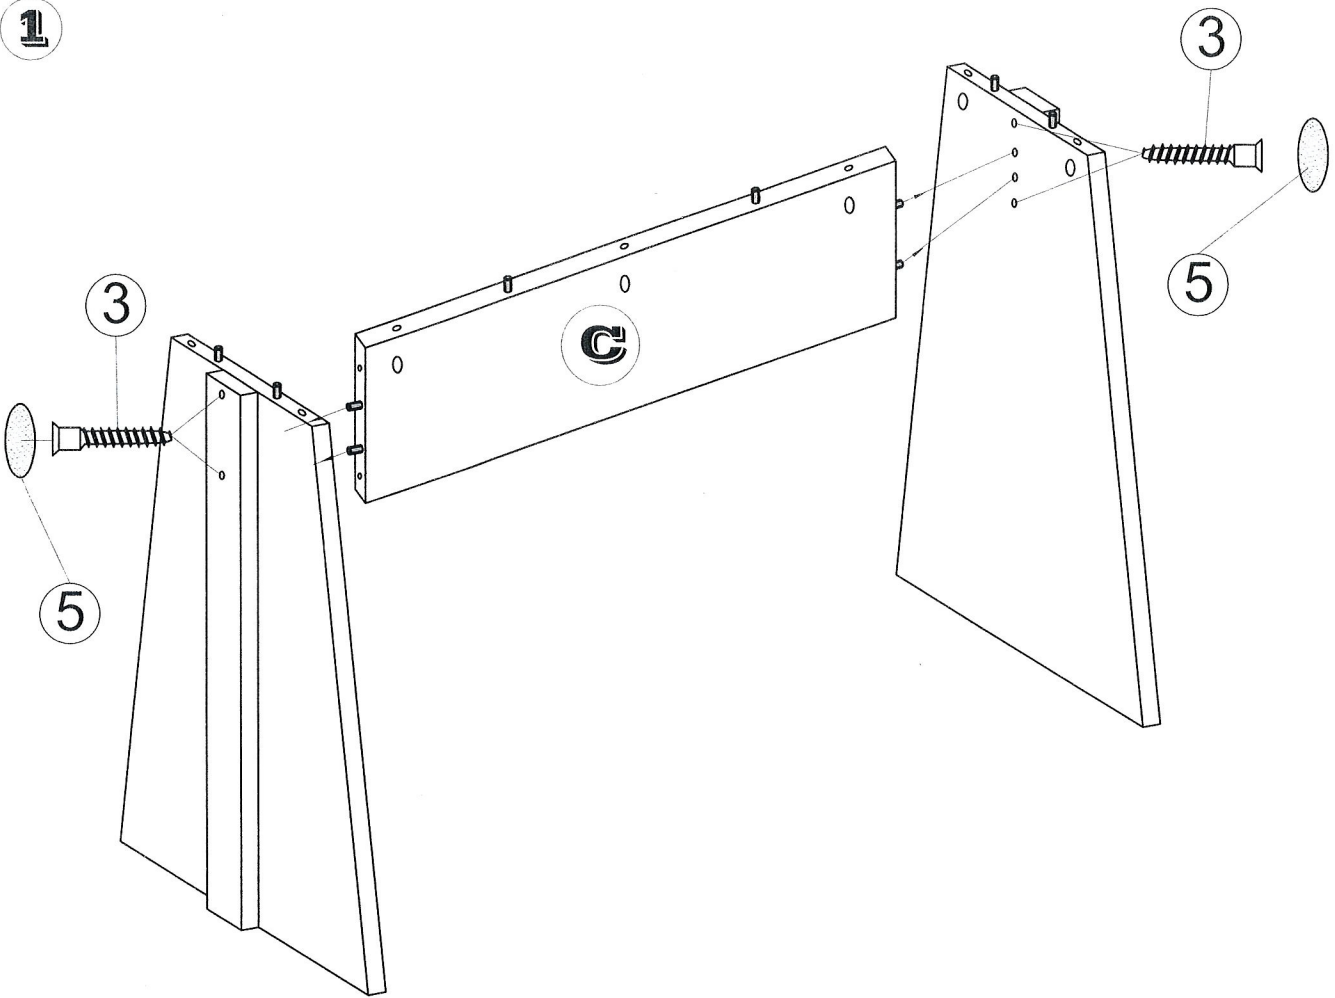


2

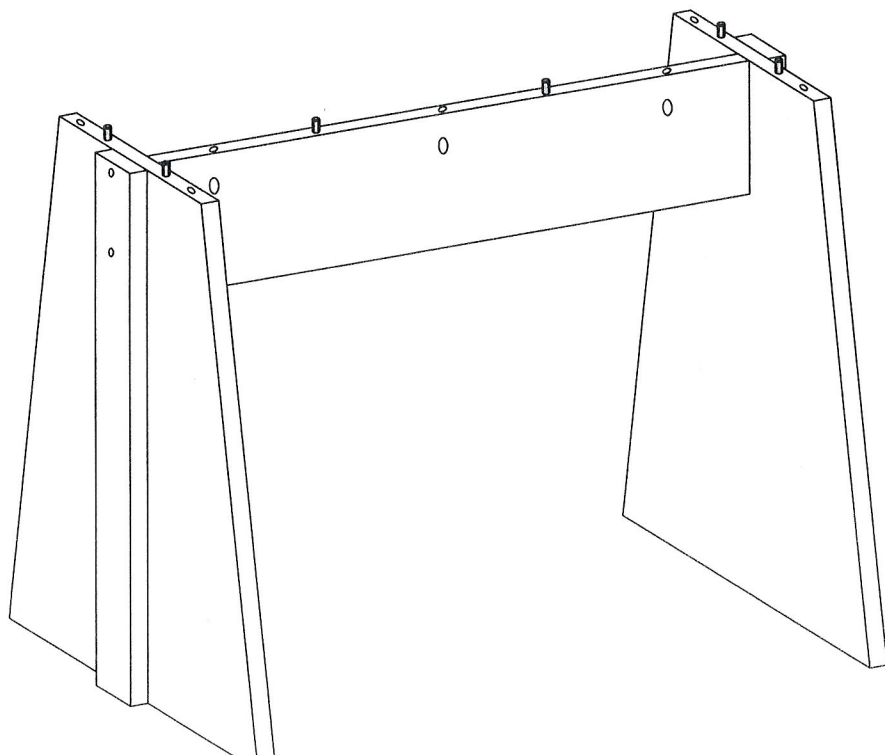

3

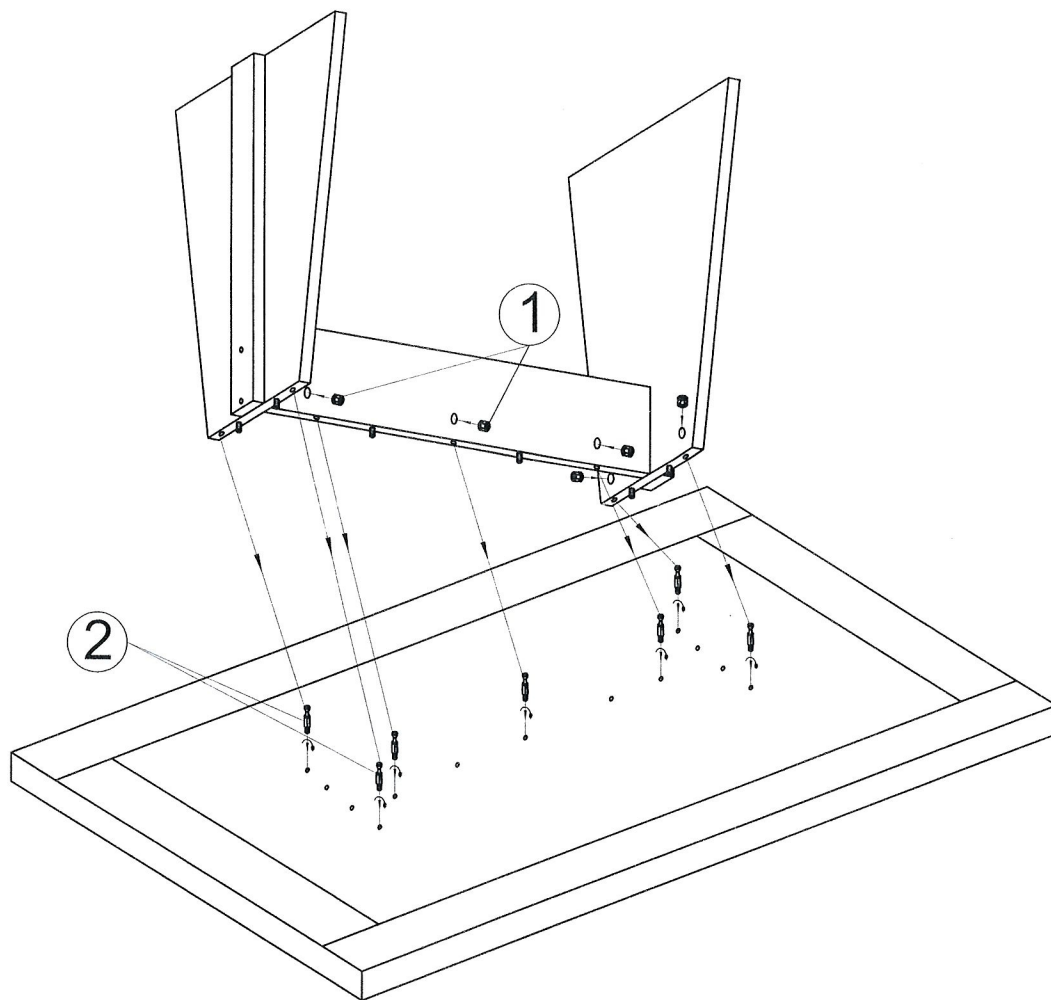


4

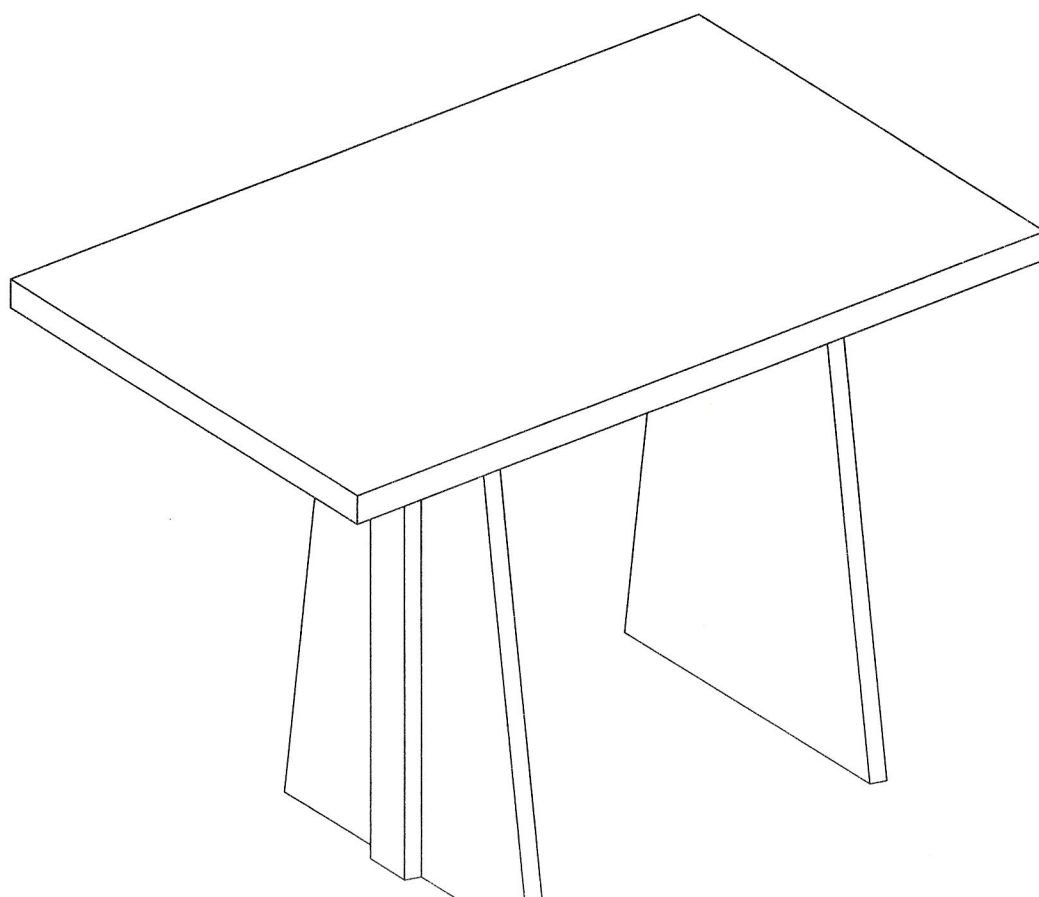

Service • Assistenza • Dienstverlening • Serwis
Servis • Szerviz • Сервисная служба

Name • Nom • Nome • Naam
 Nazwa • Jméno • Názov • Név
 Denumire • Isim • Название

HANAU 1

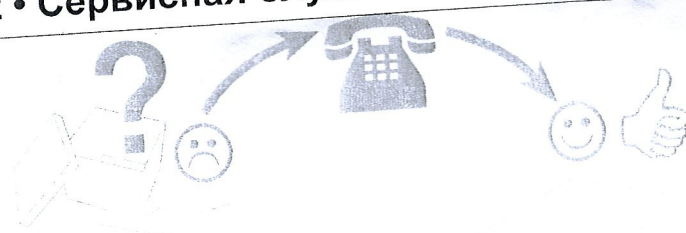






Nr. • No. • N° • Номер • Č • Sz

 14855764
33738619



Ax1 Bx2 Cx1

 ①	②	③	④	⑤
7	7	4	7	4
		7X70 mm		
				

0 10 20 30 40 50 60 70 80 90 100

