



- | | | | |
|----|-----------------------------|----|-------------------------|
| Ⓓ | Montageanleitung | ⒼⒷ | Assembly instructions |
| ⒻⓇ | Notice de montage | ⒾⓉ | Istruzioni di montaggio |
| ⓃⓁ | Handleiding voor de montage | ⓅⓁ | Instrukcja montażu |
| ⒸⓏ | Montážní návod | ⓈⓀ | Návod na montáž |
| ⒽⓊ | Szerelési útmutató | Ⓡⓞ | Instrucțiuni de montaj |
| ⓉⓇ | Montaj talimatı | ⓇⓊ | Инструкция по монтажу |


Ausgabe: 20230217

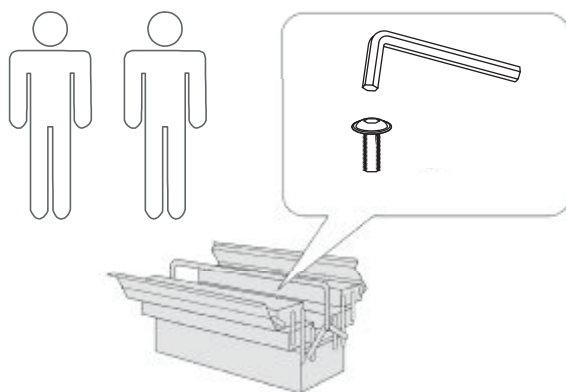


0
10
20
30
40
50
60
70
80
90
100
110
120
130
140
150
160
170
180
190
200


Service • Assistenza • Dienstverlening • Serwis Servis • Szerviz • Сервисная служба		
Name • Nom • Nome • Naam Nazwa • Jméno • Názov • Név Denumire • Isim • Название		
Nr. • No. • N° • Номер • Č • Sz	6166 8438	
Typ • Type • Tip • Típus • Tipo Тип		

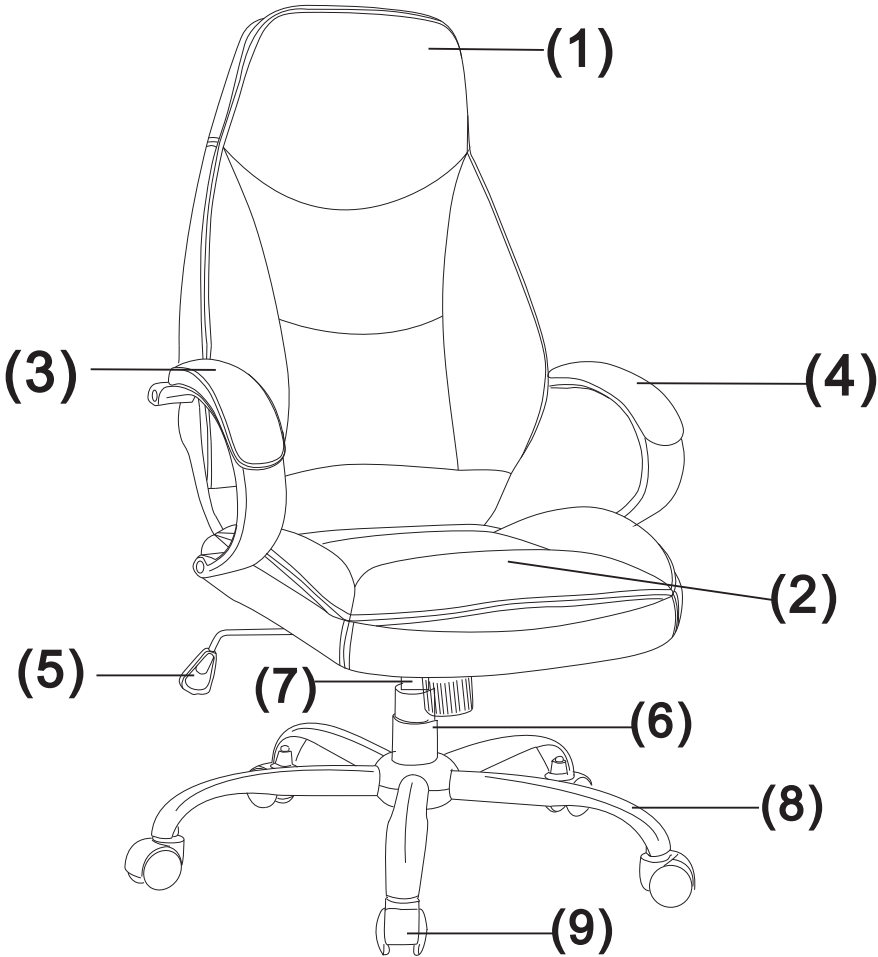

 
A M6X20MM  X4	B M6X30MM  X4	C M8X45MM  X4	D 6X18X1.5MM  X8	E M6  X1
F  X4				

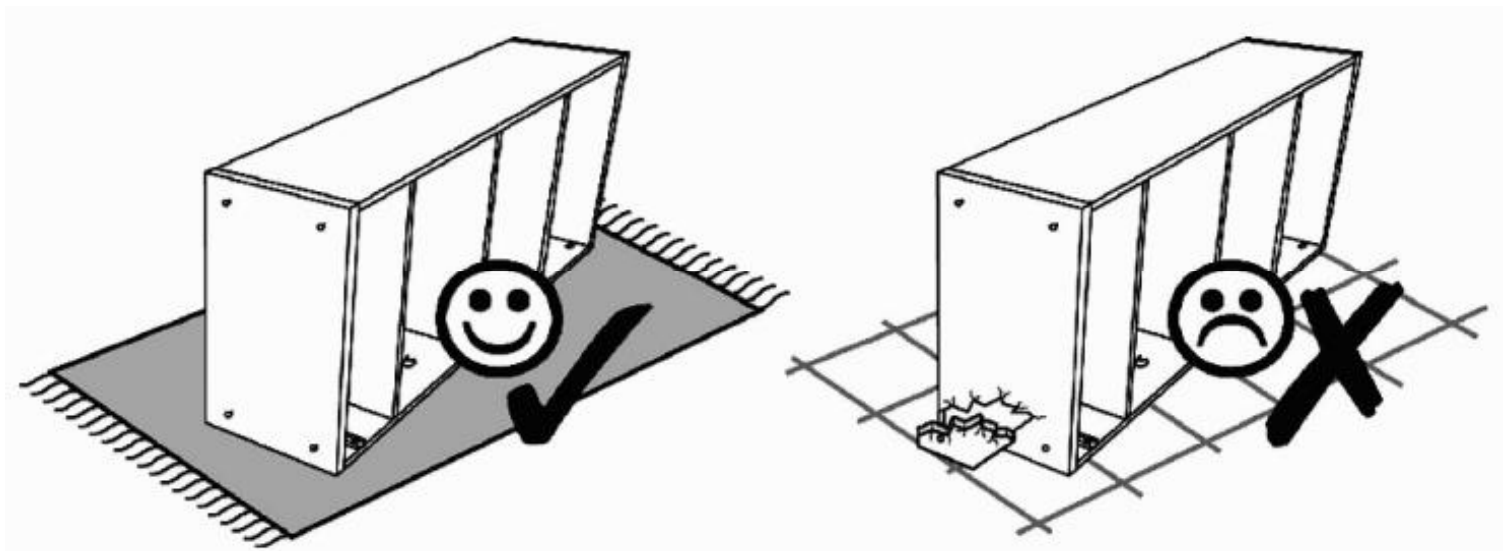


1

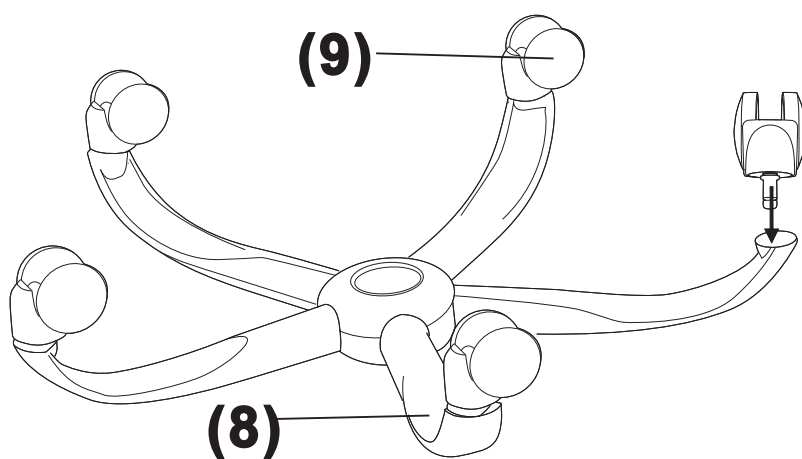

2

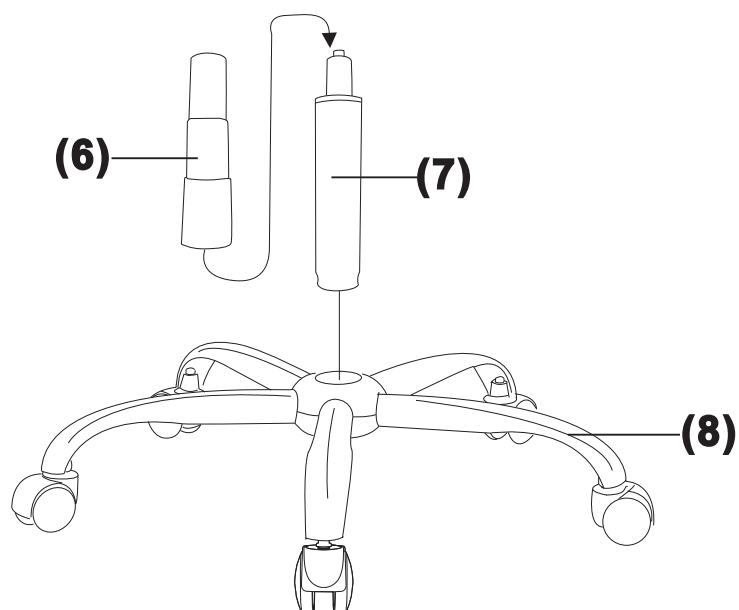


3

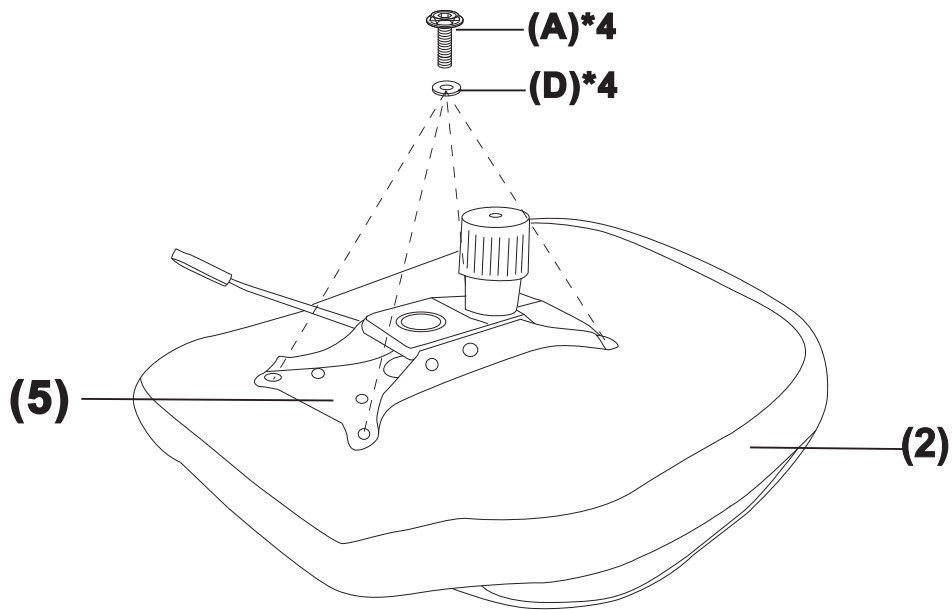


A	M6X20MM		X4
D	6X18X1.5MM		X4
E	M6		X1

4

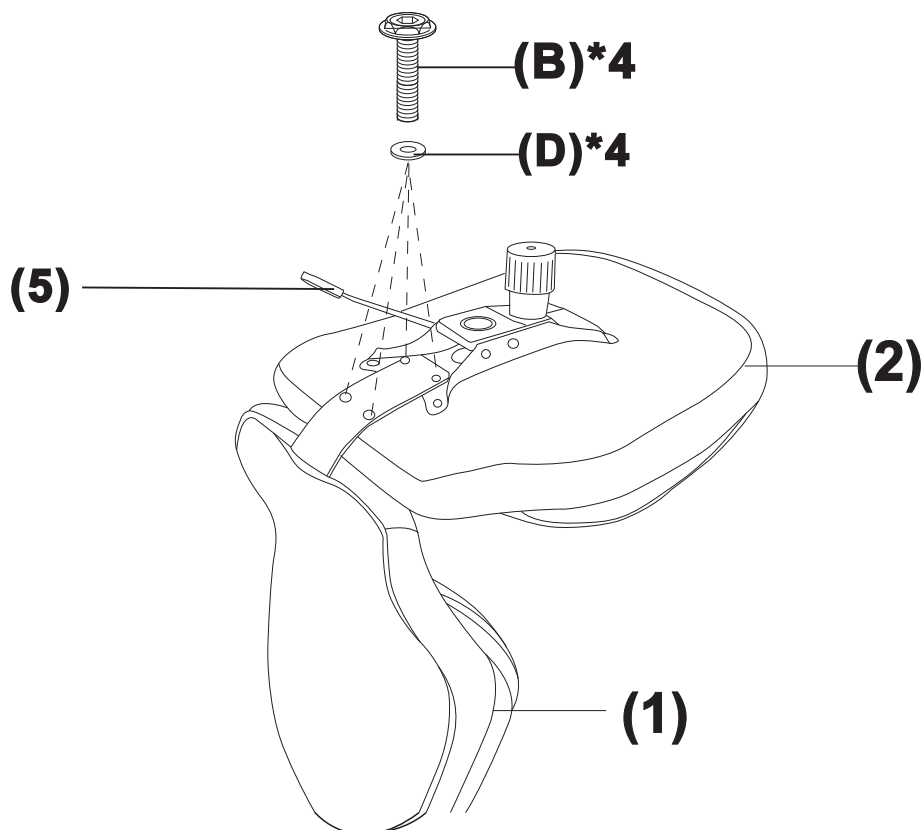


B	M6X30MM		X4
D	6X18X1.5MM		X4
E	M6		X1

5

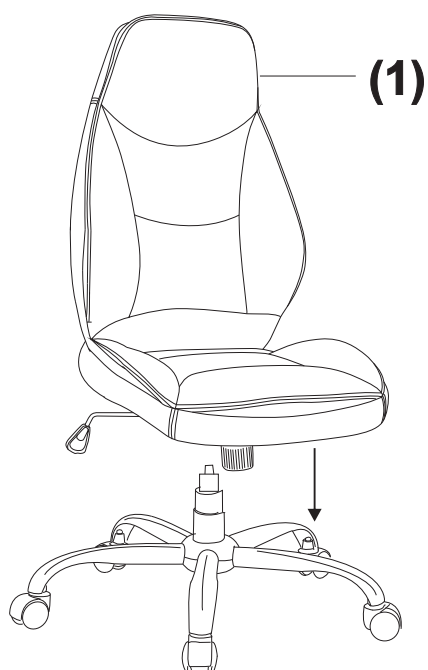

6

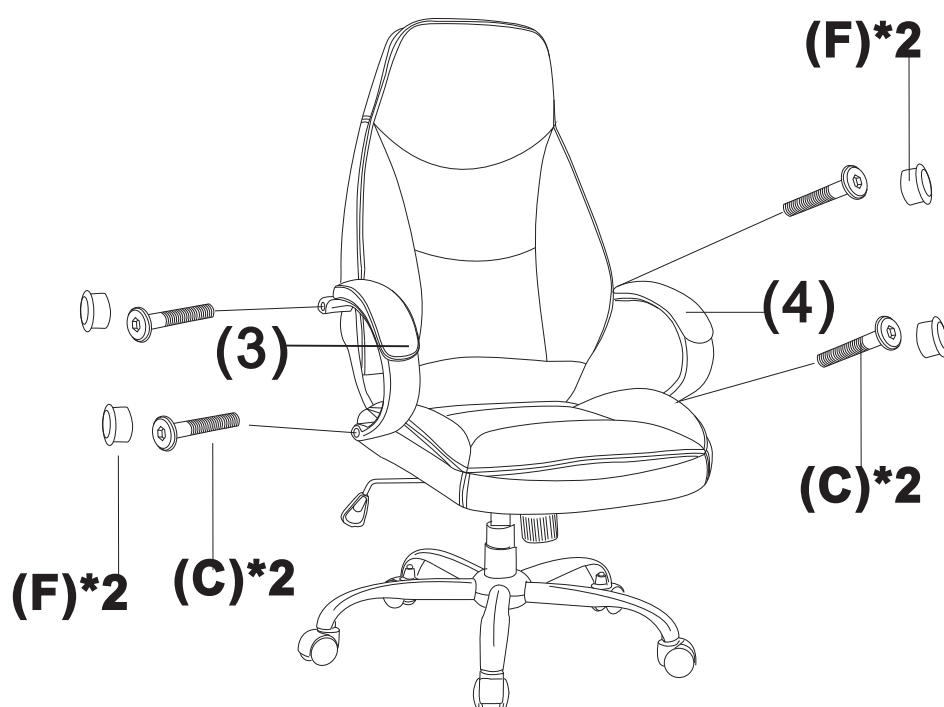


C M8X45MM
X4

E M6
X1

F
X4

7

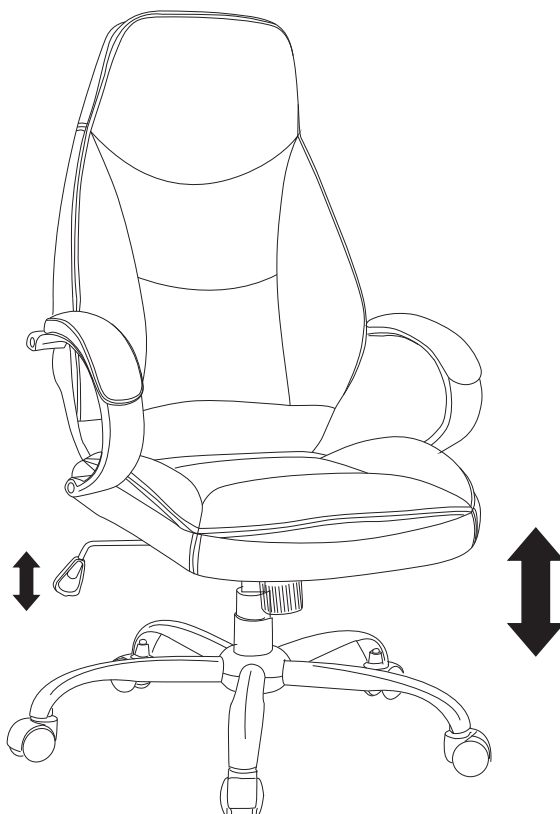

8

