Reinigung des Milchsystems

Das Milchsystem Ihres Geräts sorgt dafür, dass Sie Milchschaum für Ihren Kaffee zubereiten können. Damit es reibungslos funktioniert und immer stabilen Milchschaum produziert, ist eine tägliche Reinigung des Systems erforderlich.

Für zusätzliche Informationen zur Reinigung, Pflege und zu den Sicherheitshinweisen, schauen Sie in die vollständige Bedienungsanleitung.

Reinigungsintervalle aller Komponenten

	Täglich	Wöchentlich	Bei Bedarf
Gehäuse		X	X
Wassertank		X	X
Brüheinheit		X	X
Milchsystem	X		X
Tresterbehälter, Restwasserschale, Abtropfschale	X		X

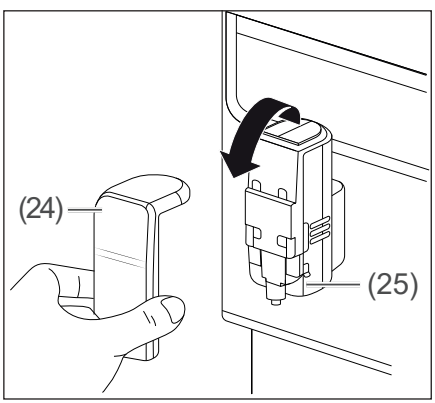

1. Nehmen Sie die Abdeckung (24) vom Milchschäumer (25) ab.

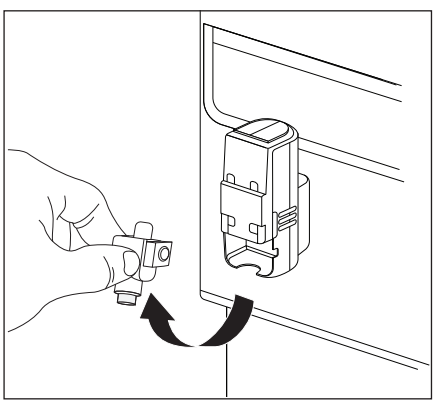

2. Entfernen Sie den Milchschäumer.

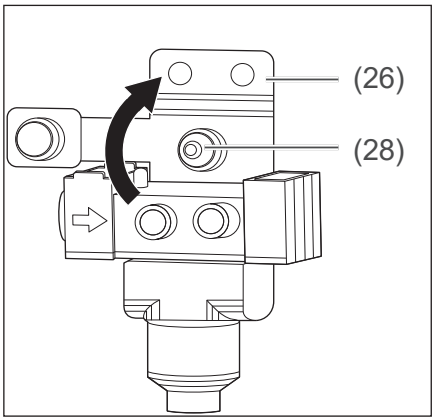

3. Falten Sie die Gummierung (26) des Milchschäumers nach oben.

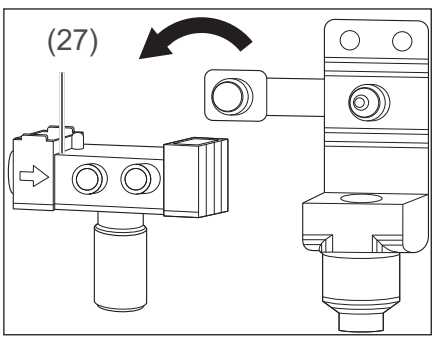

4. Entfernen Sie das Kupplungsstück (27) aus dem Milchschäumer.
5. Reinigen Sie gegebenenfalls die Bohrung (28) im Milchschäumer mit der mitgelieferten Nadel.
6. Spülen Sie die einzelnen Teile mit klarem Wasser ab.
7. Führen Sie das Kupplungsstück wieder in den Milchschäumer ein. Setzen Sie den Milchschäumer und die Abdeckung in das Gerät ein.

Milchbehälter und Milchschlauch reinigen

1. Nehmen Sie den Saugschlauch (21) und das Kupplungsstück (19) vom Milchbehälter ab.
2. Spülen Sie den Milchbehälter (20) und die einzelnen Teile mit sauberem Wasser.
3. Falls erforderlich: Reinigen Sie die Öffnungen des Milchschlauchs (22) mit einer Nadel oder den Borsten einer Bürste.
4. Füllen Sie den Milchbehälter mit Wasser, schließen Sie ihn an das Gerät an und drücken Sie die Taste (15) zweimal. Sie können den Reinigungsprozess abbrechen, indem Sie erneut auf die Taste drücken.

Cleaning the milk system

The milk system of your appliance ensures that you can prepare milk foam for your coffee. To ensure that it works smoothly and always produces stable milk foam, the system must be cleaned daily. For additional information on cleaning, care and safety instructions, please refer to the full user manual.

Cleaning intervals for all components

	Daily	Weekly	When required
Housing		X	X
Water tank		X	X
Brewing unit		X	X
Milk system	X		X
Coffee grounds container, residual water tray, drip tray	X		X

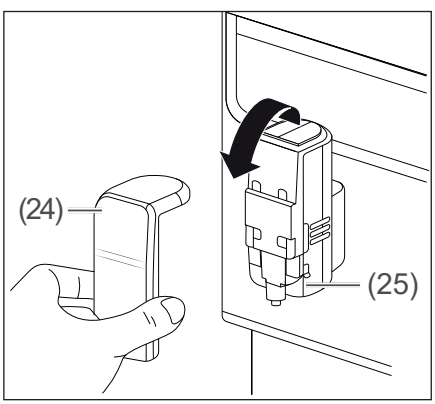

1. Remove the cover (24) from the milk frother (25).

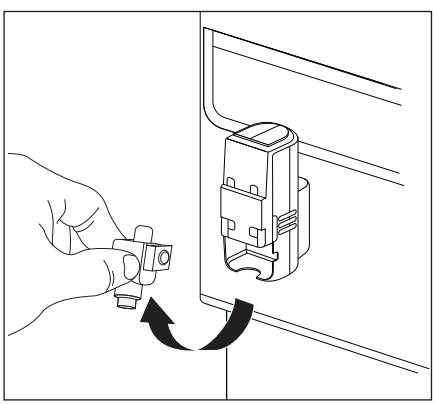

2. Remove the milk frother.

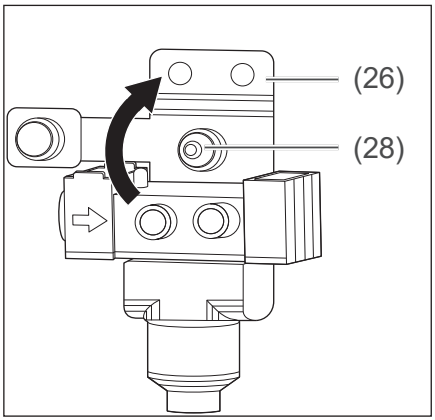

3. Fold the rubber lining (26) of the milk frother upwards.

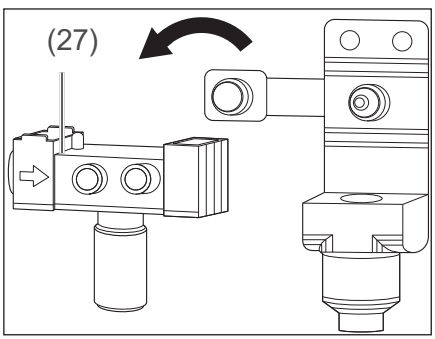

4. Remove the coupling piece (27) from the milk frother.
5. If necessary, clean the hole (28) in the milk frother with the push needle supplied.
6. Rinse the individual parts with clean water.
7. Reinsert the coupling piece into the milk frother. Replace the milk frother and the cover in the appliance.

Cleaning the milk container and milk pipe

1. Remove the suction pipe (21) and the coupling piece (19) from the milk container.
2. Rinse the milk container (20) and the individual parts with clean water.
3. If necessary: Clean the openings of the milk tube (22) with a needle or the bristles of a brush.
4. Fill the milk container with water, connect it to the appliance and press the button (15) twice.
   You can cancel the cleaning process by pressing the button again.