

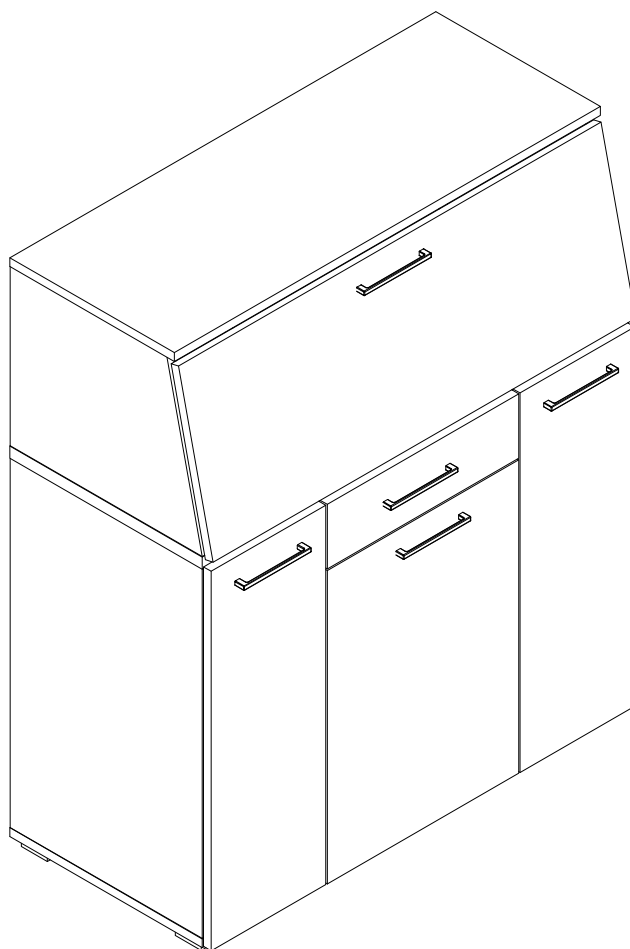
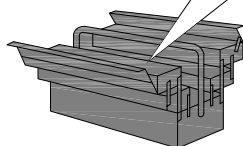



Art. Nr. 3282 7411,6654 7723

LKZ 41164

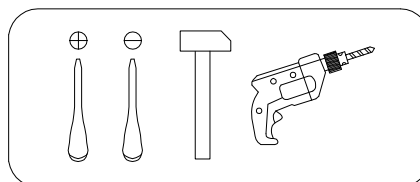

- | | |
|----------------------------------|------------------------------|
| (D) Montageanleitung | (GB) Assembly instructions |
| (FR) Notice de montage | (IT) Istruzioni di montaggio |
| (NL) Handleiding voor de montage | (PL) Instrukcja montazu |
| (CZ) Montážní návod | (SK) Návod na montáž |
| (HU) Szerelési útmutató | (RO) Instrukțiuni de montaj |
| (TR) Montaj talimati | (RU) Инструкция по монтажу |

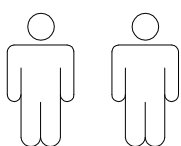

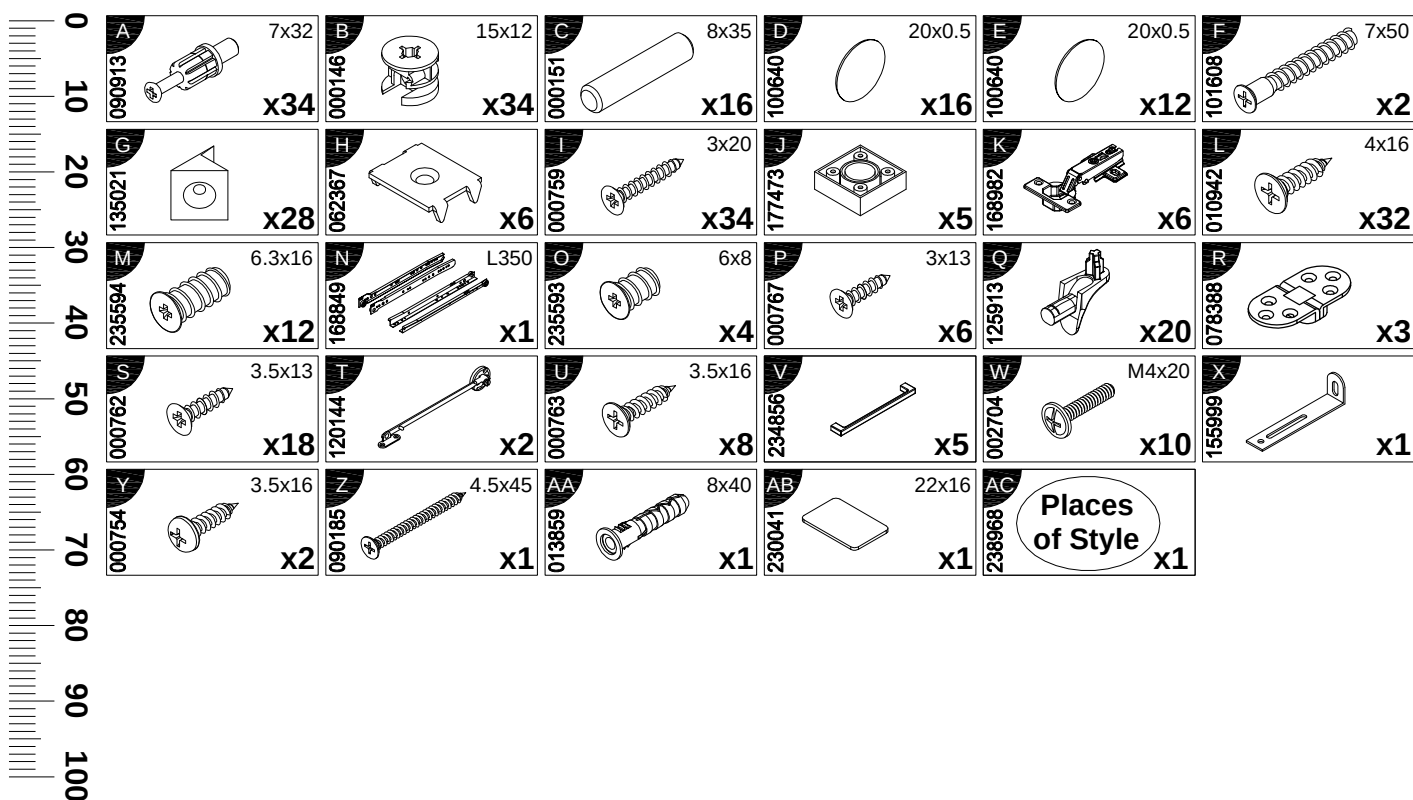




N	Size/MaB (mm)	Qty	✓	N	Size/MaB (mm)	Qty	✓
1	323x399x16	1		14	886x400x16	1	
2	323x399x16	1		15	564x398x16	1	
3	665x399x16	1		16	683x238x16	1	
4	665x399x16	1		17	683x238x16	1	
5	350x75x16	1		18	886x342x16	1	
6	350x75x16	1		19	226x375x16	1	
7	345x75x16	1		20	226x375x16	1	
8	878x325x16	1		21	368x375x16	1	
9	398x116x16	1		22	430x212x16	2	
10	323x213x16	2		23	333x862x3	1	
11	665x376x16	1		24	675x238x3	2	
12	665x376x16	1		25	675x382x3	1	
13	886x400x22	1		26	360x321x3	1	

Service - Dienstverlening - Serwis - Servis - Сервисная служба




Name - Naam - Nazwa - Isim - Название

Nr. - No. - Номер




Typ - Type - Tip - Тип

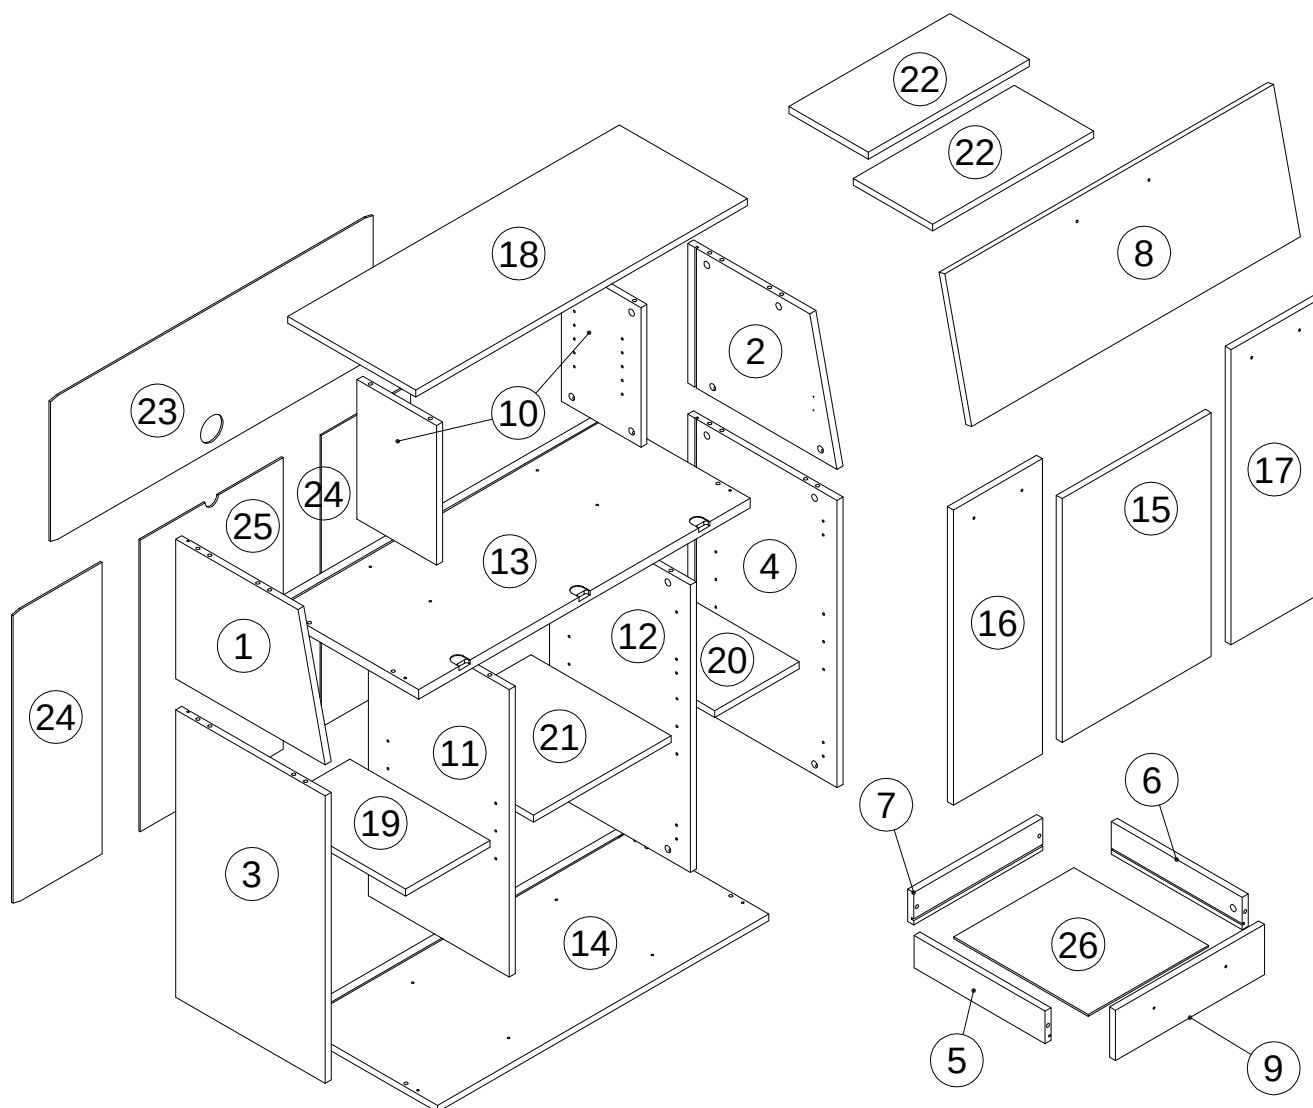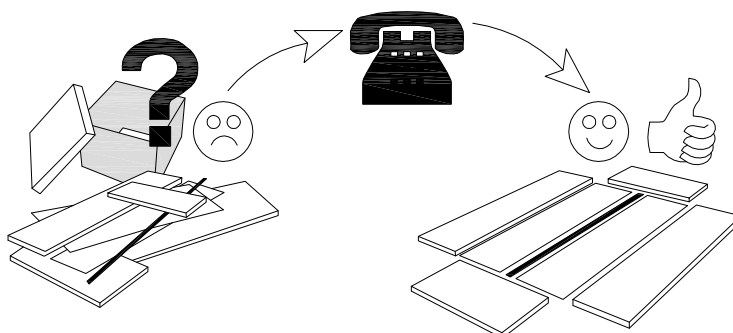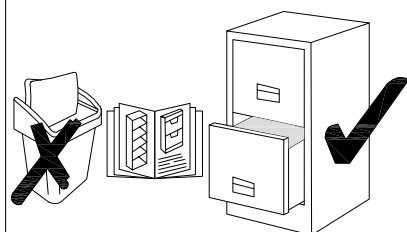

1

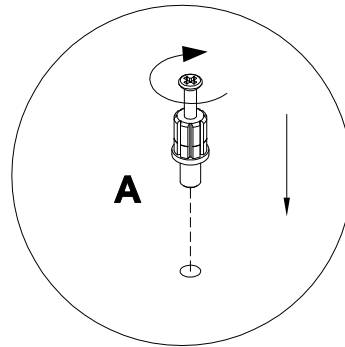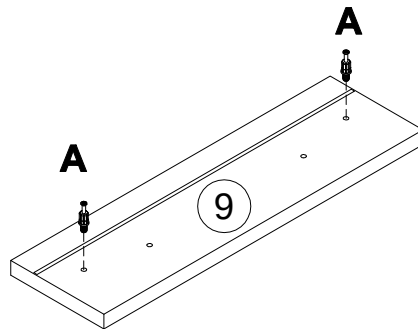


2

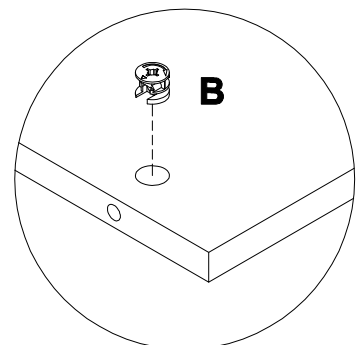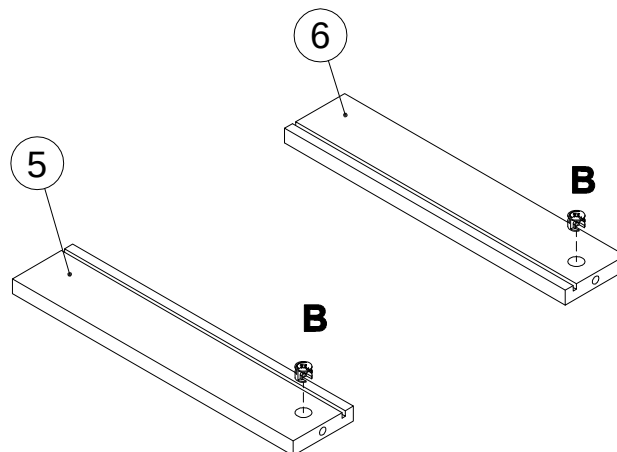


3

F
101608 7x50
x2

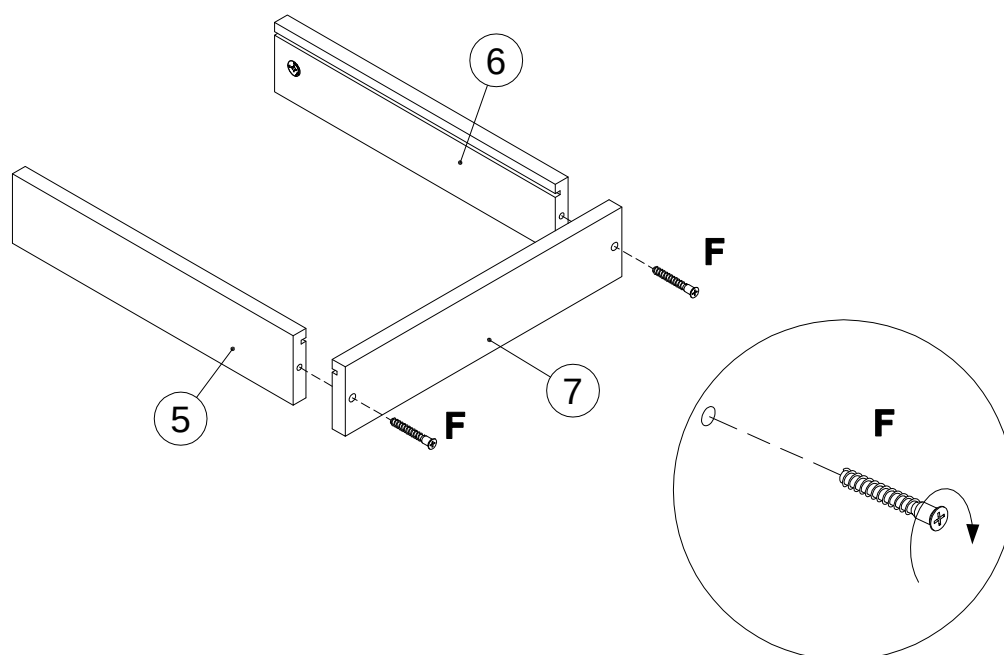


4

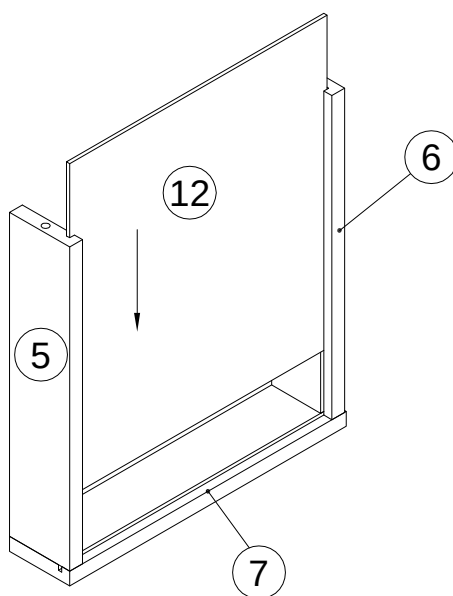



5

V		x5	W		M4x20	x2
234856			002704			

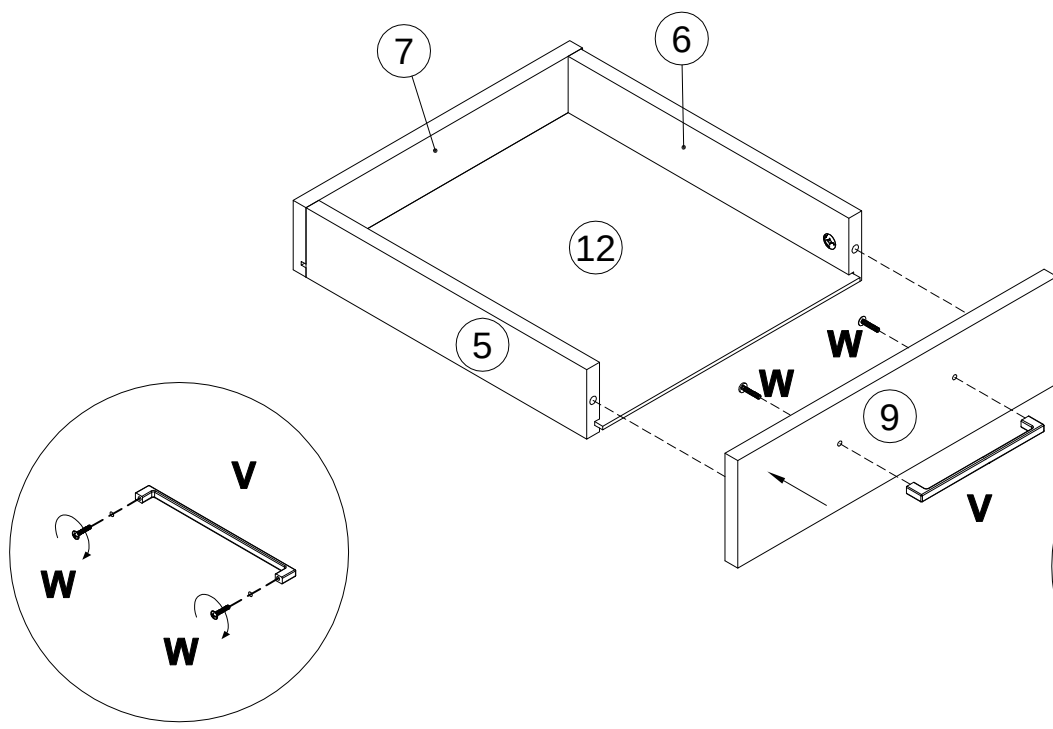



6

N		L350	P		3x13	x4
168849			000767			

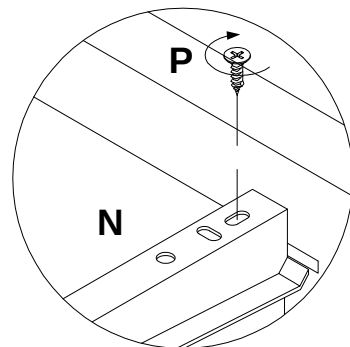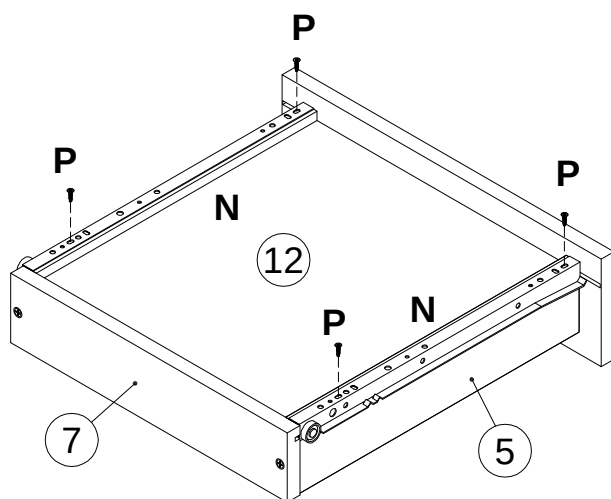






7

A
090913 7x32
x8

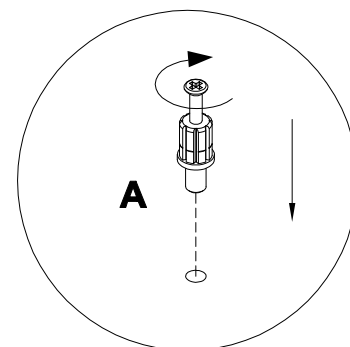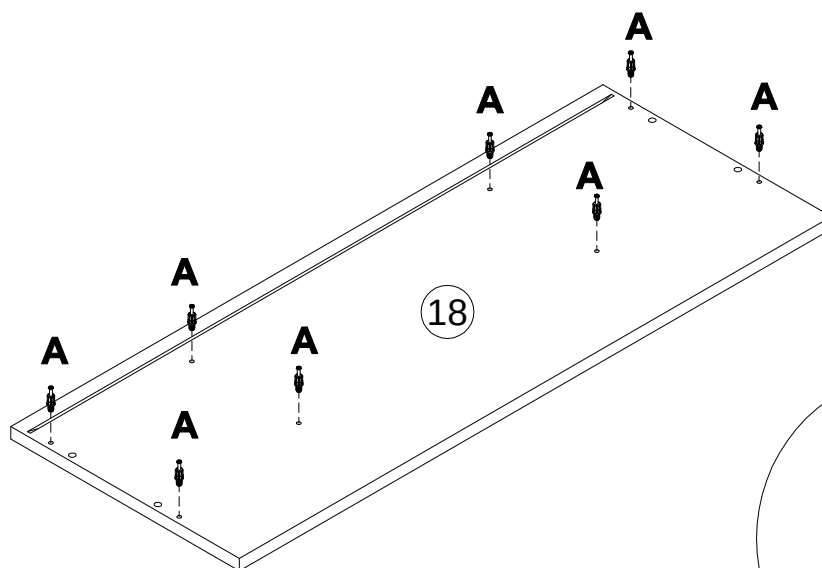


8






A 090913 7x32 x8
J 177473 x5
L 010942 4x16 x20
AB 230041 22x16 x5

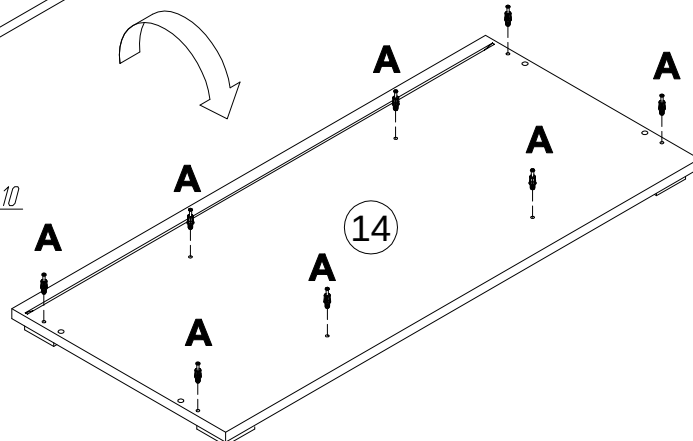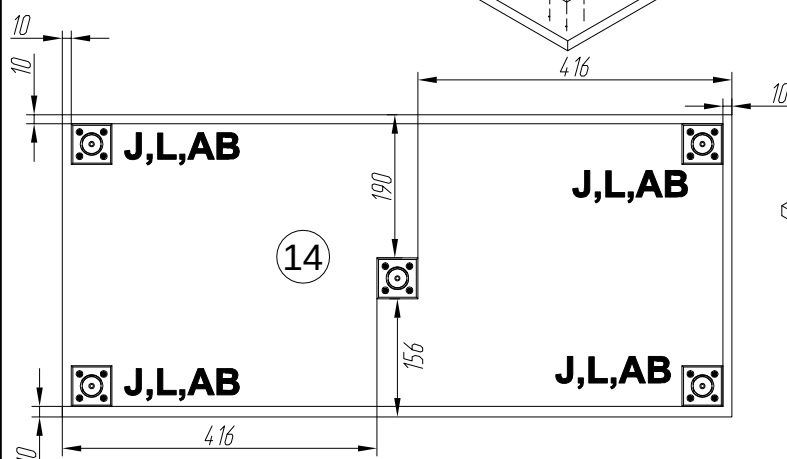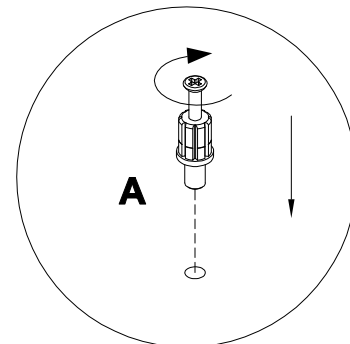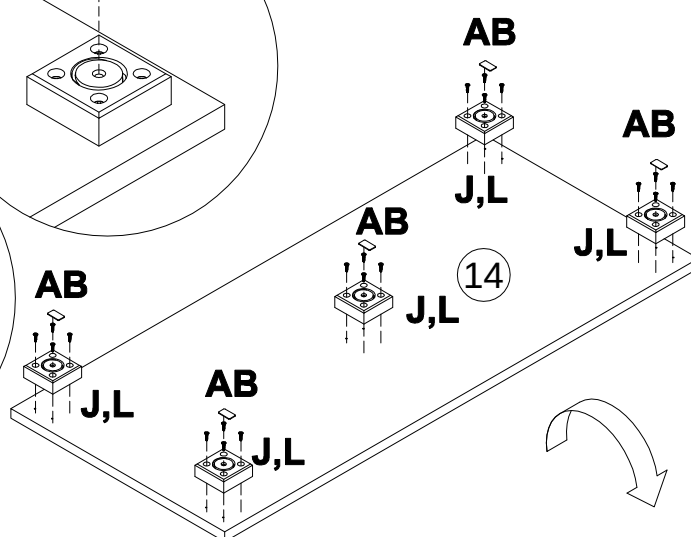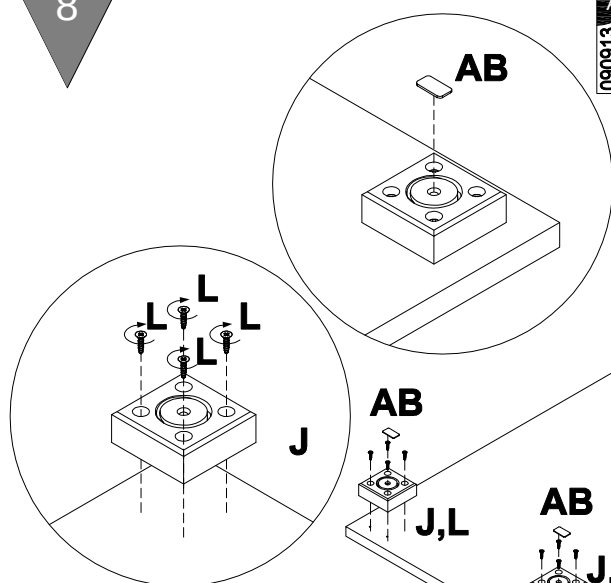


7






9

B 000146  15x12 x8	C 000151  8x35 x8	Q 125913  x2
---	--	---

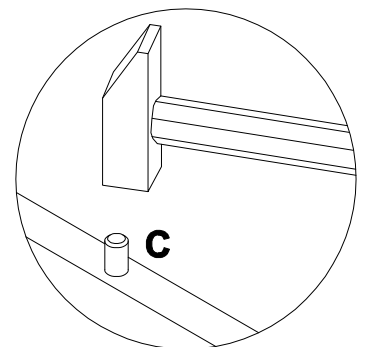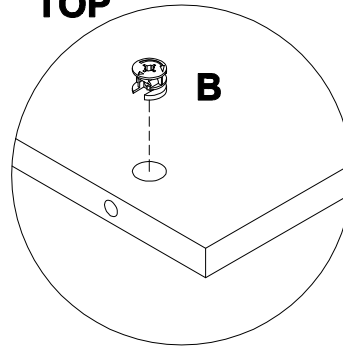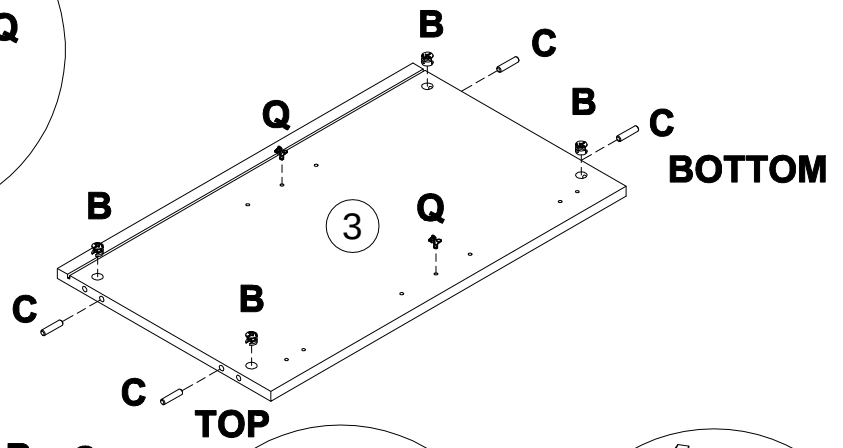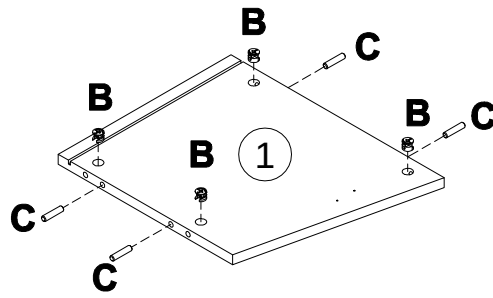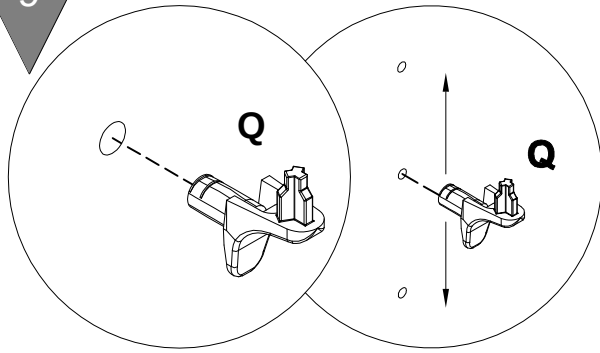


10





B 000146  15x12 x8	C 000151  8x35 x8	Q 125913  x2
---	--	--

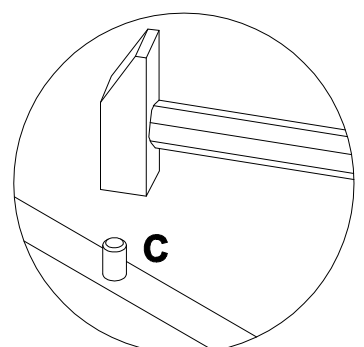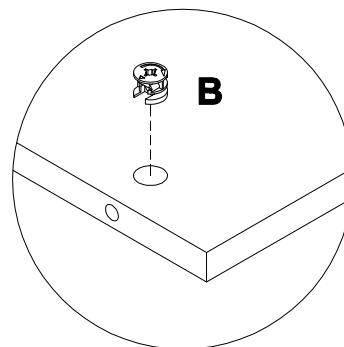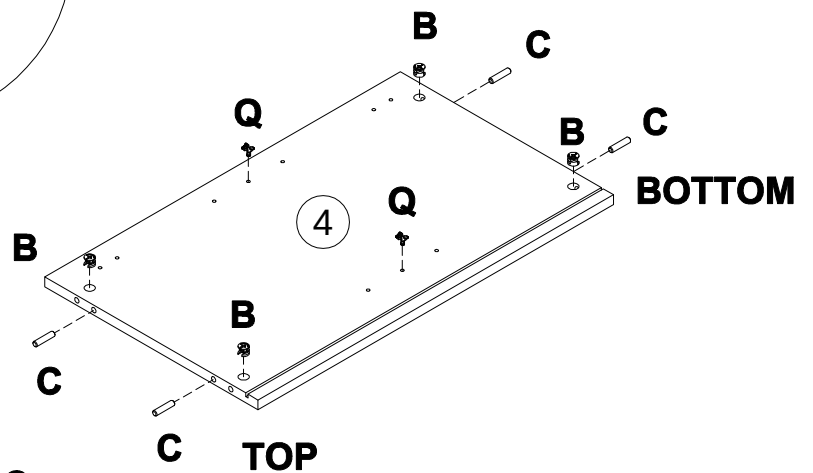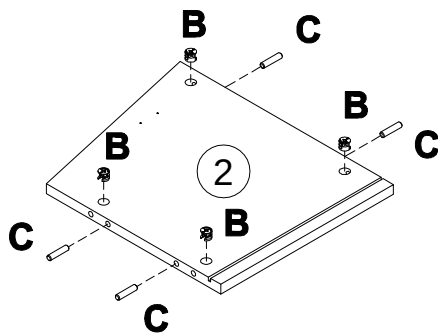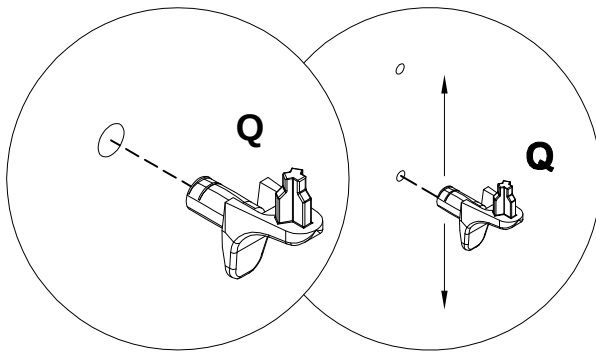

11

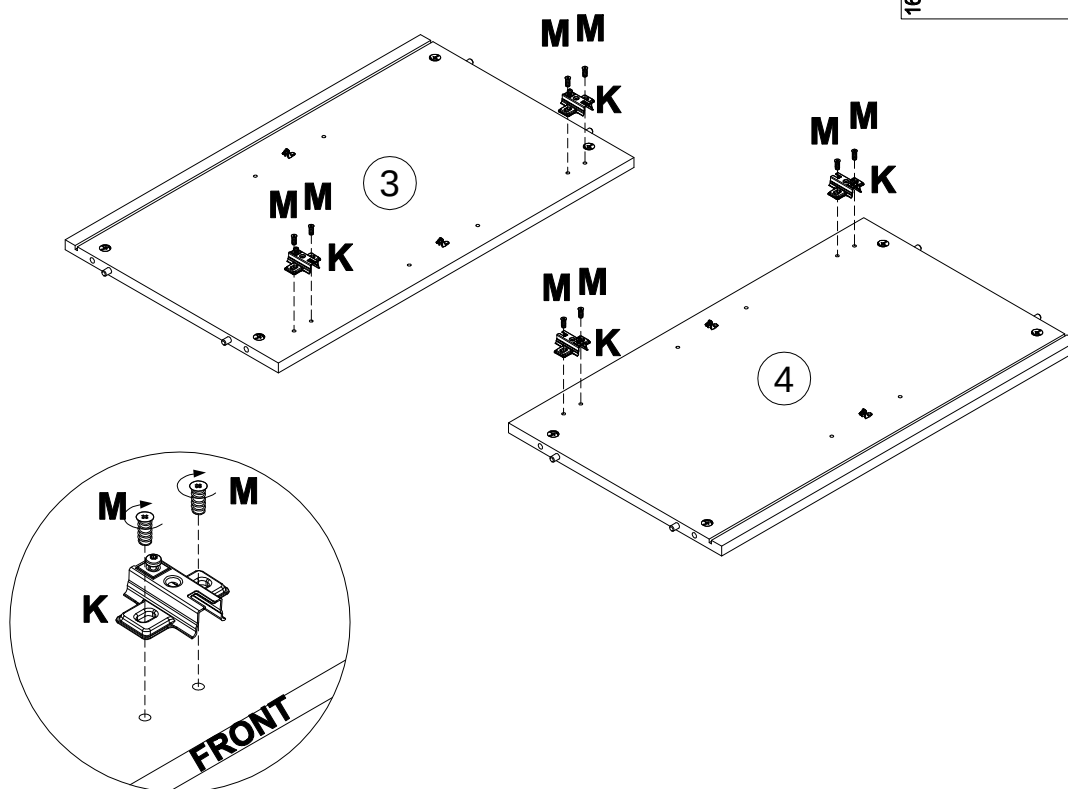

12

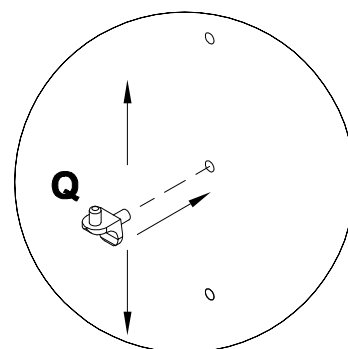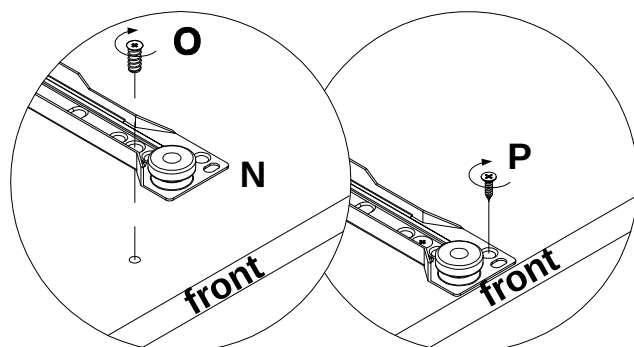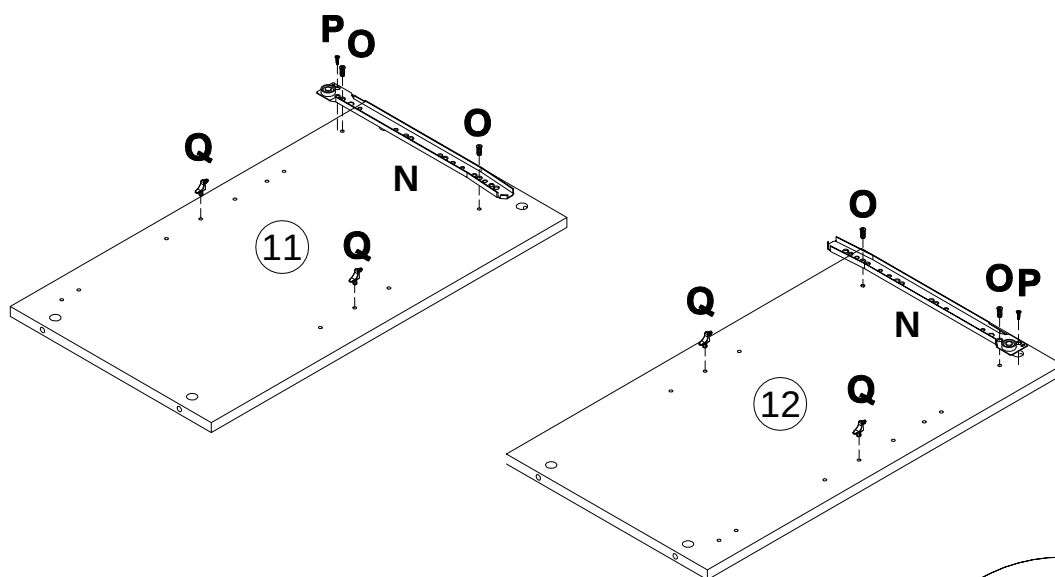


13

125913



x4

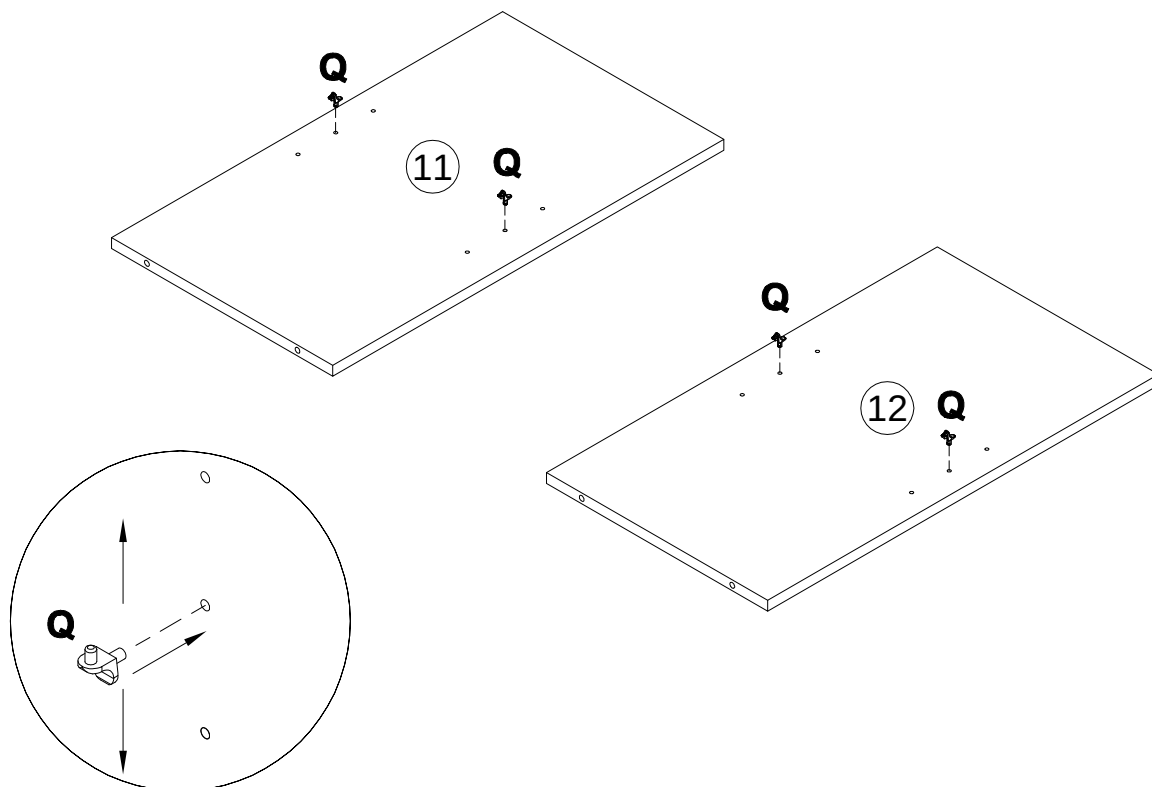


14

B
000146

15x12

x8





K
169982

x2

M
235594

6.3x16


x4

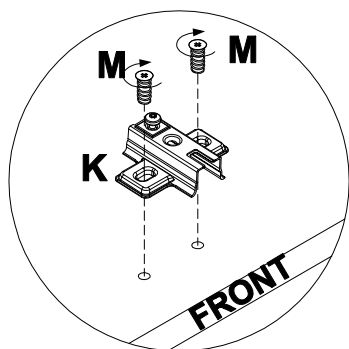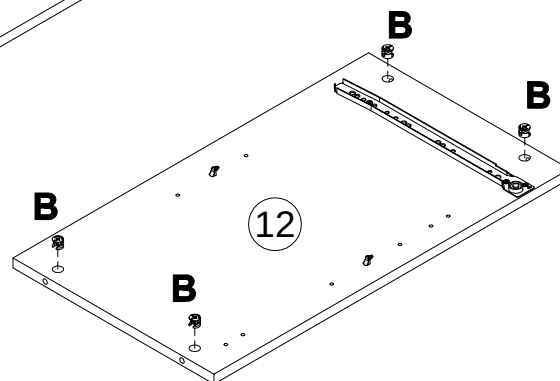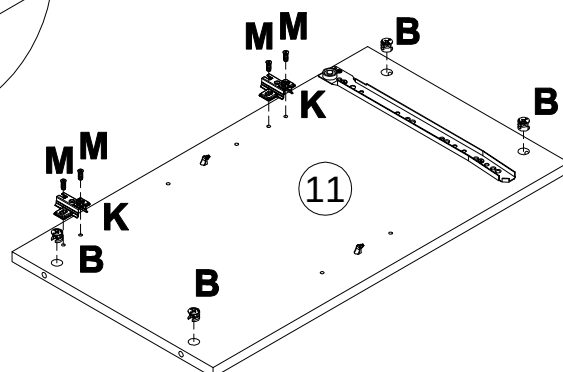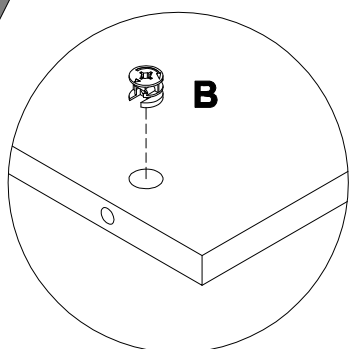

15

168982

K



x6


010942

L



4x16

x12

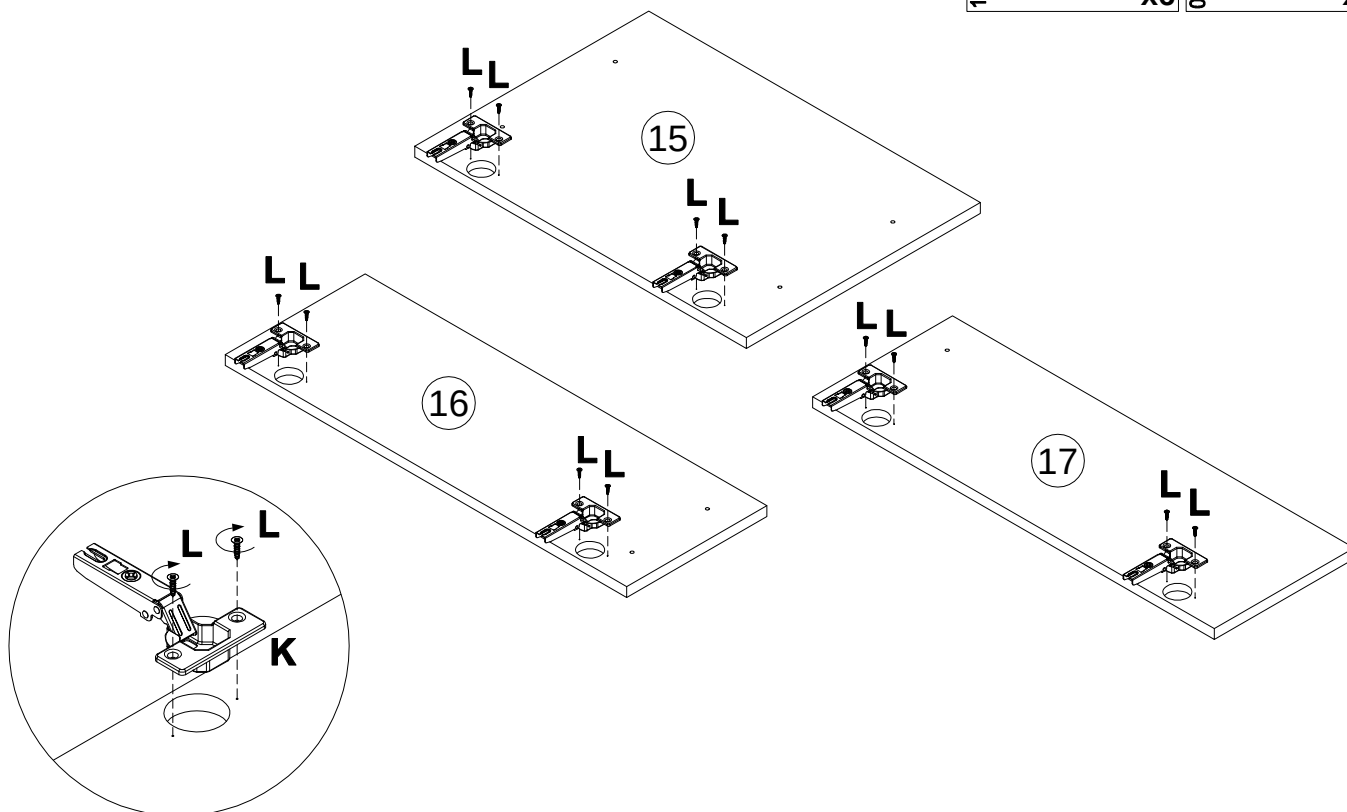

16

234856

V



x5


002704

W







M4x20




x10

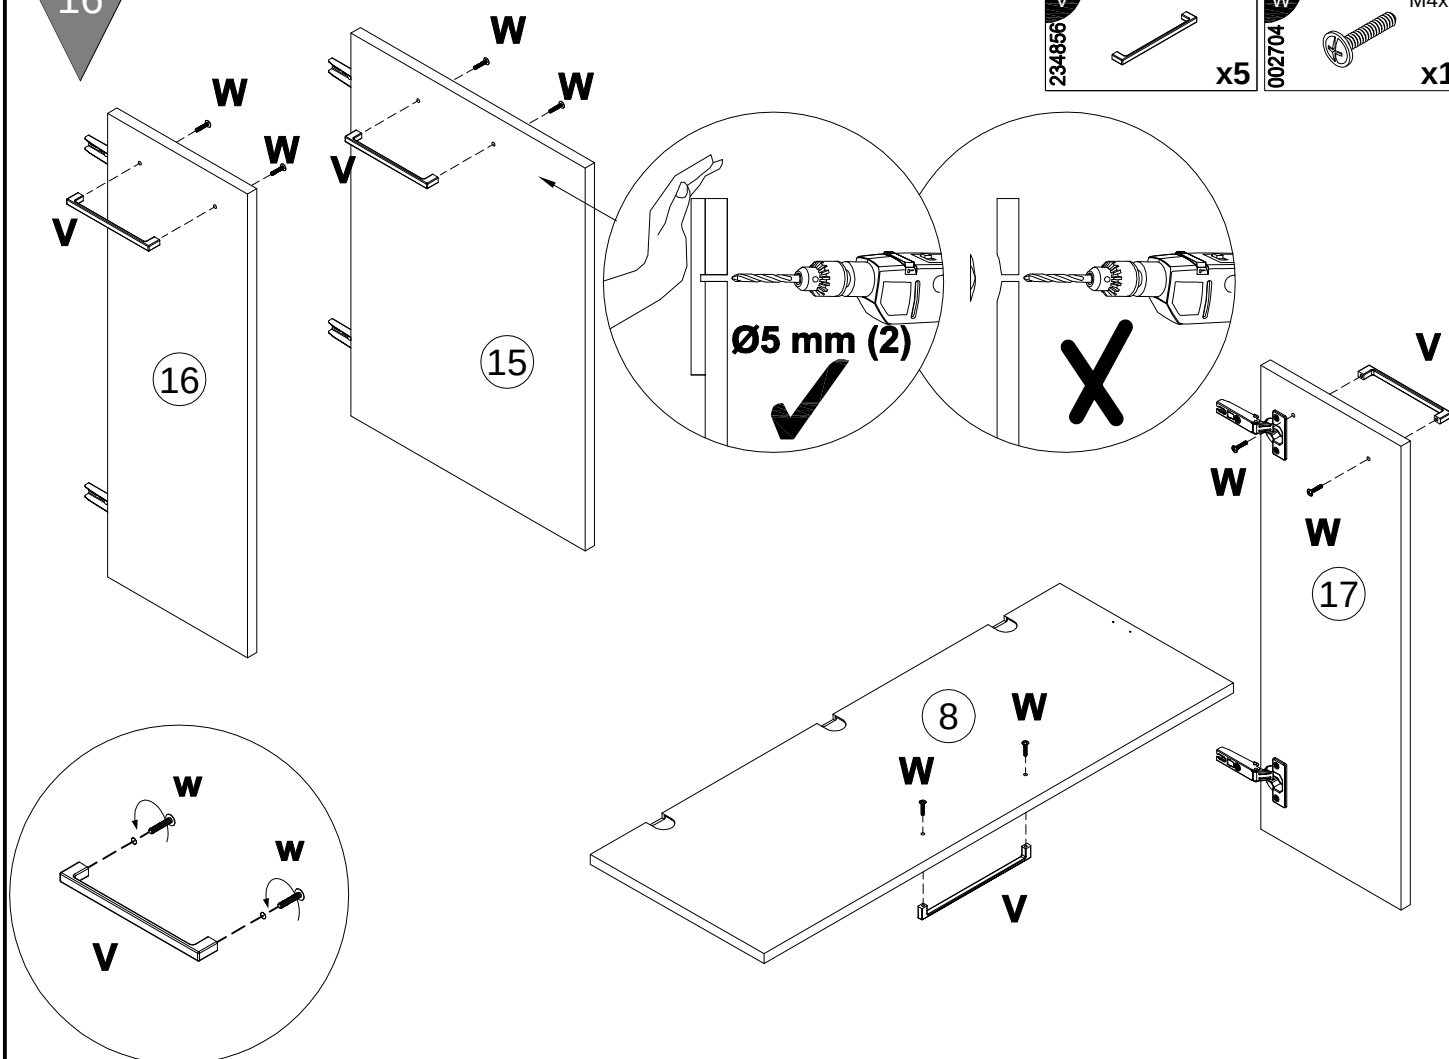


17 **x2**

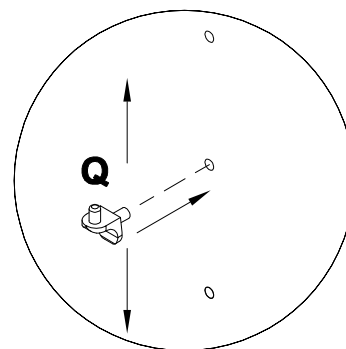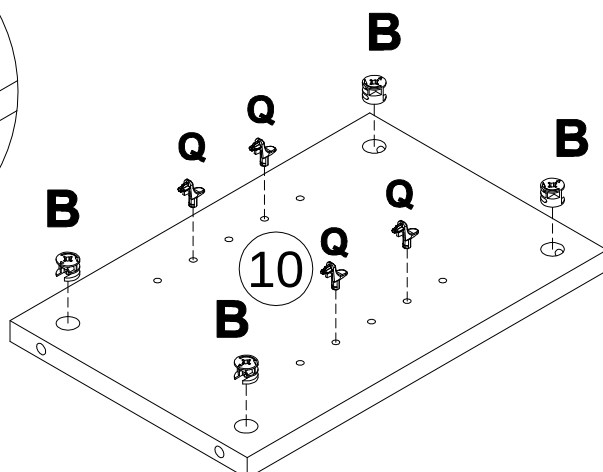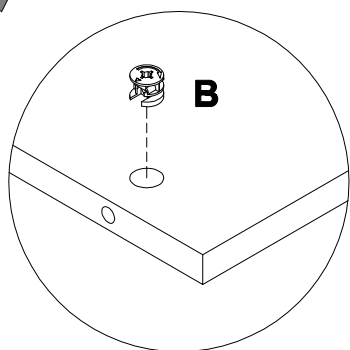

18

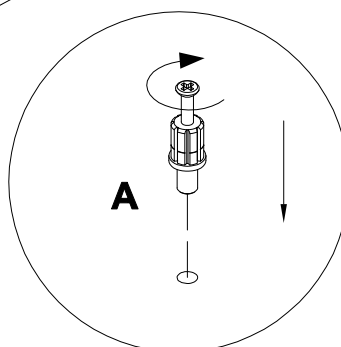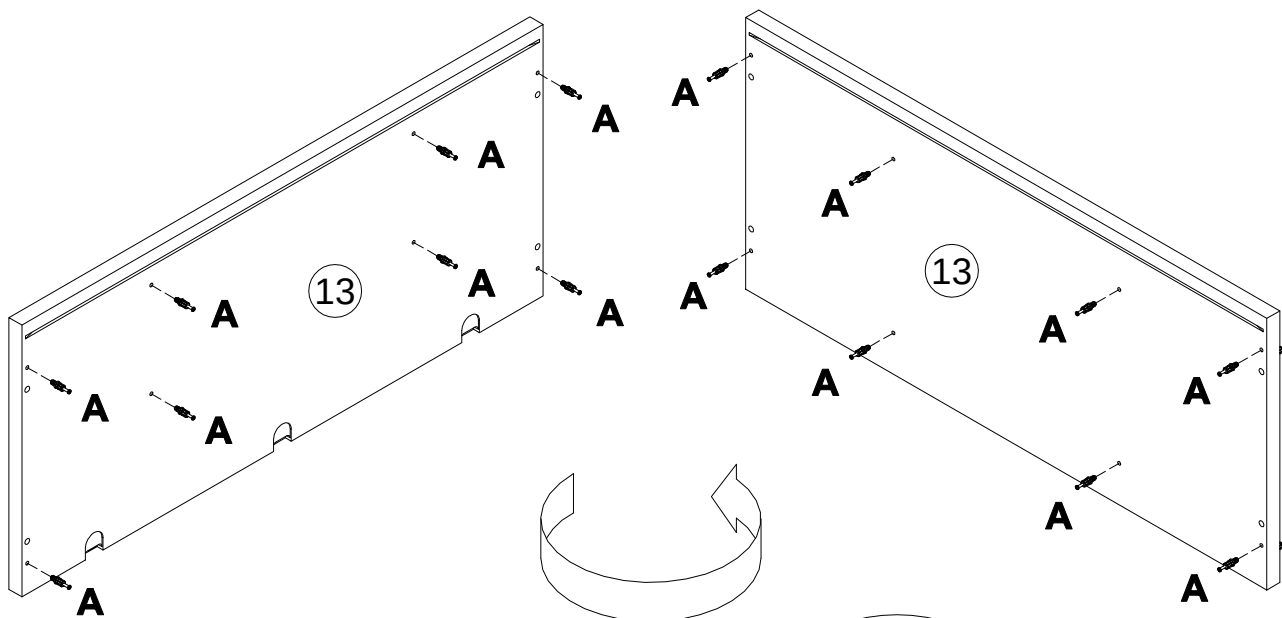

19



R
078388

x3



S
000762

3.5x13


x9

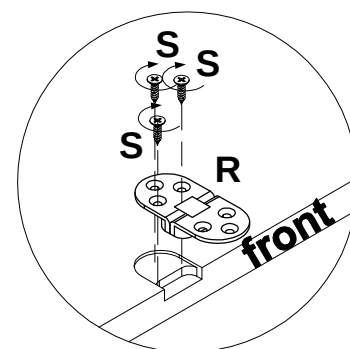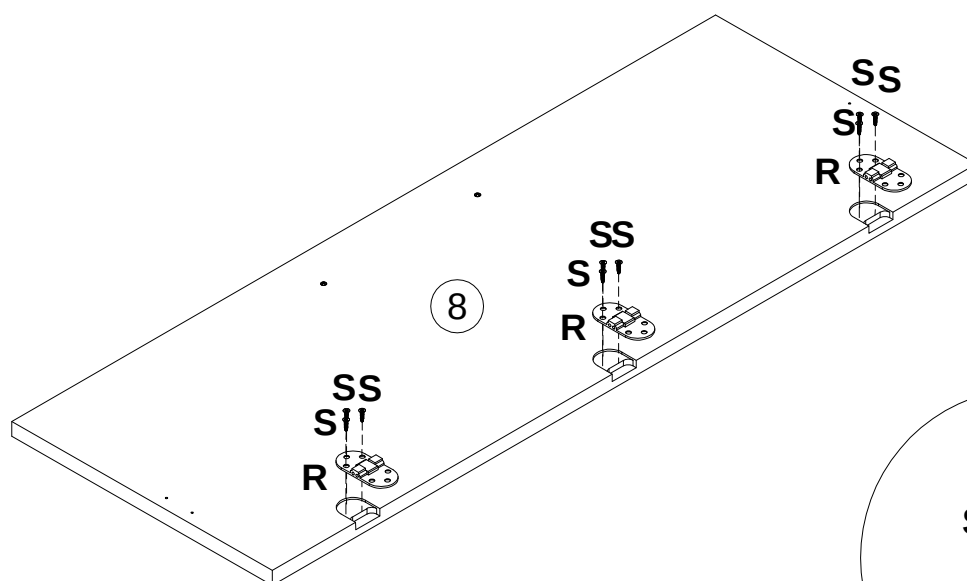



20

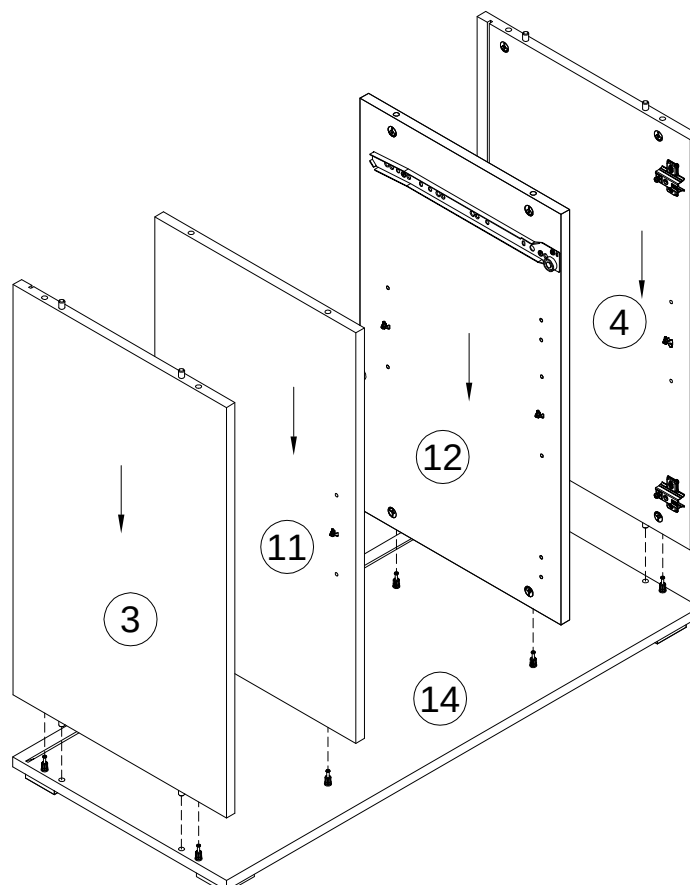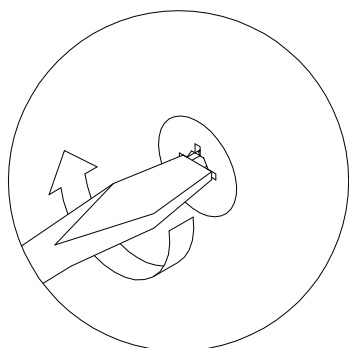



21

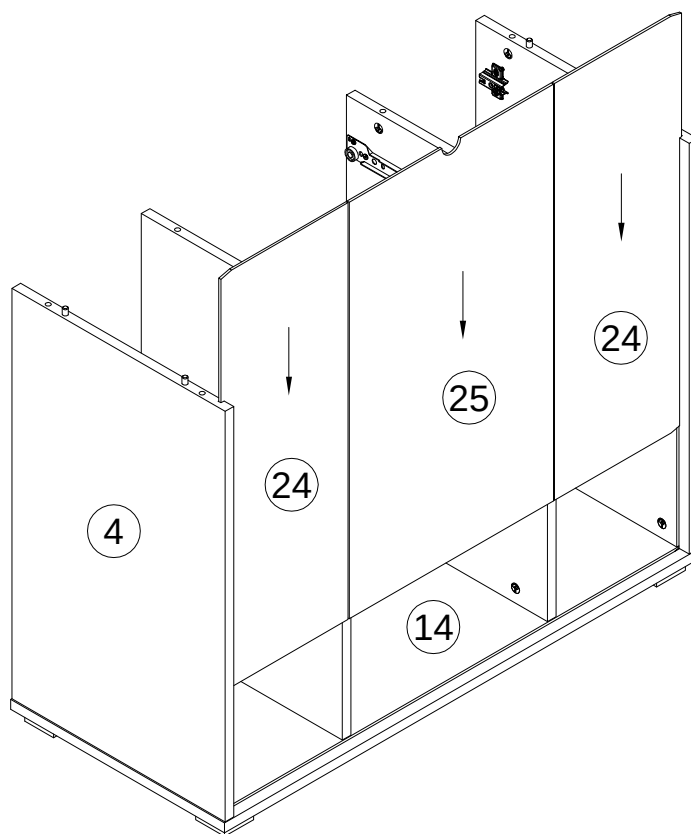



22

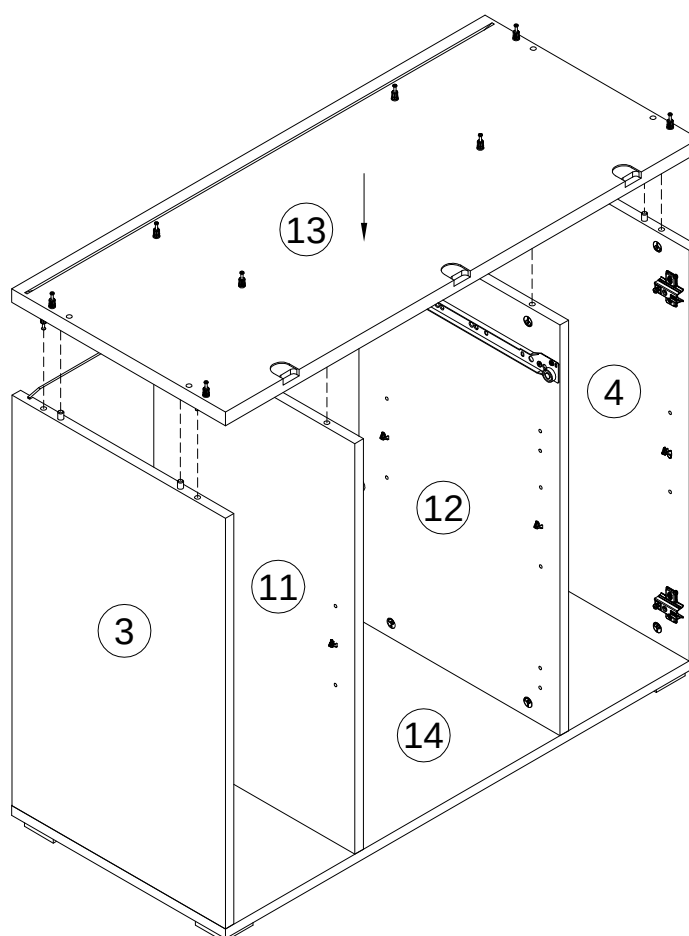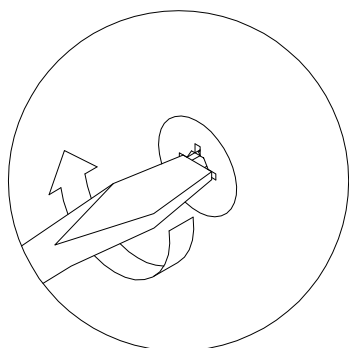


23


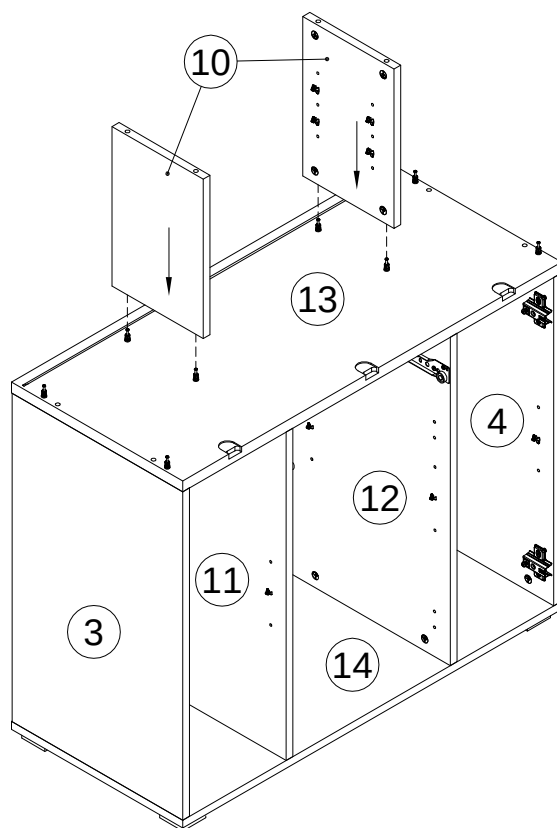
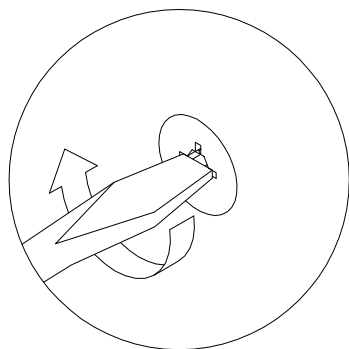



24

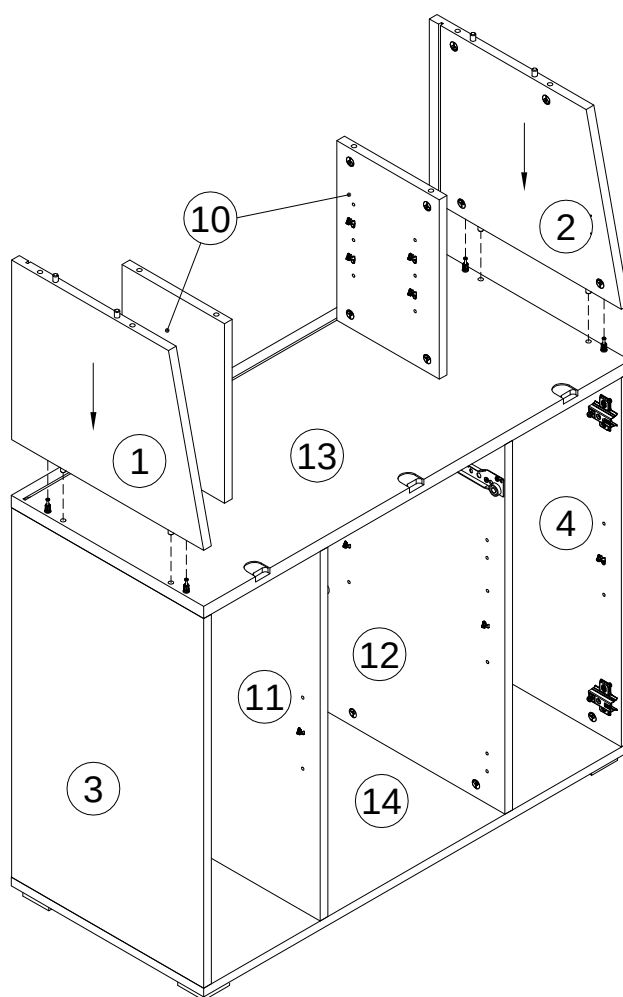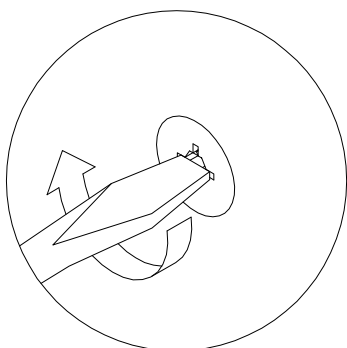



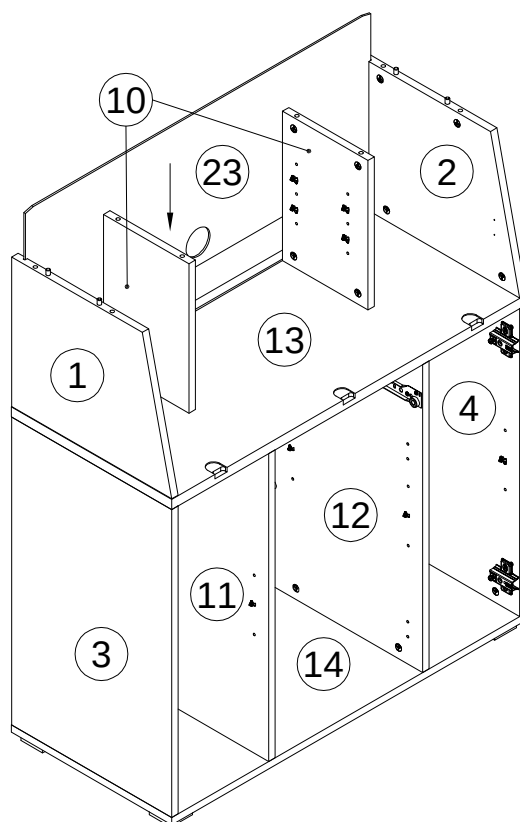


D	20x0.5	E	20x0.5
100640		100640	
	x16		x12

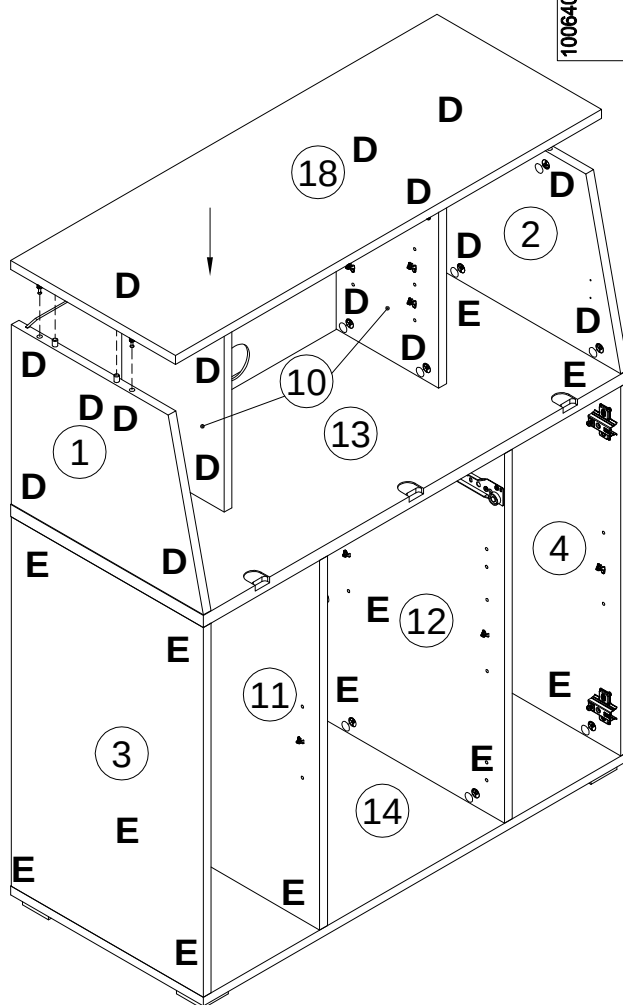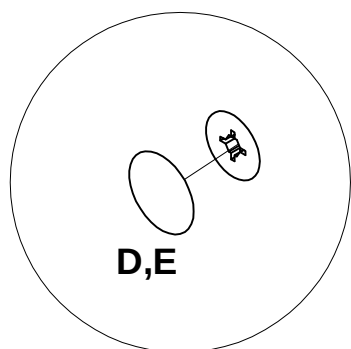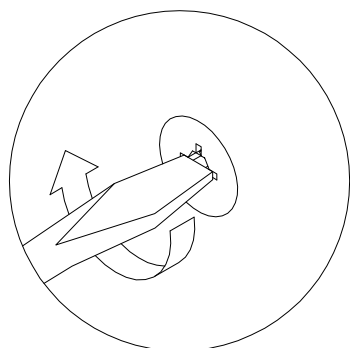


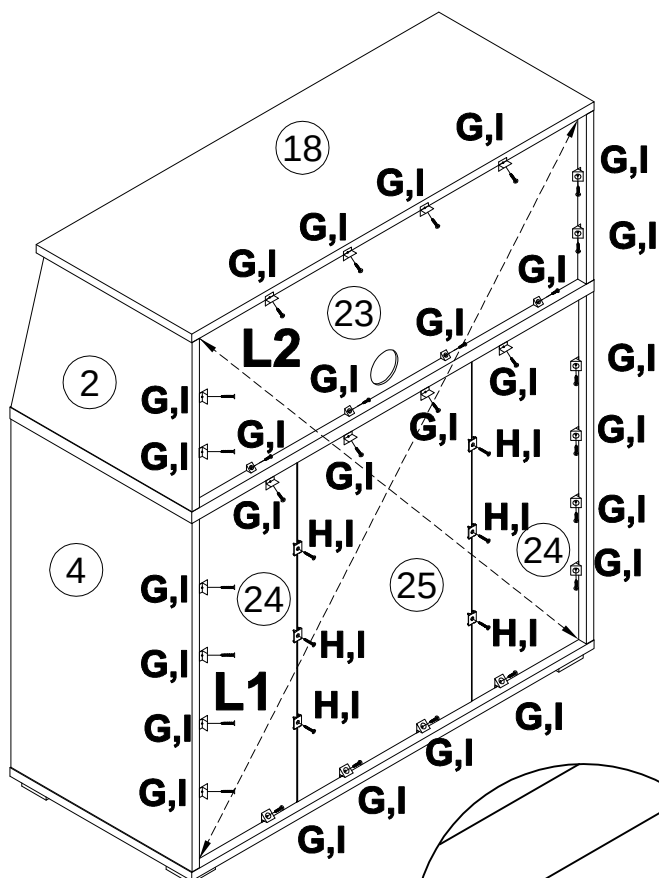$L1=L2$


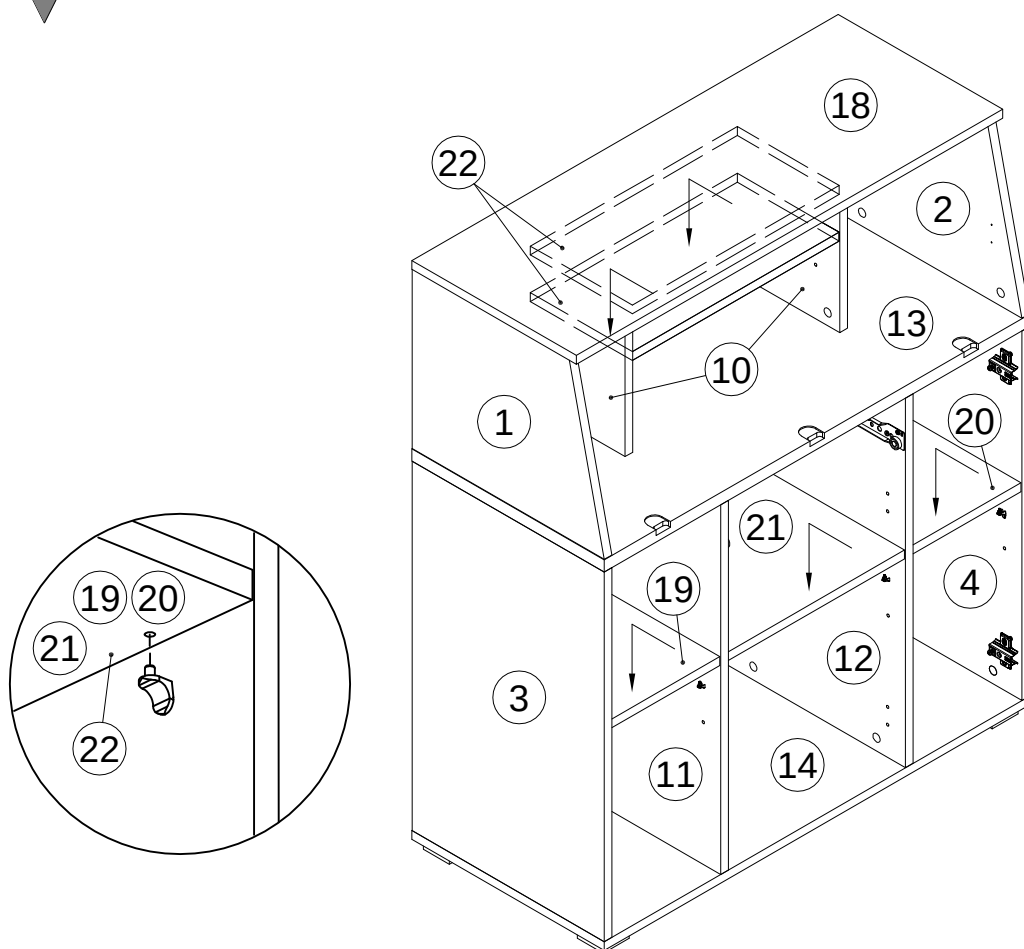
G	135021		x28
H	062367		x6
I	000759		3x20 x34

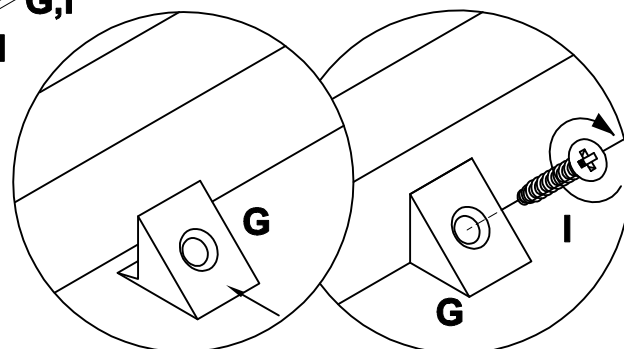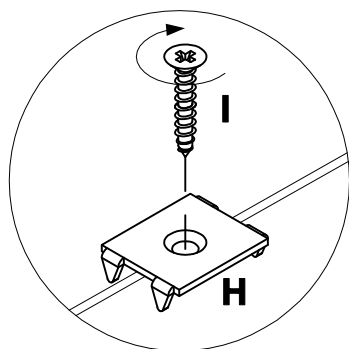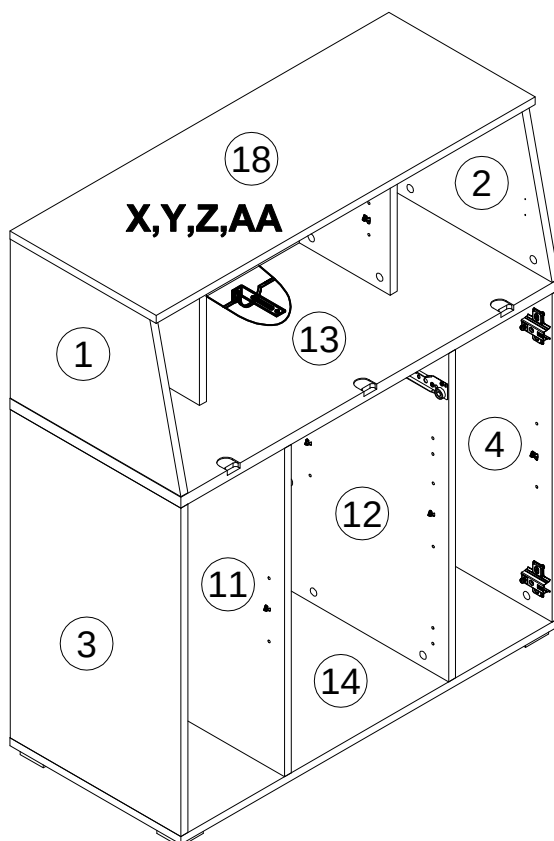
 X,Y,Z,AA


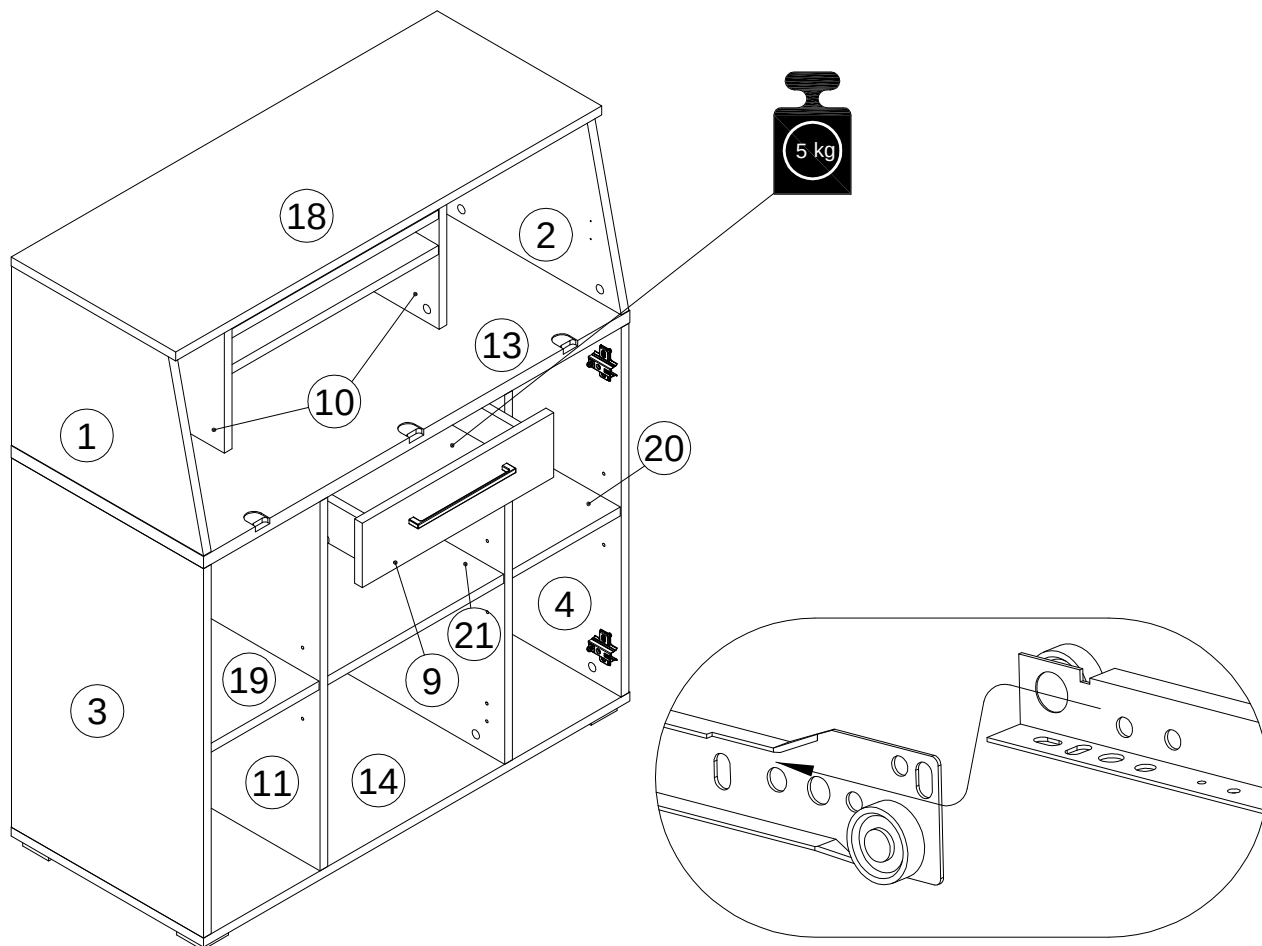
X	155999		x1
Y	000754		3.5x16 x2
Z	090185		4.5x45 x1
AA	013859		8x40 x1

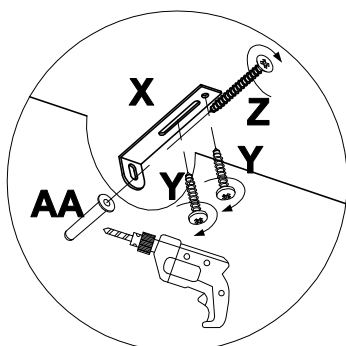


29











30




18


T 120144  x2	U 000763  3.5x16 x8	AC  Plates of Style x1
---	--	--

5..10 times

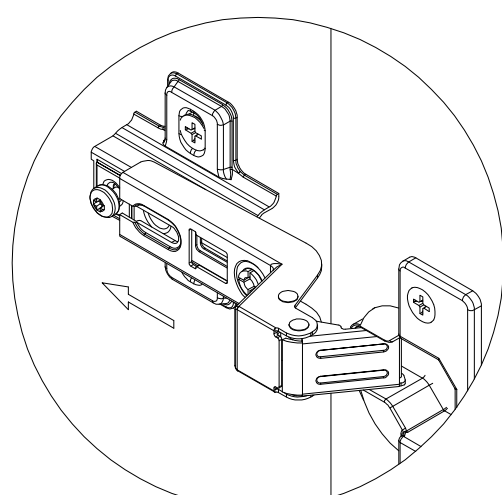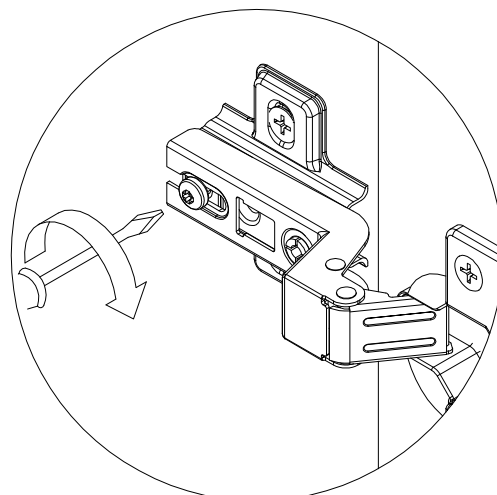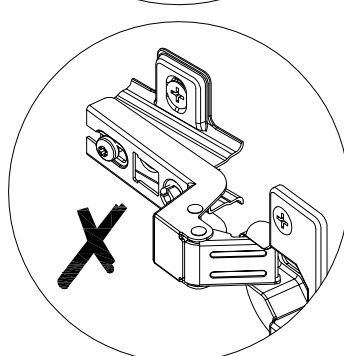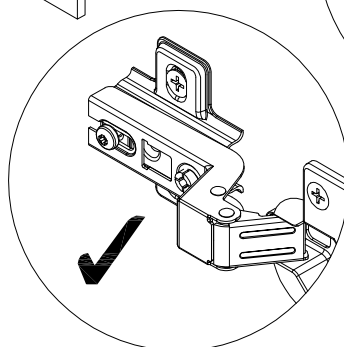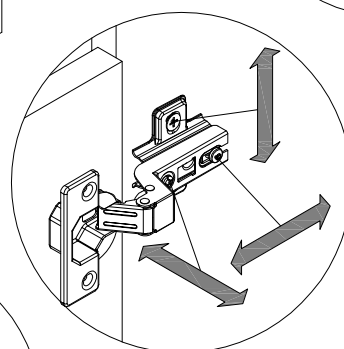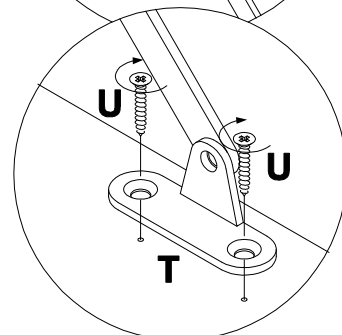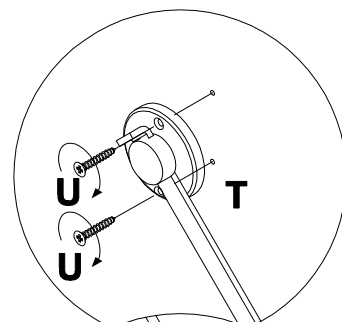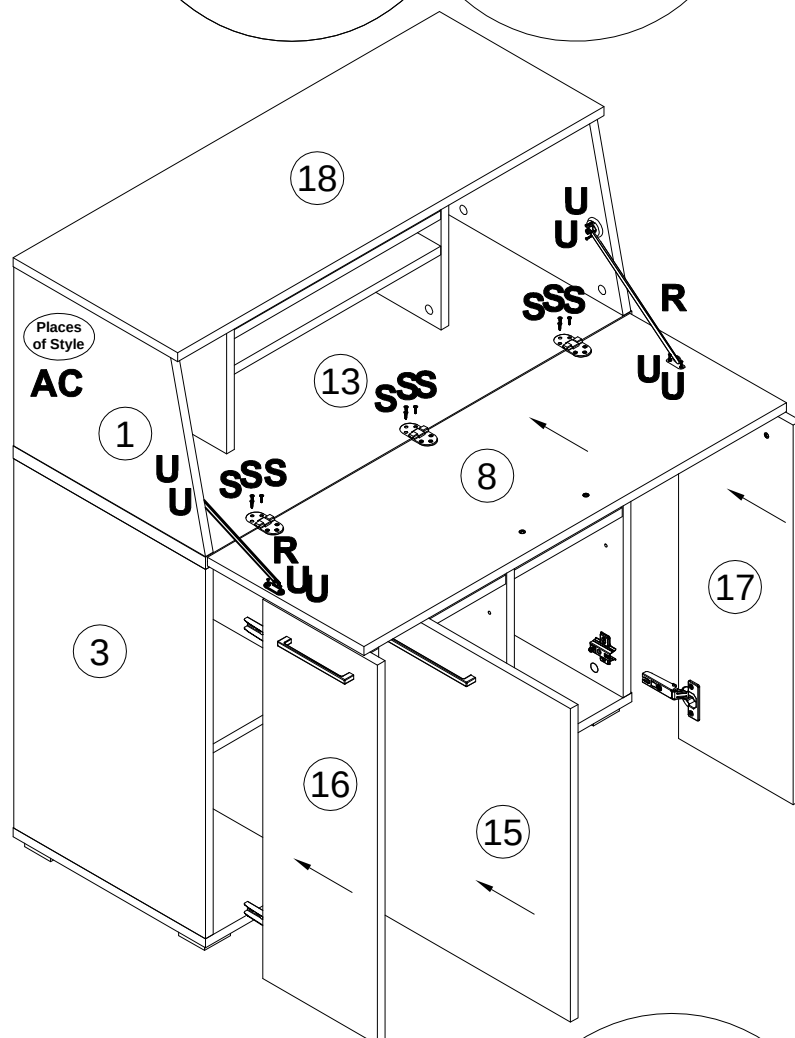

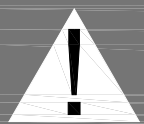

Achtung • Attention • Attenzione
Opgelet • Uwaga • Pozor • Figyelem
Atenție • Dikkat • Внимание

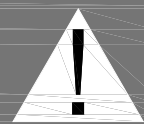

(D)	Wandbefestigung dient als Kippschutz — unbedingt anbringen! Bei einigen Wandtypen kann ein Spezialdübel erforderlich sein!
(GB)	The wall fastening serves to prevent tipping — be absolutely sure to mount it! For certain wall types, a special wall plug may be necessary!
(FR)	La fixation murale sert de protection contre le basculement — à installer impérativement ! Pour certains types de murs il faut des chevilles spéciales !
(IT)	Il fissaggio alla parete serve da protezione anti-ribaltamento — attaccarla assolutamente ! Per alcune strutture di parete può essere necessario un tassello speciale !
(NL)	Bevestiging aan de muur dient als kantelbescherming — zeker en vast bevestigen ! Bij enkele muurtypes is een speciale plug misschien vereist !
(PL)	Mocowanie do ściany jest jednocześnie zabezpieczeniem przed przewróceniem — koniecznie zamontować! Do niektórych rodzajów ścian koniecznie zastosować specjalne kołki mocujące.
(CZ)	Montáž na stěnu slouží jako ochrana proti převrhnutí — bezpodmienečně umístěte! U některých typů stěn může být zapotřebí speciální hmoždinka !
(SK)	Upevnenie na stenu slúži ako ochrana proti prevráteniu — bezpodmienečne použite! Pre niektoré druhy stien môže byť potrebná špeciálna hmoždenka !
(HU)	A terméket a falhoz kel rögzíteni, különben az felborulhat! Egyes faltípusoknál speciális tiplit kell használni !
(RO)	Sistemul de fixare la perete serve ște ca protecție la răsturnare — de montat obligatoriu! Pentru unele tipuri de pereți este posibil să fie necesar un diblu special !
(TR)	Duvardaki sabitleme, devrilmeye karşı bir emniyet tedbiridir ve mutlaka monte edilmelidir! Bazı duvar tiplerinde bunun için özel bir düble gerekli olabilir !
(RU)	Обязательно установите крепление на стене во избежание опрокидывания ! Для некоторых типов стен может потребоваться специальный дюбель !