NOVA LUCE

9580680 , 9580580

1

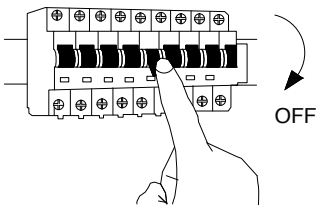

Turn off the general switch

2

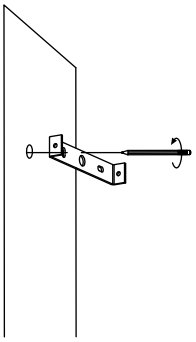

Mark where to drill holes

3

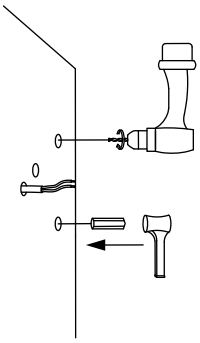

Make holes & apply anchors

4

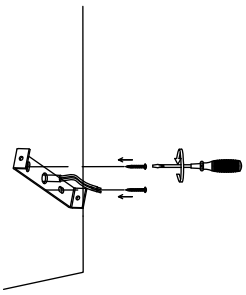

Tie up the screws
to make it stable

5

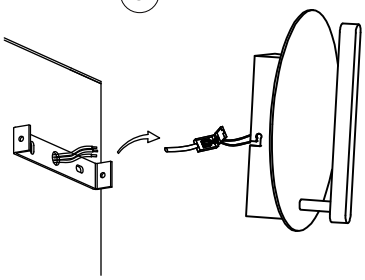

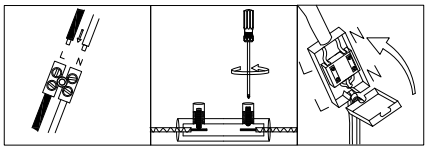

Connect the wires

6

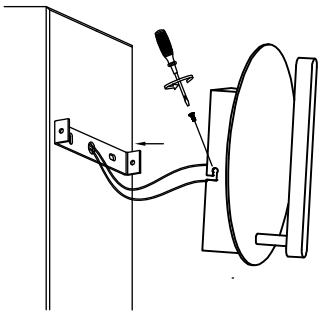

Put it in place
& Apply side screws

7

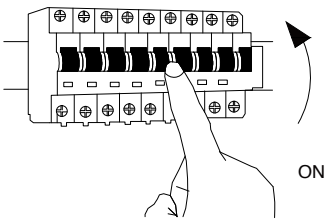

Turn on the general switch
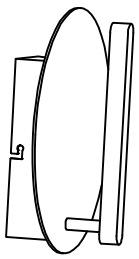
8