



- |                                  |                               |
|----------------------------------|-------------------------------|
| (D) AUFBAUANLEITUNG              | (GB) ASSEMBLY INSTRUCTIONS    |
| (NL) HANDLEIDING VOOR DE MONTAGE | (PL) INSTRUKCJA MONTAŻU       |
| (TR) MONTAJ TALIMATI             | (RU) Инструкция по монтажу    |
| (RO) INSTRUCTIUNI DE ASAMBLARE   | (I) PROCEDURA DI ASSEMBLAGGIO |
| (F) INSTRUCTION D'ASSEMBLAGE     | (SK) POKYNY K MONTÁŽI         |
| (CZ) POKYNY K MONTÁŽI            | (HU) KÖZGYŰLÉS UTASÍTÁSOK     |
| (BG) ИНСТРУКЦИИ ЗА МОНТАЖ        | (SL) ASSEMBLY INSTRUCTIONS    |
| (HR) NAPUTCI ZA MONTAŽU          | (S) MONTERINGSANVISNING       |
| (E) INSTRUCCIONES DE MONTAJE     | (LT) DIEGIMO INSTRUKCIJOS     |



„MICKY”

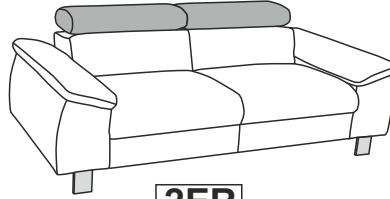





**2ER**

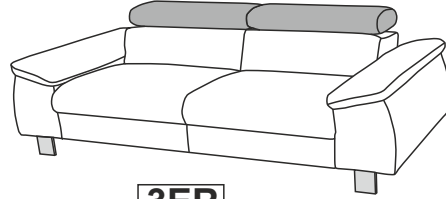

**3ER**

<p><b>A</b></p> <p>4x</p>	<p><b>B</b> 4 MM</p> <p>1x</p> <p>HARDWARE BAG / SACHET MATÉRIEL / ZUBEHÖRBEUTEL / SACCHETTI MATERIALE / BOLSA DE MATERIALES / WOREK MATERIALOWY</p>	<p><b>C</b> 6X30</p> <p>12x</p>	<p>PRE-ASSEMBLED/ PRÉ ASSEMBLÉ/ VORMONTIERT/PREMONTATO/ WSTĘPNIE ZAMONTOWANE</p>
---------------------------	--	---------------------------------	--

1

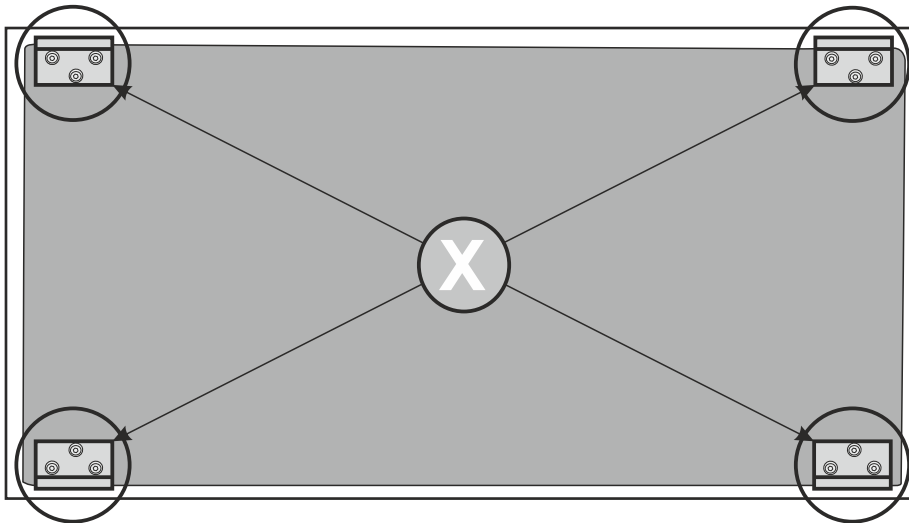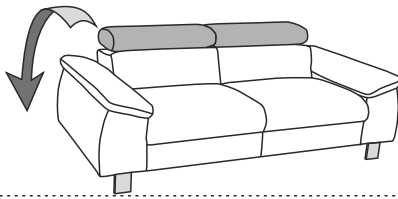

**X**

1/2

2/2

