



NOVA LUCE

9001090

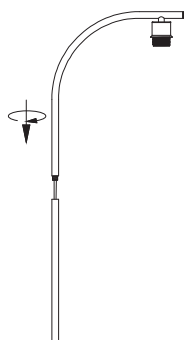


1. Fasten the crooked metal tube with the straight metal tube




2. Fasten the middle metal tube with the top metal tube




3. Fasten the middle metal tube with the bottom metal tube

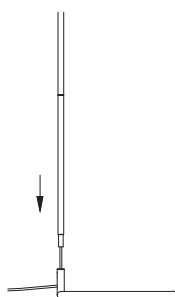


4. Insert the bottom metal tube into the base

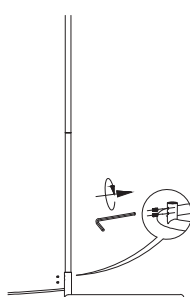


5. Fasten the screw with Allen key

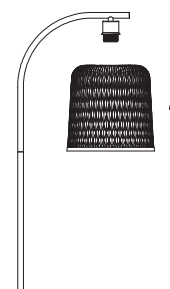


6. Install the lamp shade

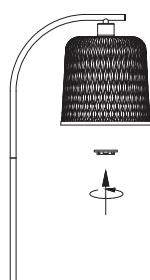


7. Fasten the lamp shade with the plastic ring

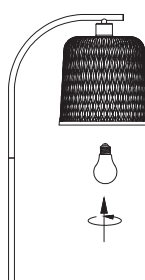

8. Install the bulb

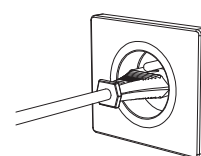

9. Plug it in



10. Control the ON / OFF switch

