
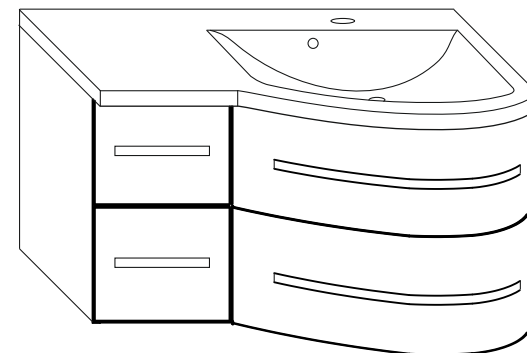



ORiSTO

OPAL


(PL)	SZAFKA DOLNA + UMYWALKA	INSTRUKCJA MONTAŻU
(GB)	LOWER CABINET + WASHBASIN	INSTALLATION INSTRUCTION
(FR)	MEUBLE BAS + LAVABO	CABINET DE CÔTÉ HAUTE
(RU)	ШКАФЧИК + умывальник	ИНСТРУКЦИЯ МОНТАЖА
(ES)	BAJA DEL GABINETE + LAVABO	INSTRUCCIONES DE MONTAJE
(TR)	ALT DOLAP + LAVABO	INSTRUKSJA MONTAJ
(D)	WASCHBECKENUNTERSCHRANK	MONTAGEANLEITUNG
(I)	MOBILE+LAVABO	ISTRUZIONI PER L'INSTALLAZIONE
(NL)	KAST VOOR WASTAFEL	INSTALLATIE INSTRUCTIES

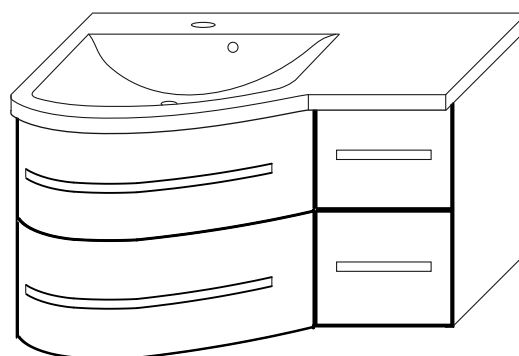


NR:5973 5725

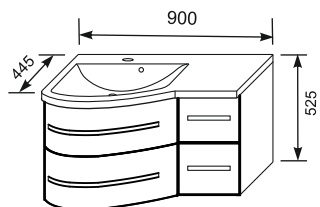




NR:3375 3568

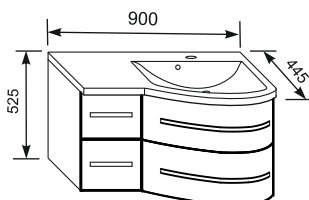


NR:3505 2502

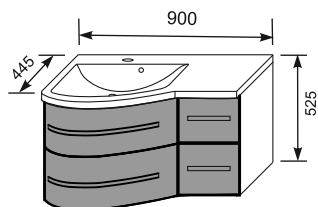


NR:8193 5638

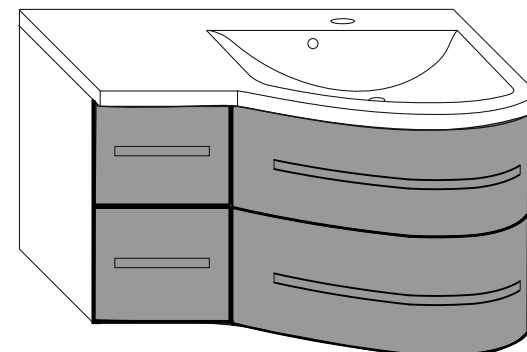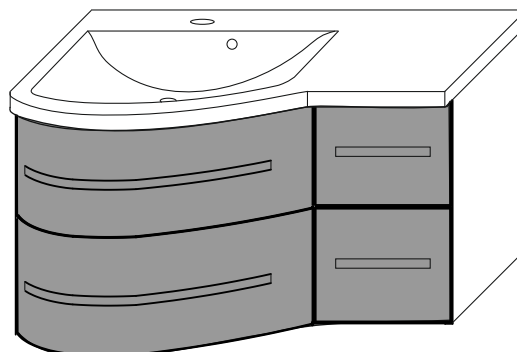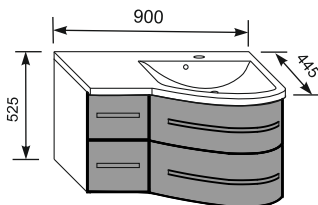


1.

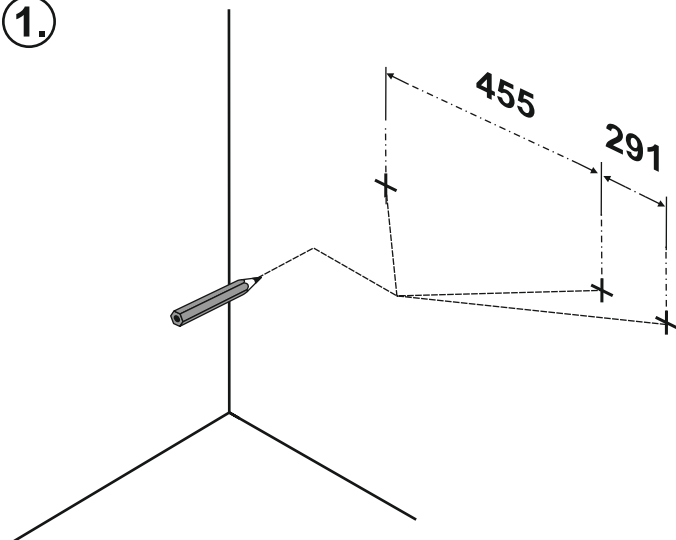


2.


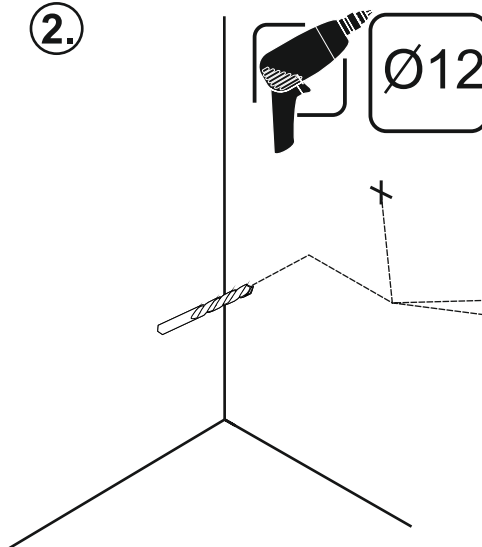



3.

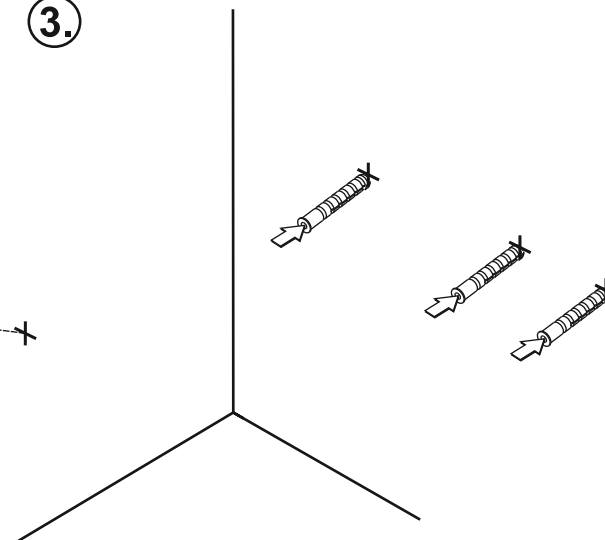

- (D) Hinweis! Bei einigen Wandtypen kann ein Spezialdübel erforderlich sein!
 (I) Attenzione! Per alcuni tipi di muri è necessario di utilizzare i tasselli speciali!
 (NL) Opgelet! Voor bepaalde ondergronden zijn speciale pluggen vereist
 (FR) Attention! Pour certains types de murs il faut utiliser de chevilles spéciales!

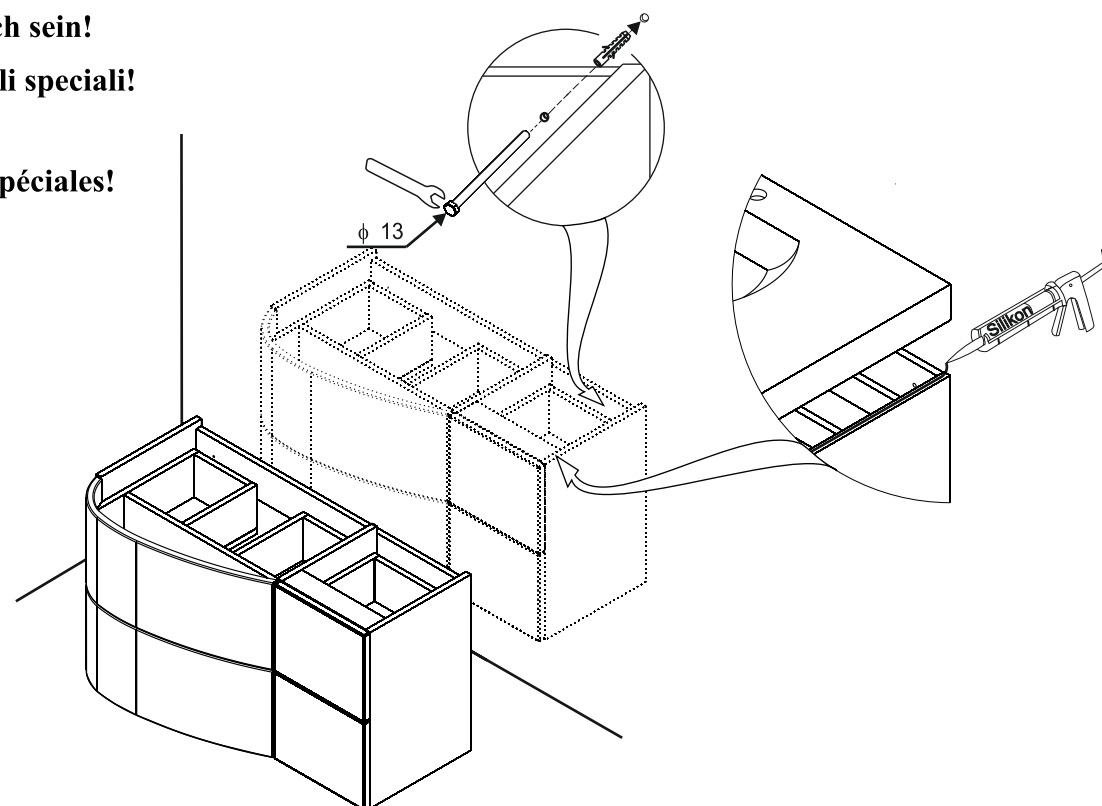

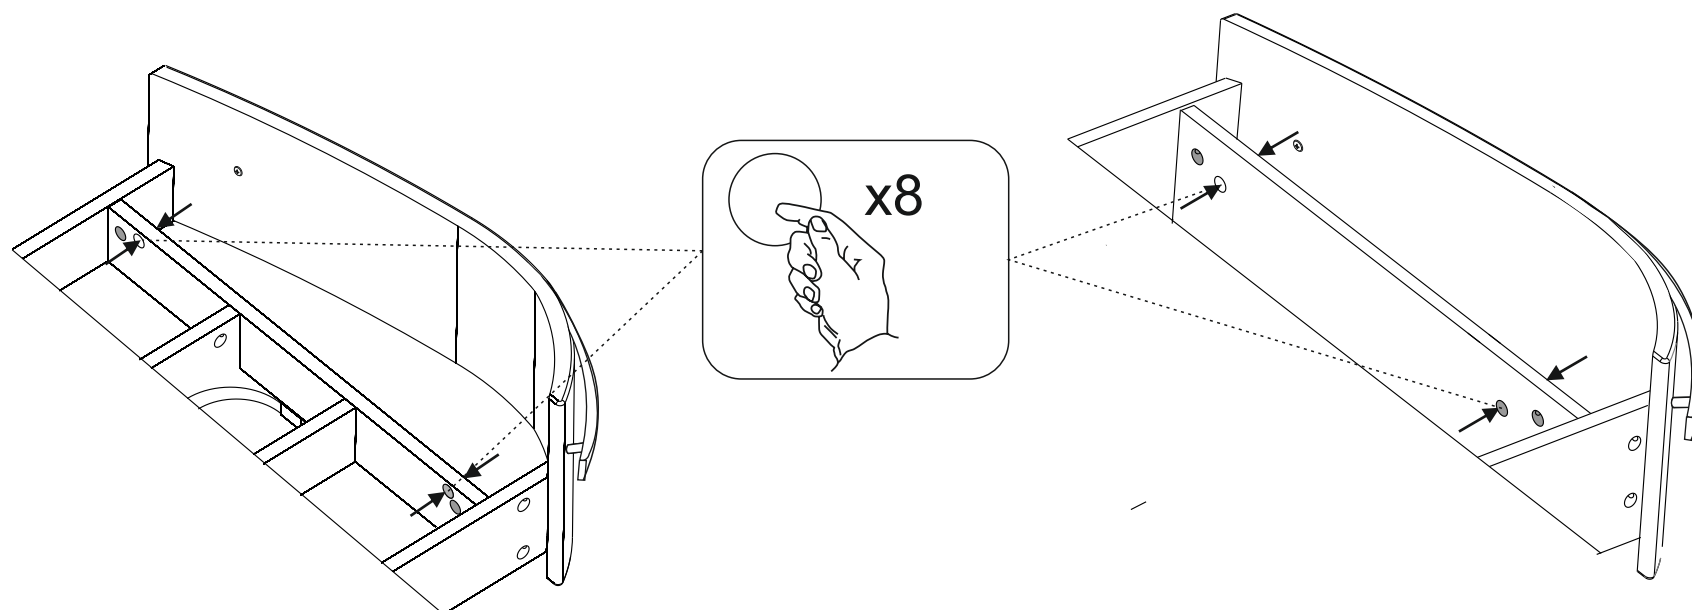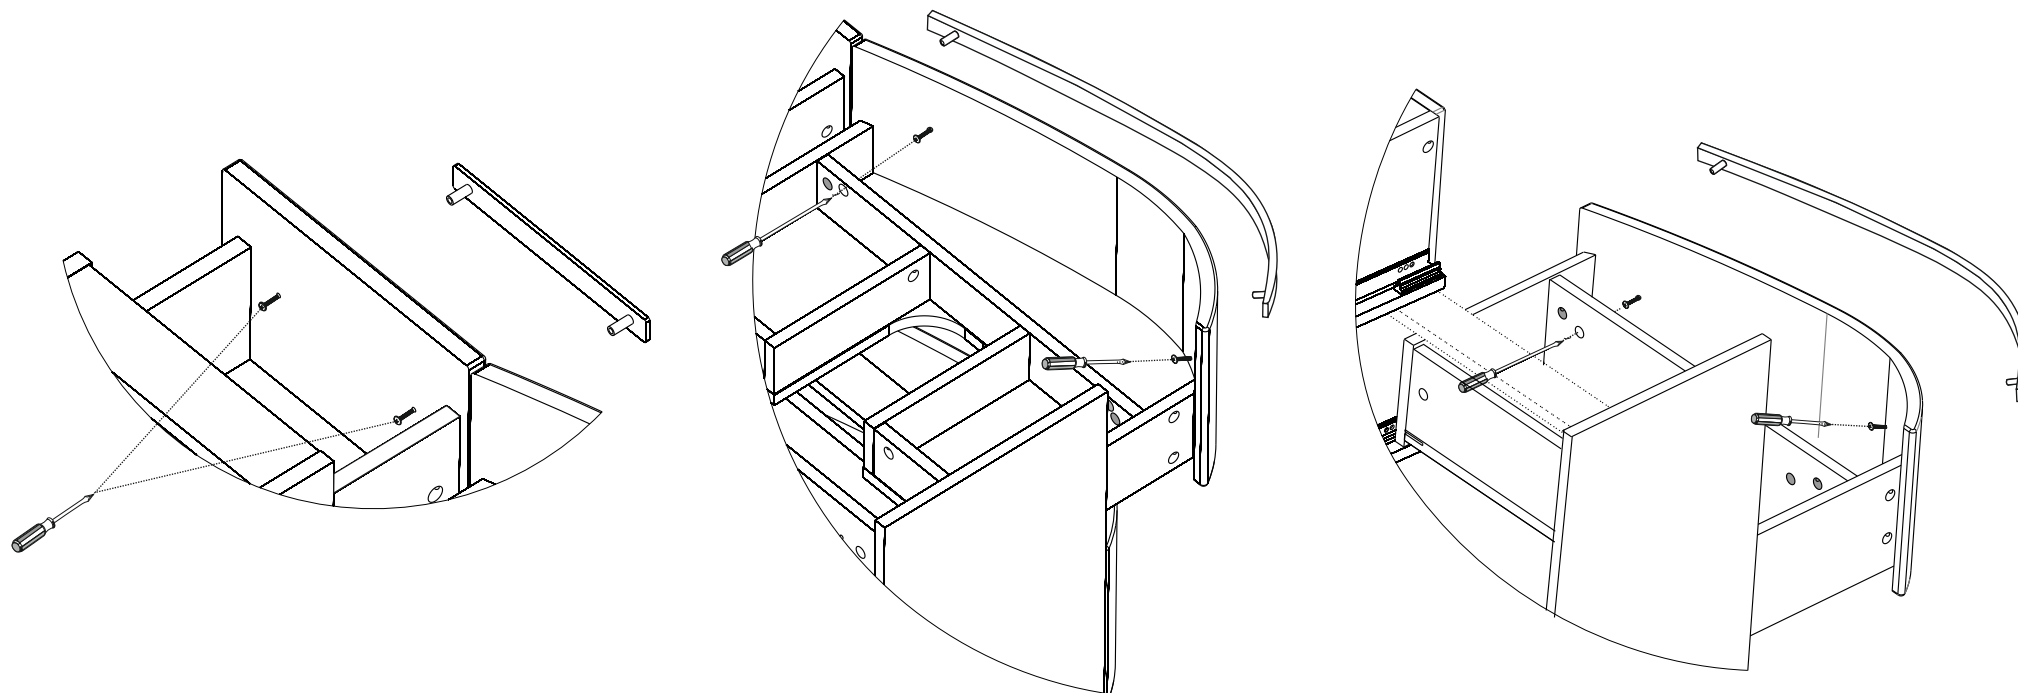

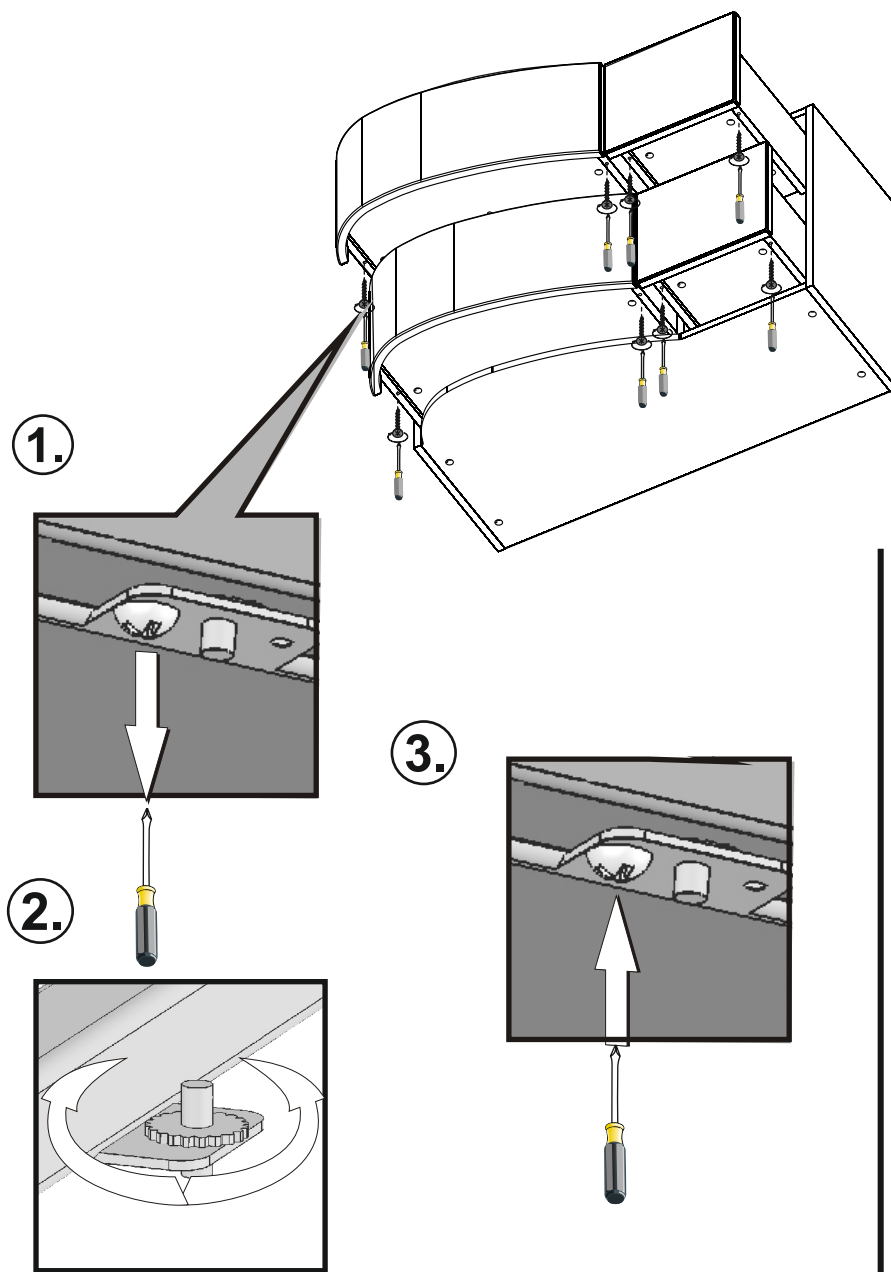

* UP - DOWN

