
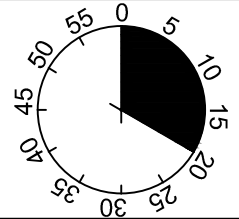
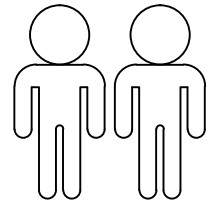





Bergen

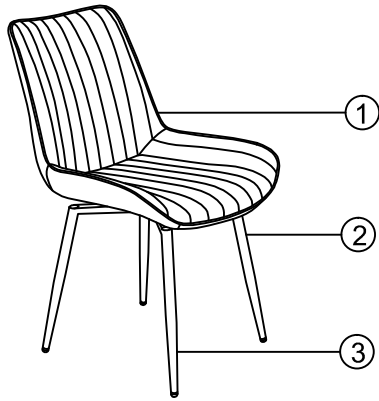


1

2

3

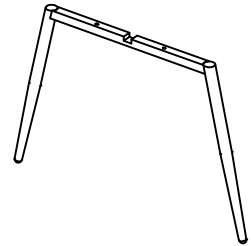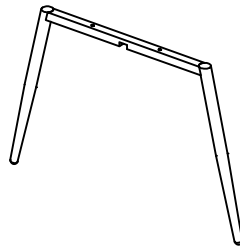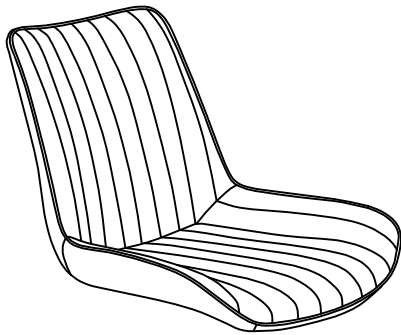


4


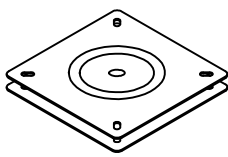


DT 266 N 160x160mm

1	1 x
2	1 x
3	1 x
4	1 x






1/1

A	M6X13	B	M6x16	C	M6x25	D	Ø18xØ6x1.5	E	Ø18xØ8x10	F	5MM
	4x		6x		2x		8x		2x		1x
G	T3.0x85x85										
	1x										


I.



1

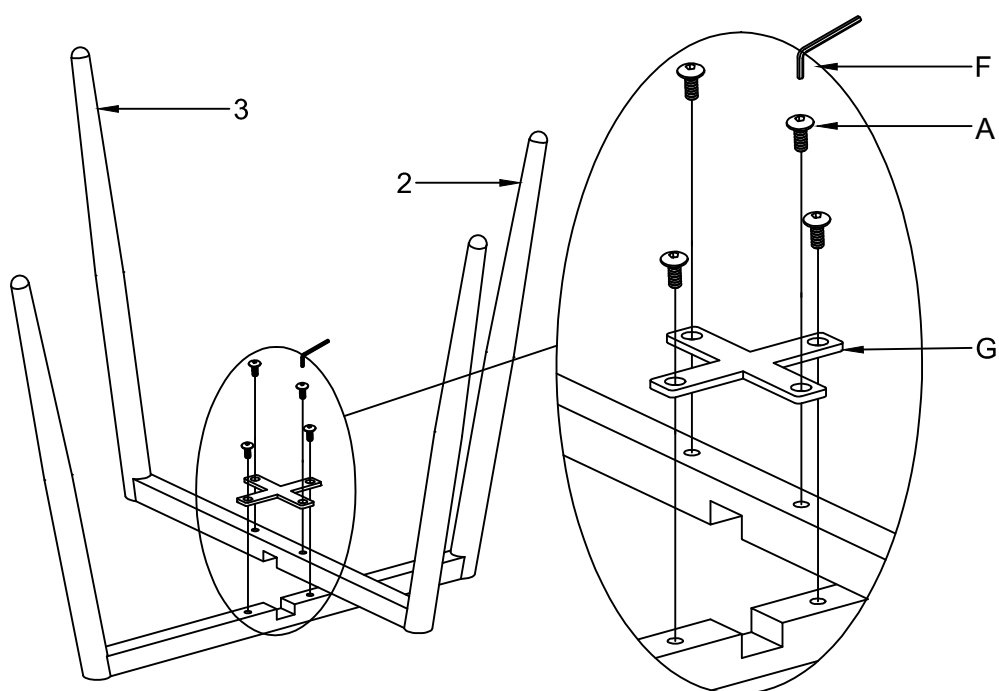

A	M6x13 
	4x
F	5MM 
	1x
G	T3.0x85x85 
	1x
75%	


2


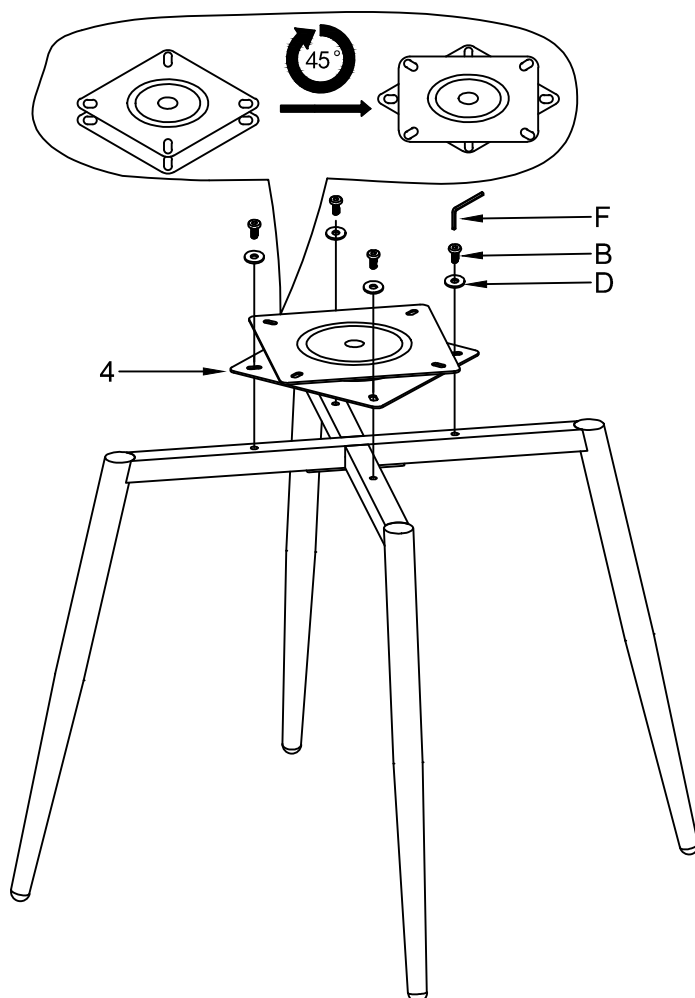


B	M6X16 
	4x
D	Ø18xØ6x1.5 
	4x
F	5MM 
	1x
100%	


II.



3

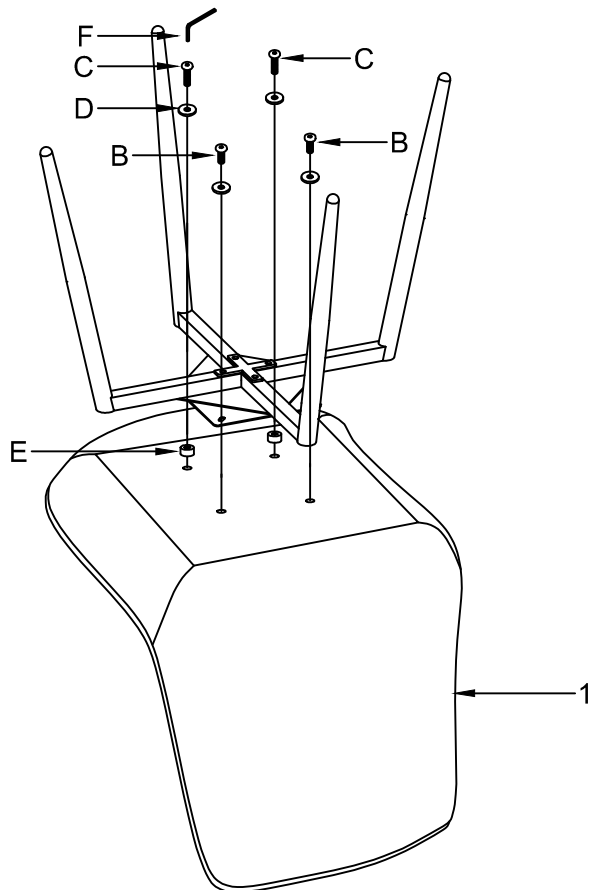

B	M6X16
	2x
C	M6X25
	2x
D	Ø18xØ6x1.5
	4x
E	Ø18xØ8x10
	2x
F	5MM
	1x
	

4

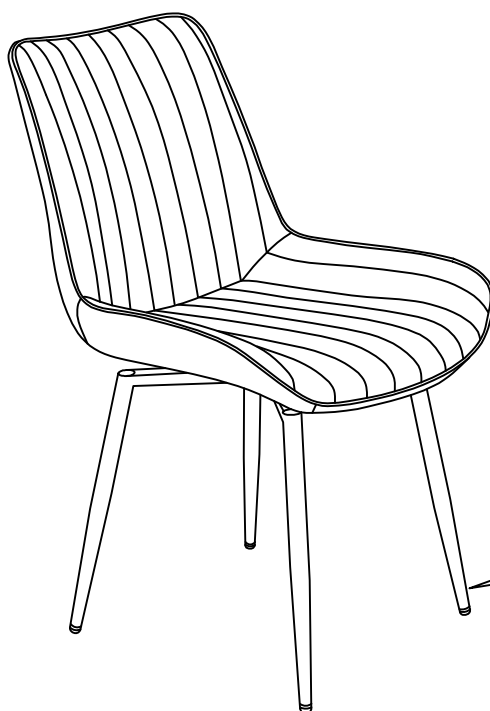

F	5MM
	1x
	



LE TRI
+ FACILE



Séparez les éléments avant de trier