
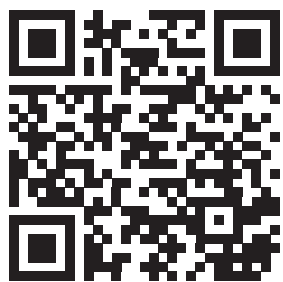



-T78-1 -T92-1 -T110-1

Montageanweisung / Installation instructions / Instruc on de montage / Istruzioni di montaggio
montagehandleiding / Instrukcja montazu / Montaj talimatlar / Osszeszer si utmutat t / N vod k mont zi /
N vod na montaz / Instruc une de montaj / Инструкция по монтажу / Montaj talimatina / Monteringsanvisningar
Upute za monta u / Instrucciones de Montaje / Navodila za monta o

AMBURGO

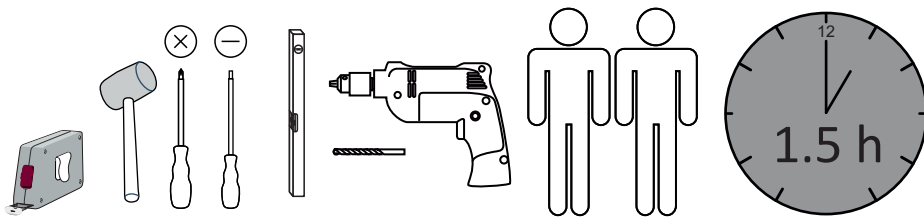

110 cm.
92 cm.
78 cm.

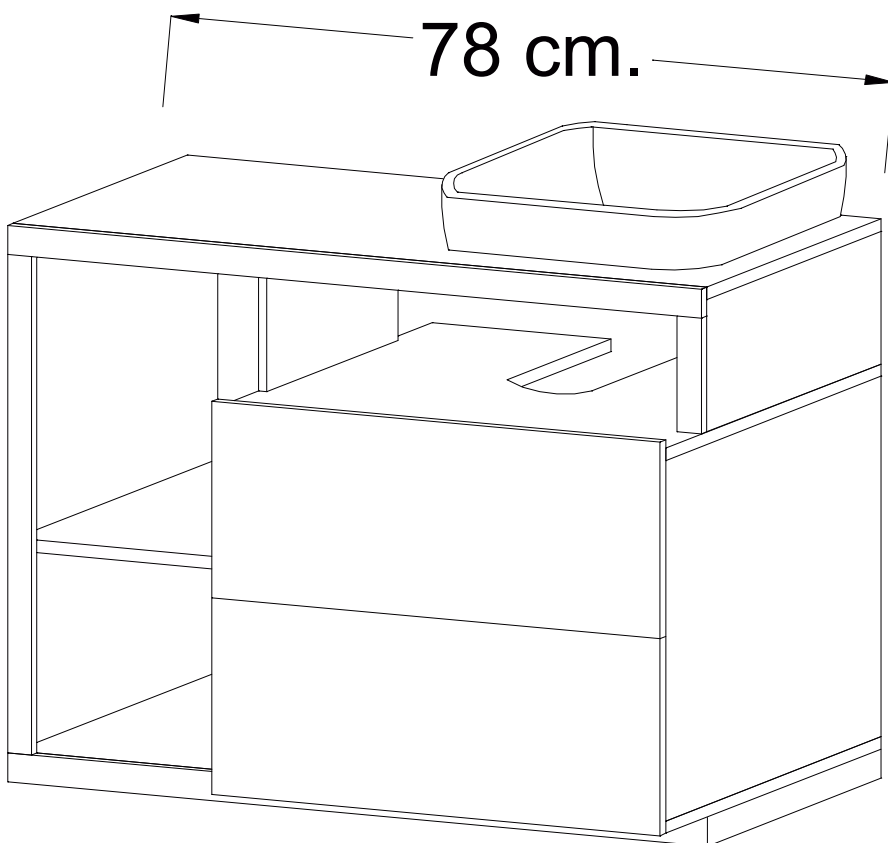

D–bit  lesen sie diese montageanleitung gut durch,
Da wir f r fehler, die durch falsche montage entstehen,
Keine ha ung  bernehmen!

Gb–please read these installaEon instrucEons Through
carefully as we cannot accept any liability
For faults occurring as a result of incorrect installaEon!

Cz–pre t te si prosim pozorn tento n vod k mont zi,
Aby jste p ede li chyb m vznikl ch patnou mont zi,
Za kter neru ime!

F–veuillez lire a enEvement ce e no ce de montage,
Car nous d clinons toute responsabilit  en cas d'erreurs
D coulant d'un montage erron  !

I–prego leggere a entamente le istruzioni per il montaggio,
Poich  decliniamo qualsiasi responsabilit 
Per dife derivanEda montaggio errato.

S– l s monteringsanvisningarna noggrant.
Vi av ger oss allt ansvar f r defekter som
Uppst r p.g.a. Felak g montering.

Hr–pa ljivo pro itajte upute za monta u,
Jer otklanjamo svaku odgovornost za pogre ke
Nastale uslijed pogre ne monta e.

Slo–prosimo, da pozorno preberete navodila za monta o,
Saj zavra amo vsakr no odgovornost za napake,
Ki bi nastale zaradi napa ne monta e.

NI–leest u alstublie de montagehandleiding goed door,
Voor fouten door verkeerde montage zijn wij niet verantwoordelijk.

PI–prosz  uwaznie zapoznac sie z instrukcja montazu,
Poniewaz nie ponosimy odpowiedzialnosci za niewlasciwy montaz.

HU–K rj k, olvassa elfigyelmesen
ezt az  sszeszerel si  tmutat t,
mert a helytelen  sszeszerel sb l
a d d  hib k rt nem v llalunk felel ss get!






SK–Prosime, dobre pre itajte si tento n vod na mont  ,
preto e nepreber me iadne ru enie za chyby,
ktor  vznikn  na z klade chybnej mont  e!

RO–V rug m s ciEEcu aten e aceste instruc uni
de montaj deoarece nu prelu m garan a pentru defecte
ce apar datorit unui montaj incorect!


RUS–,Пожалуйста внимательно ознакомьтесь  
с данной инструкцией по монтажу, поскольку мы не
несем ответственности за ошибки, причиной которых
является неправильный монтаж.

TU–,Ilkonce kullanma klavuzunu iyi okkuyun yaln s montaj
yapasan z bunun sorumlusu biz degiliz.

ES–Se ruega leer con atenci n las instrucciones
de montaje deibido a que declinamos cualquier
responsabilidad por defectos derivados de un montaje
err neo.

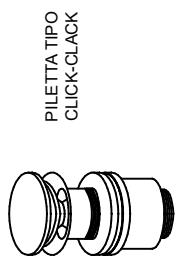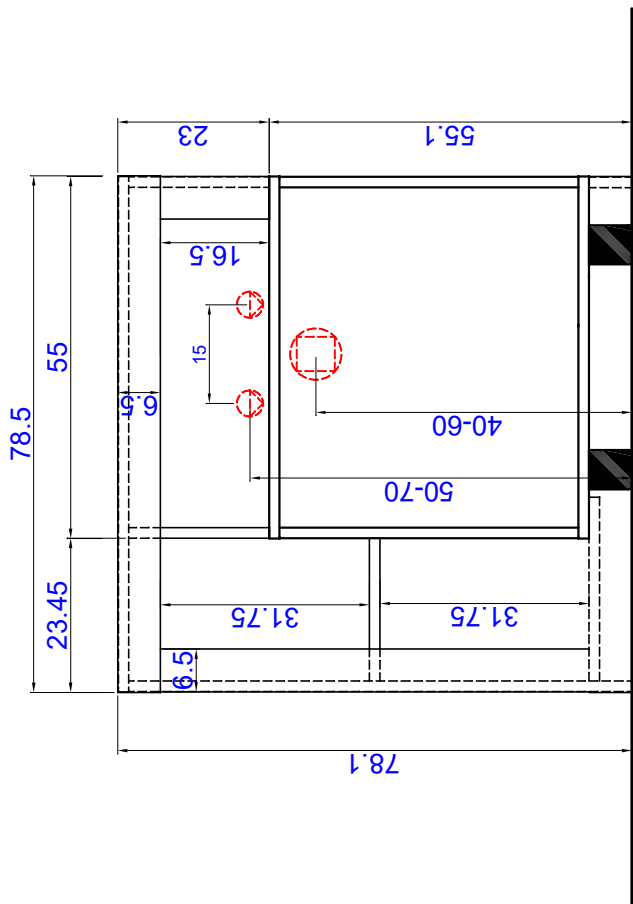
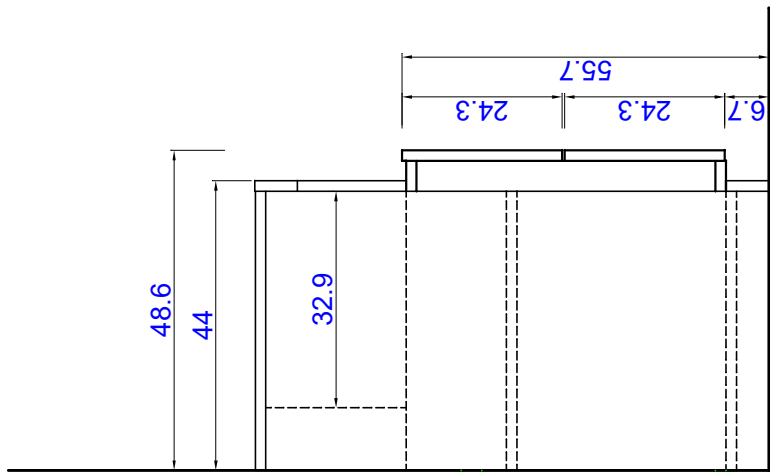
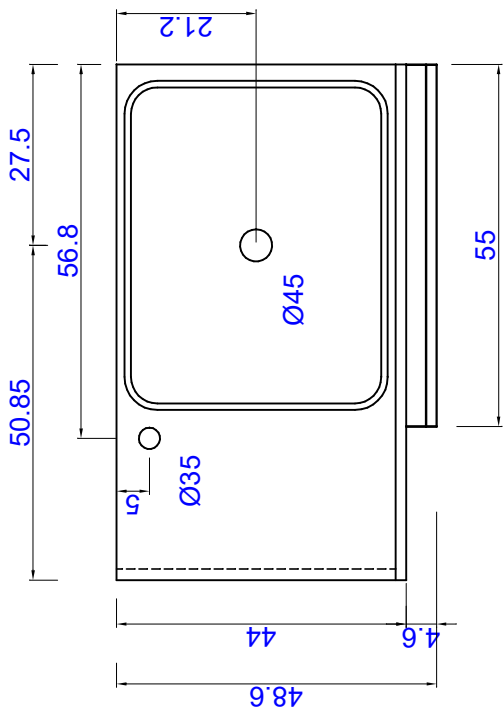
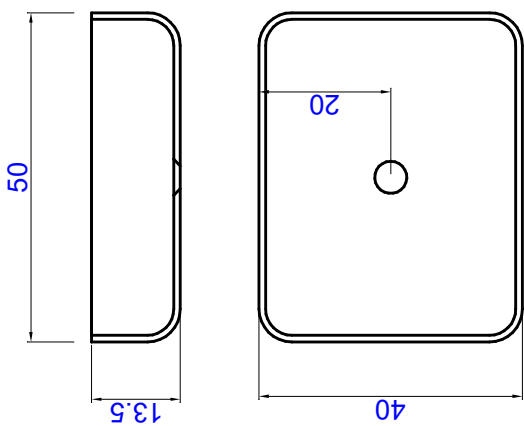


PILETTA TIPO
CLICK-GLACK

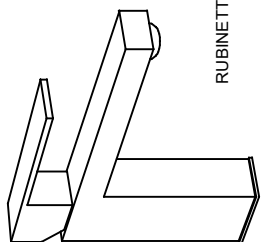


RUBINETTERIA

NOT INCLUDED

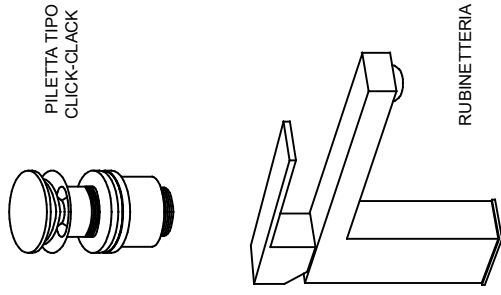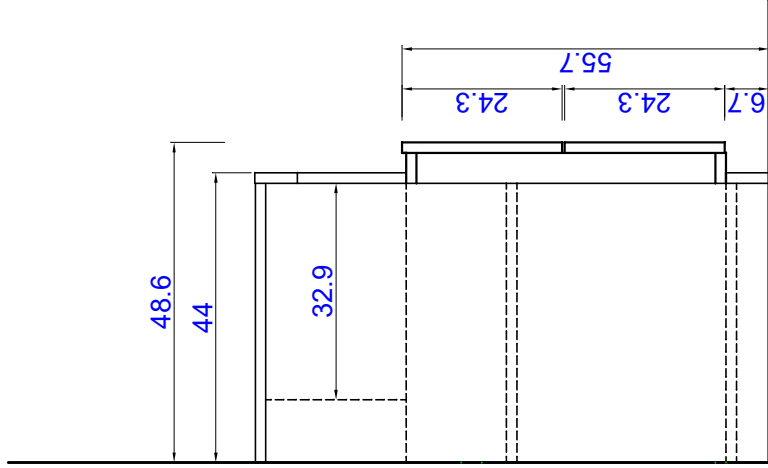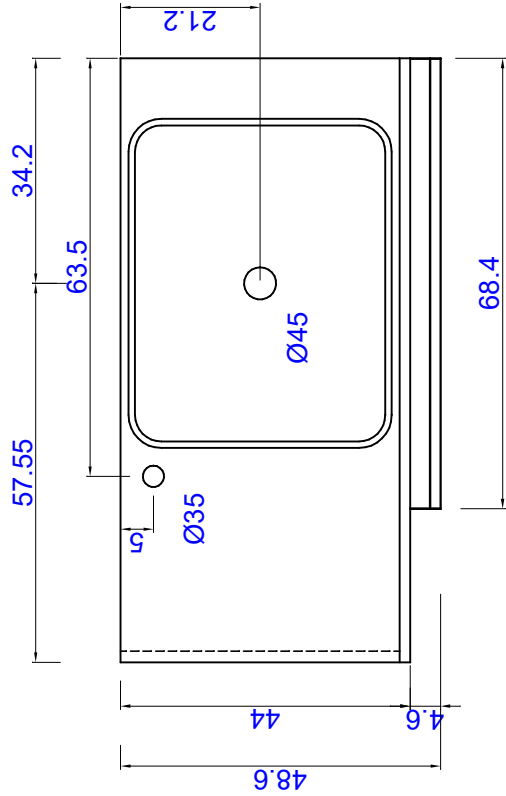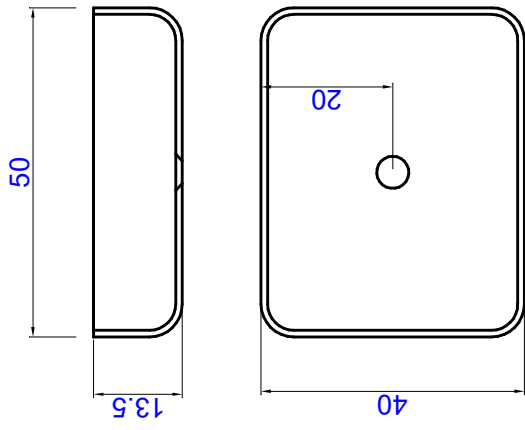





NOT INCLUDED















-92












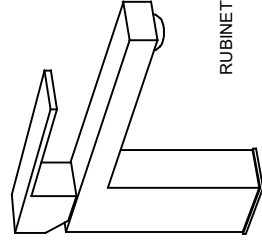
















PILETTA TIPO
CLICK-CLICK


RUBINETTERIA

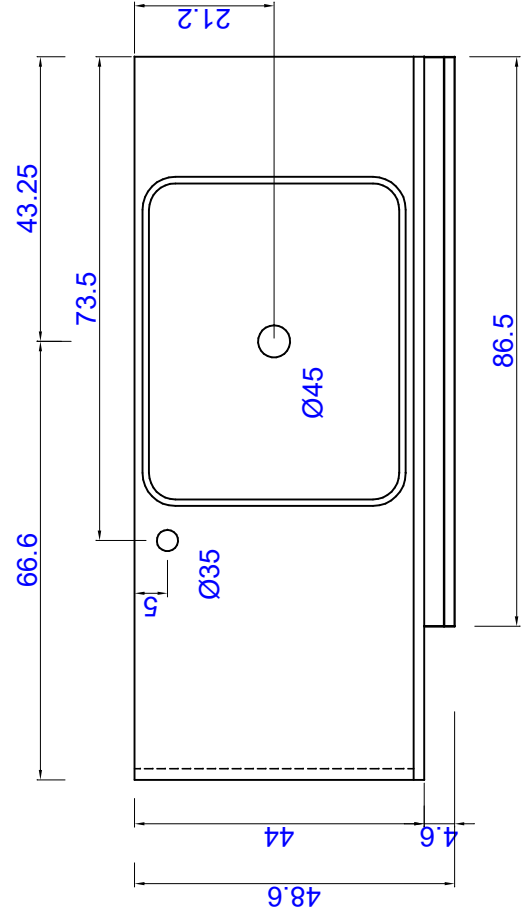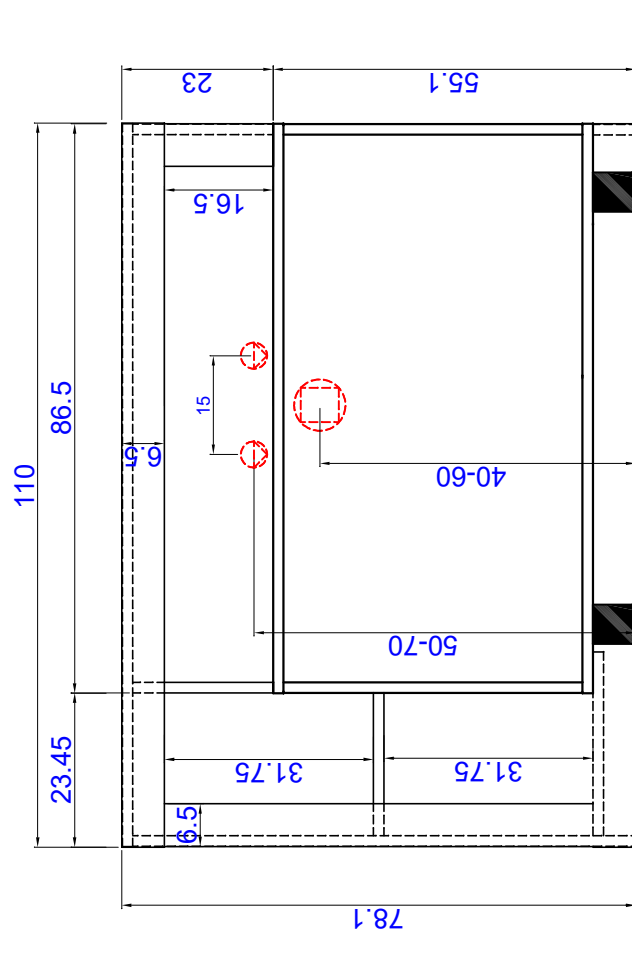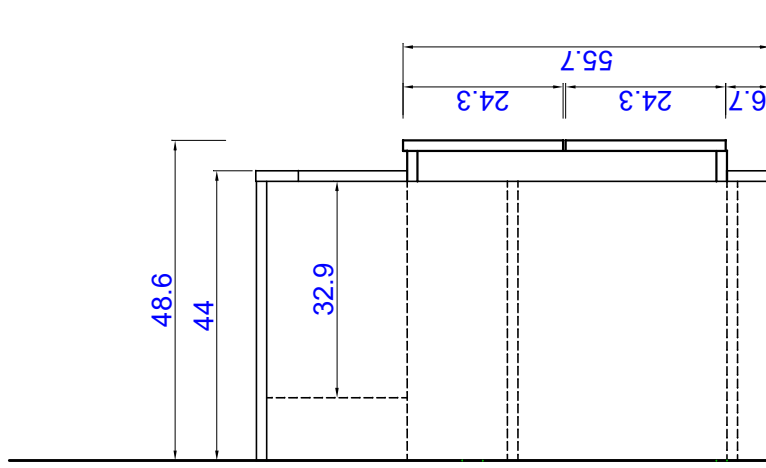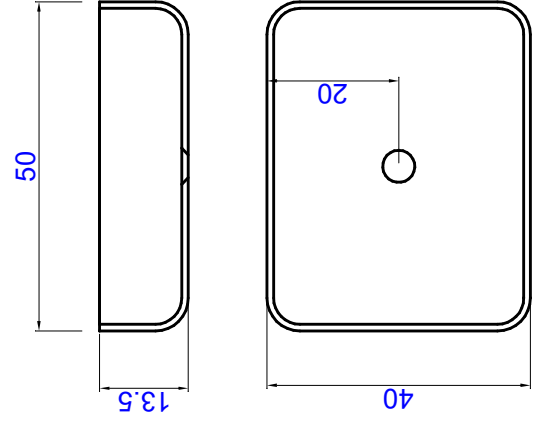

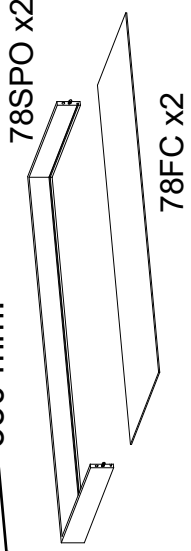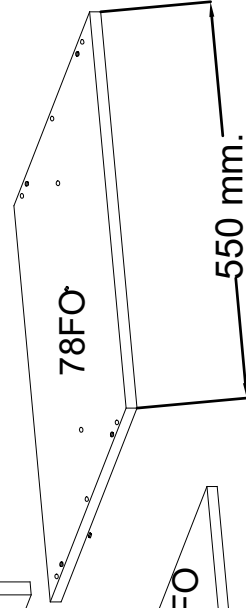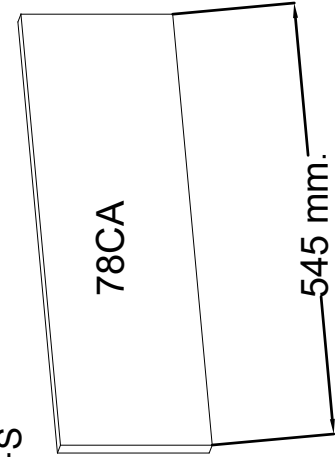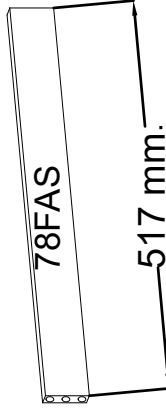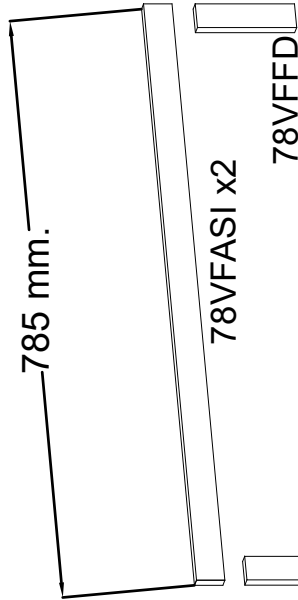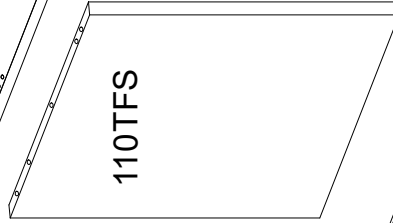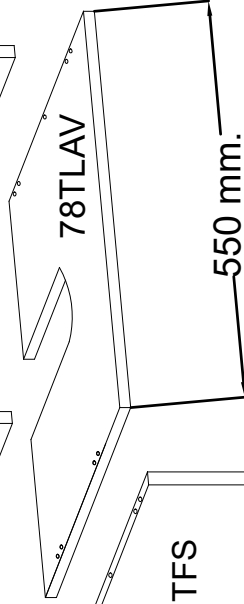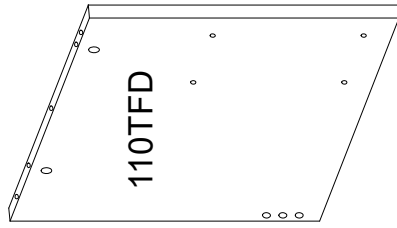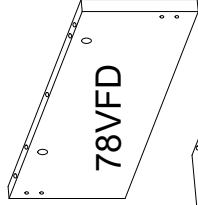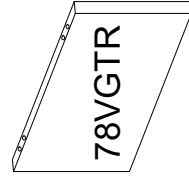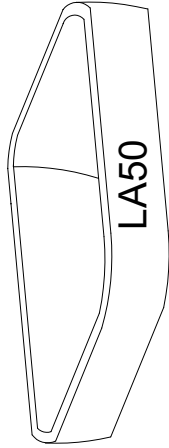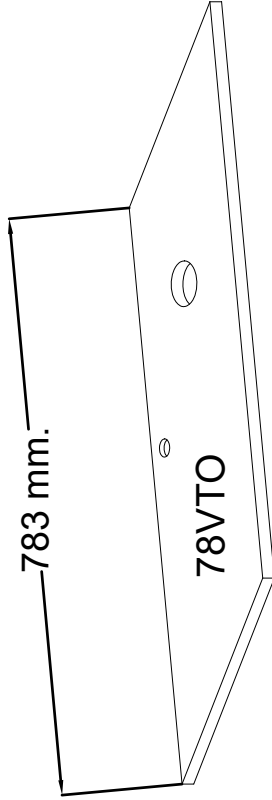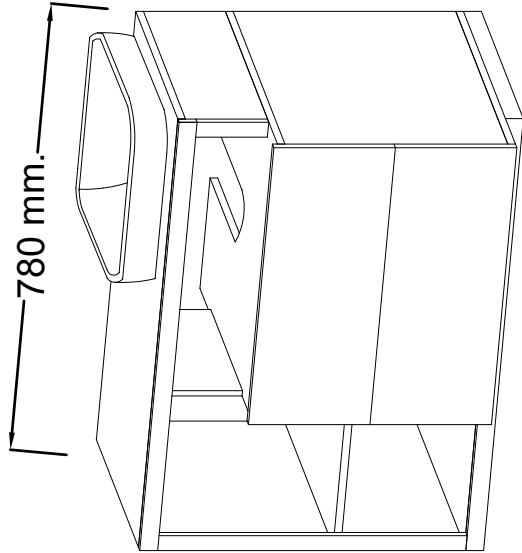


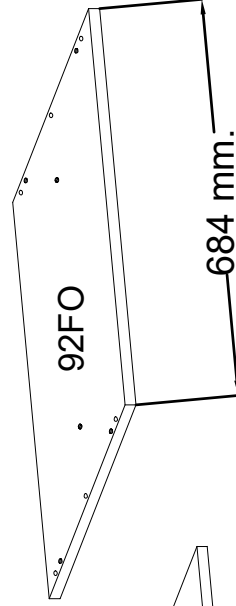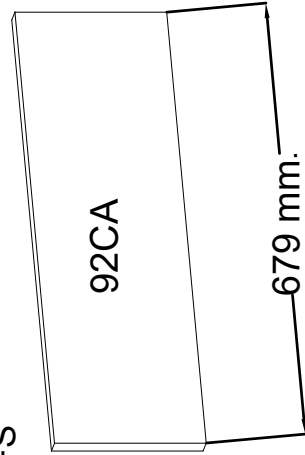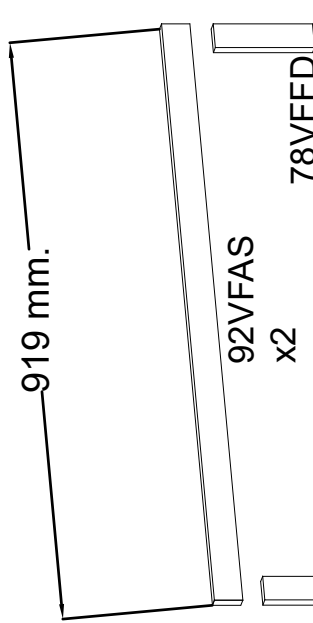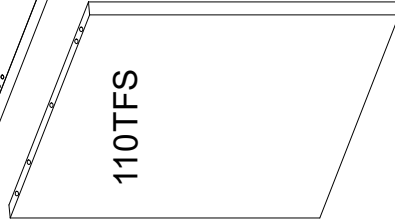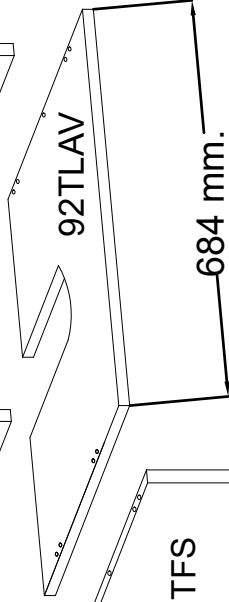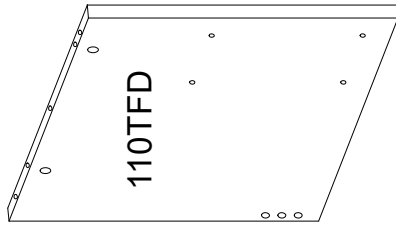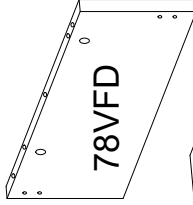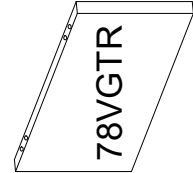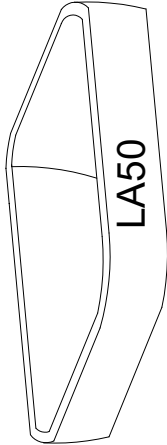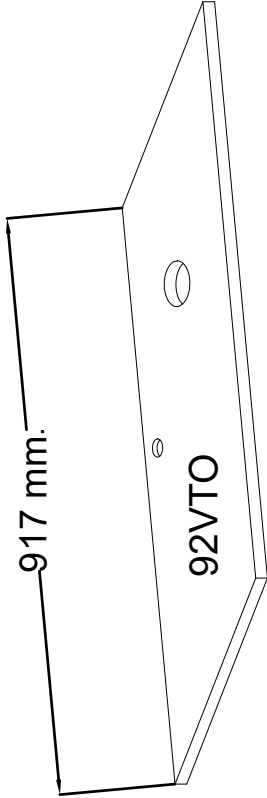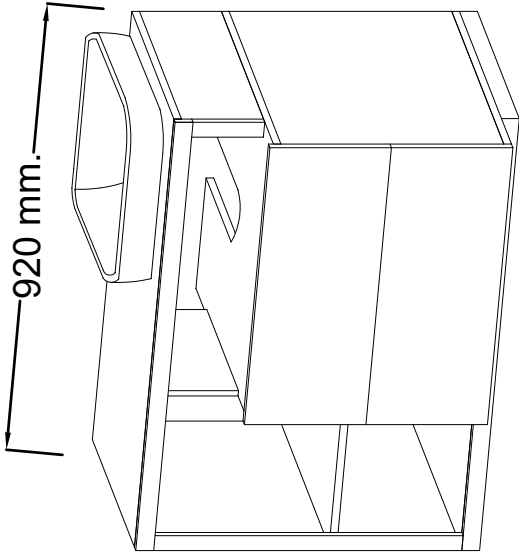

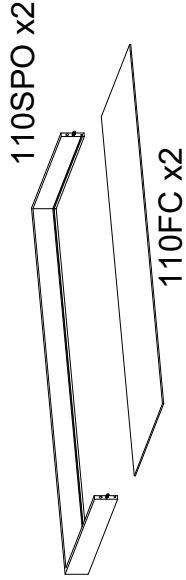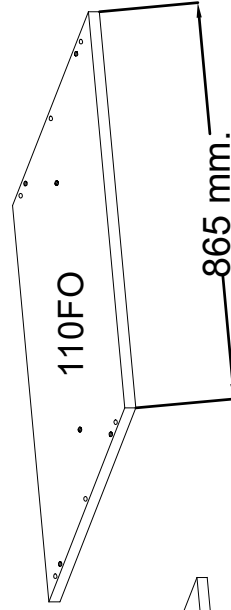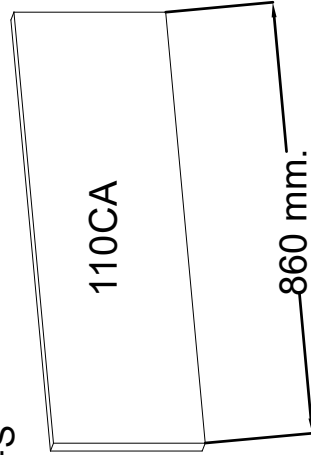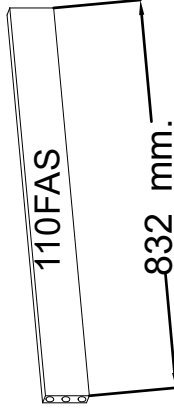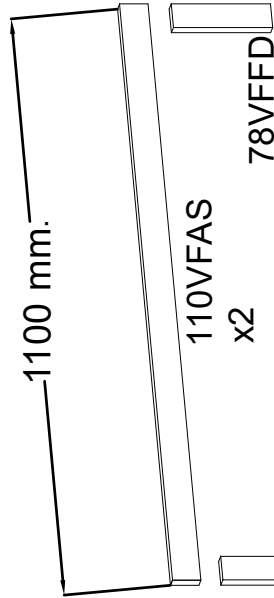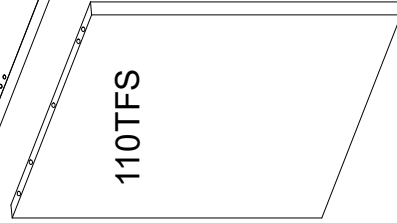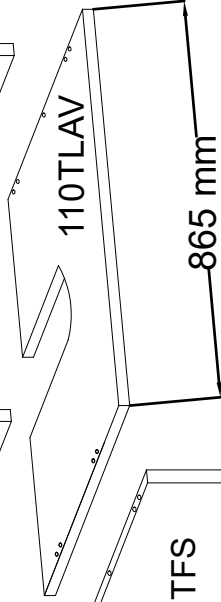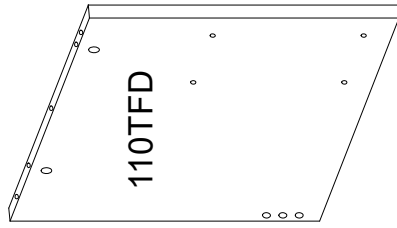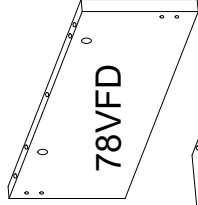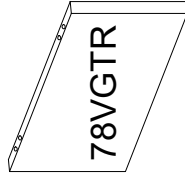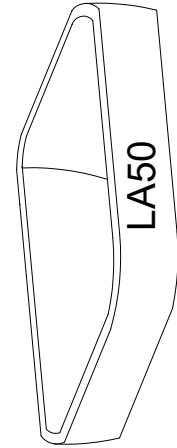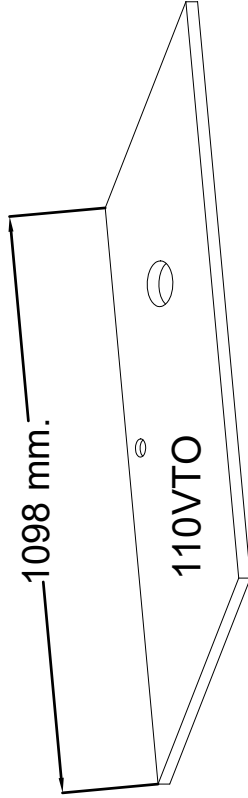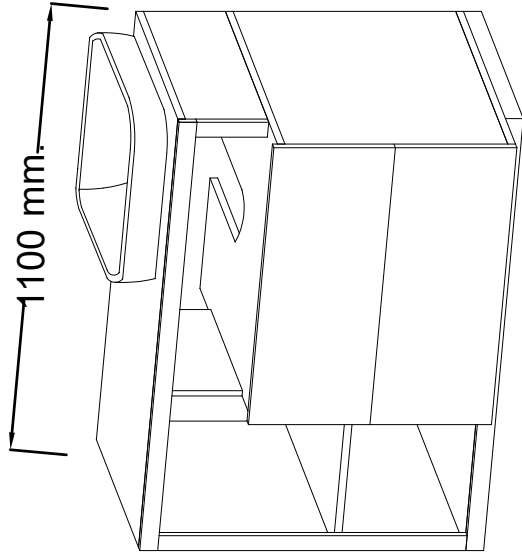


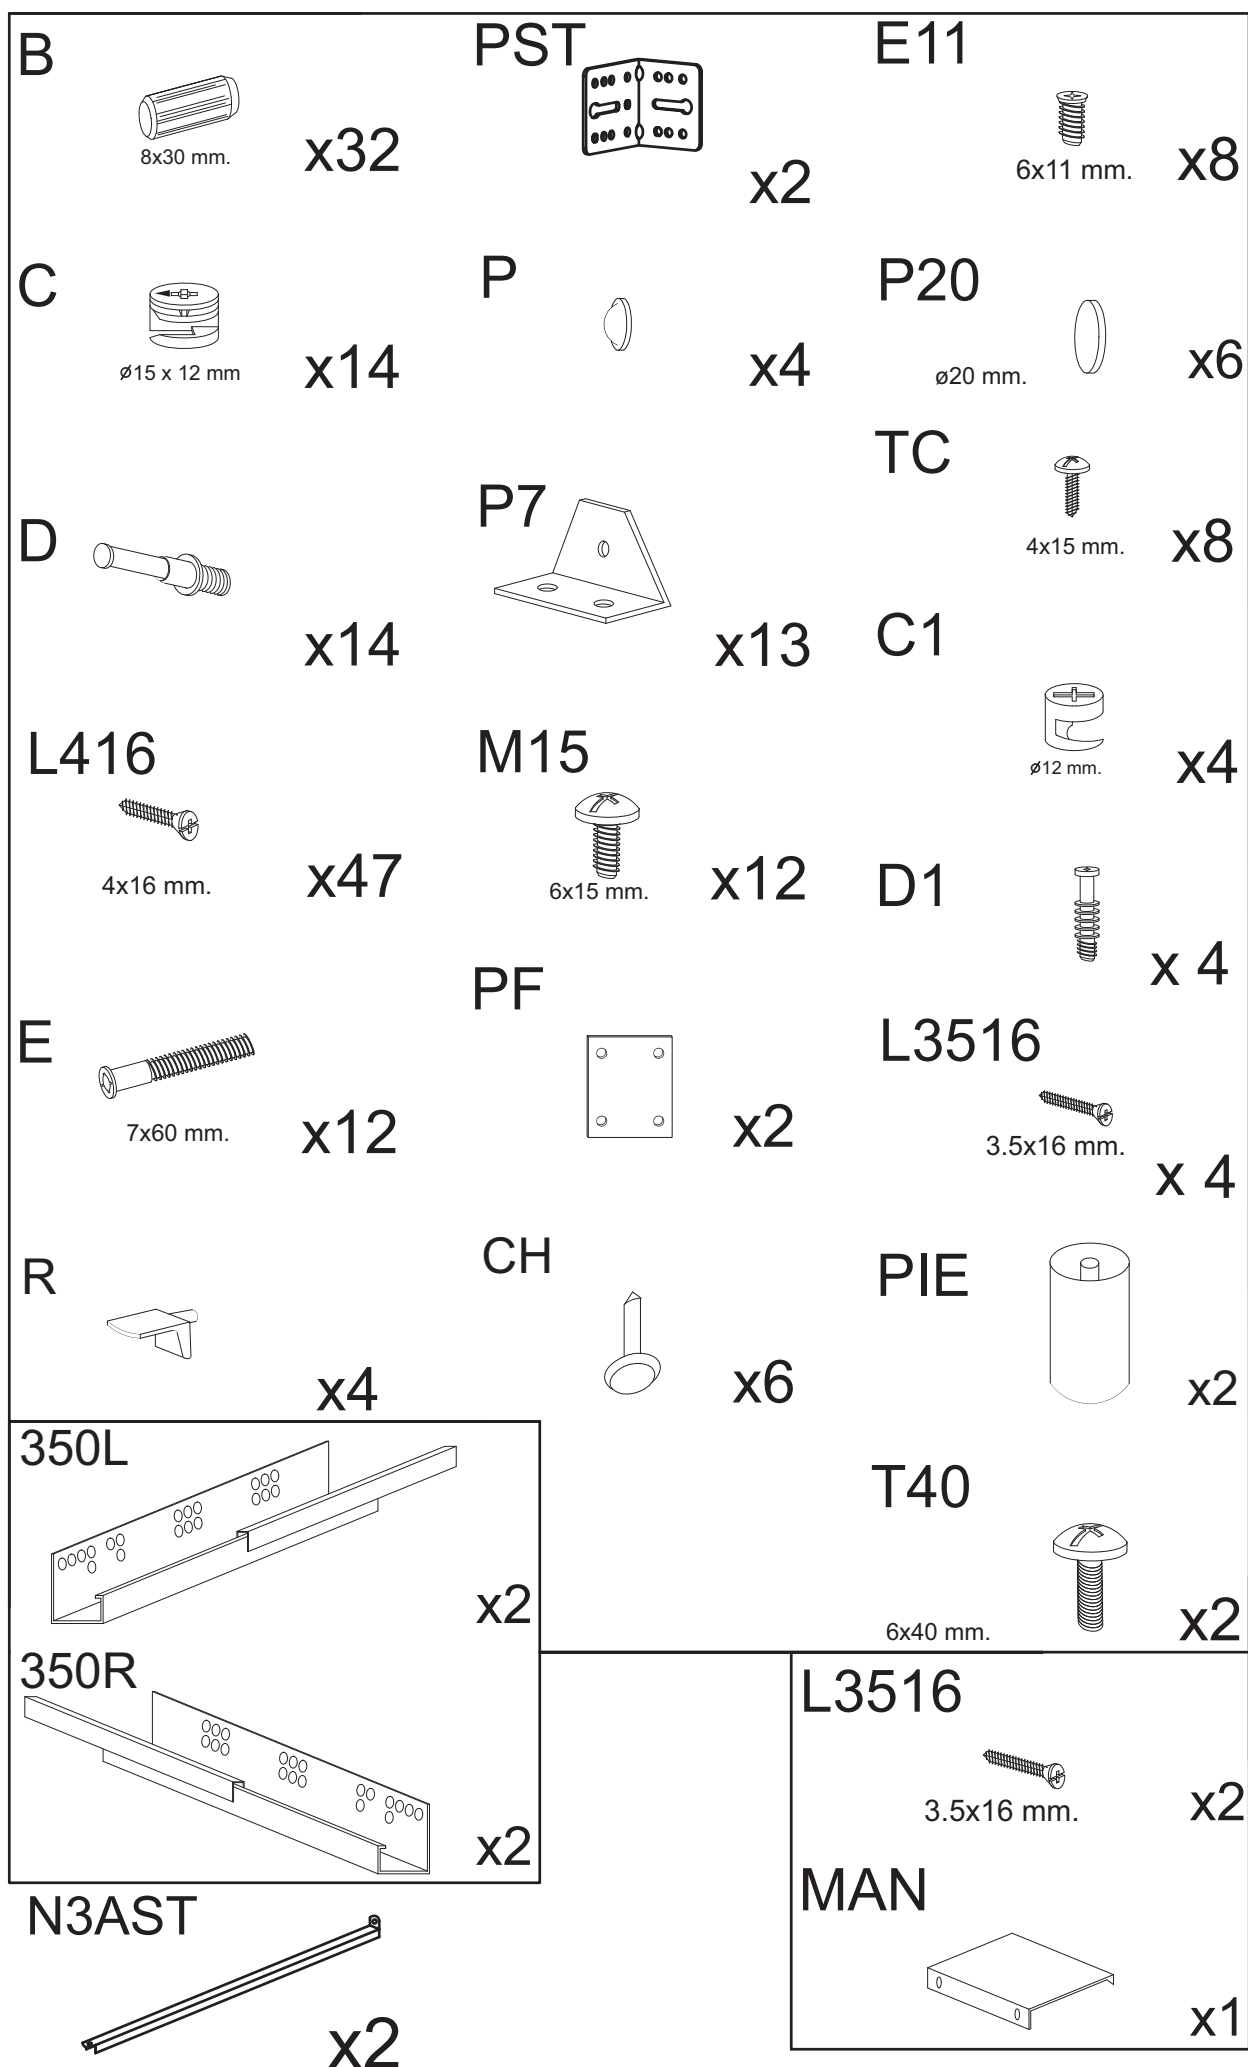

1

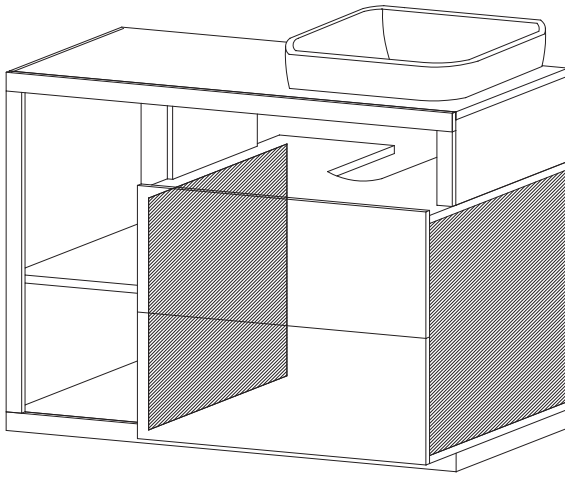


B





x12


D




x4

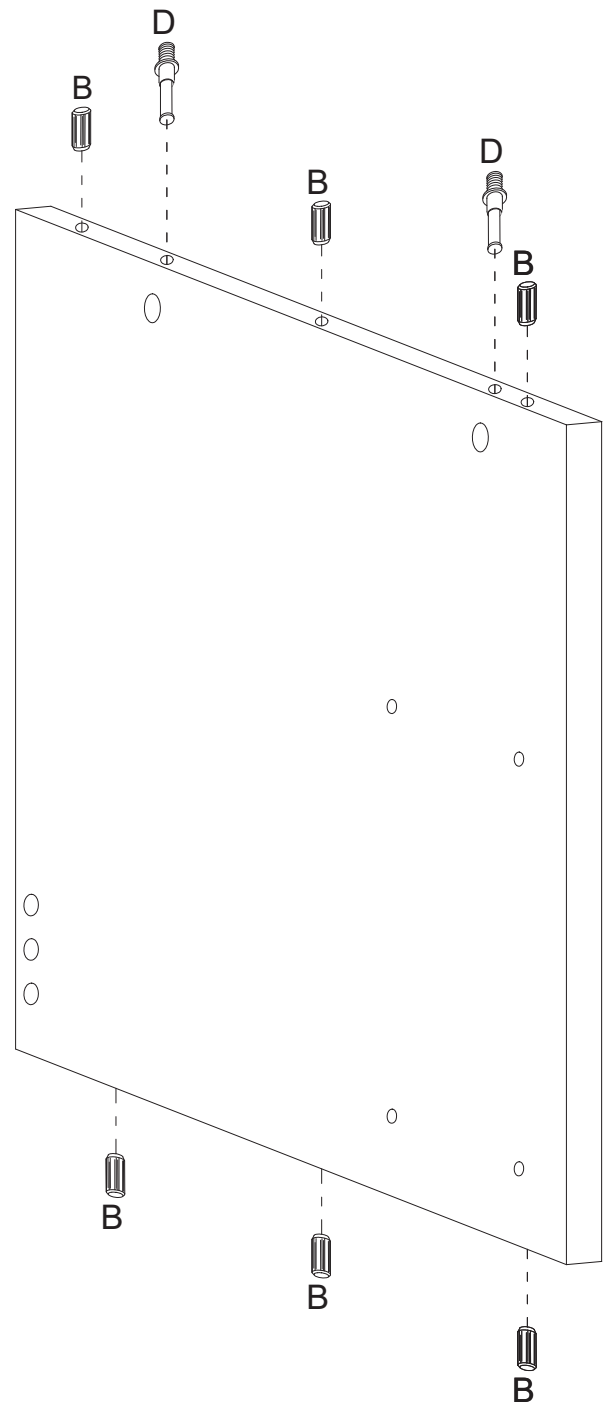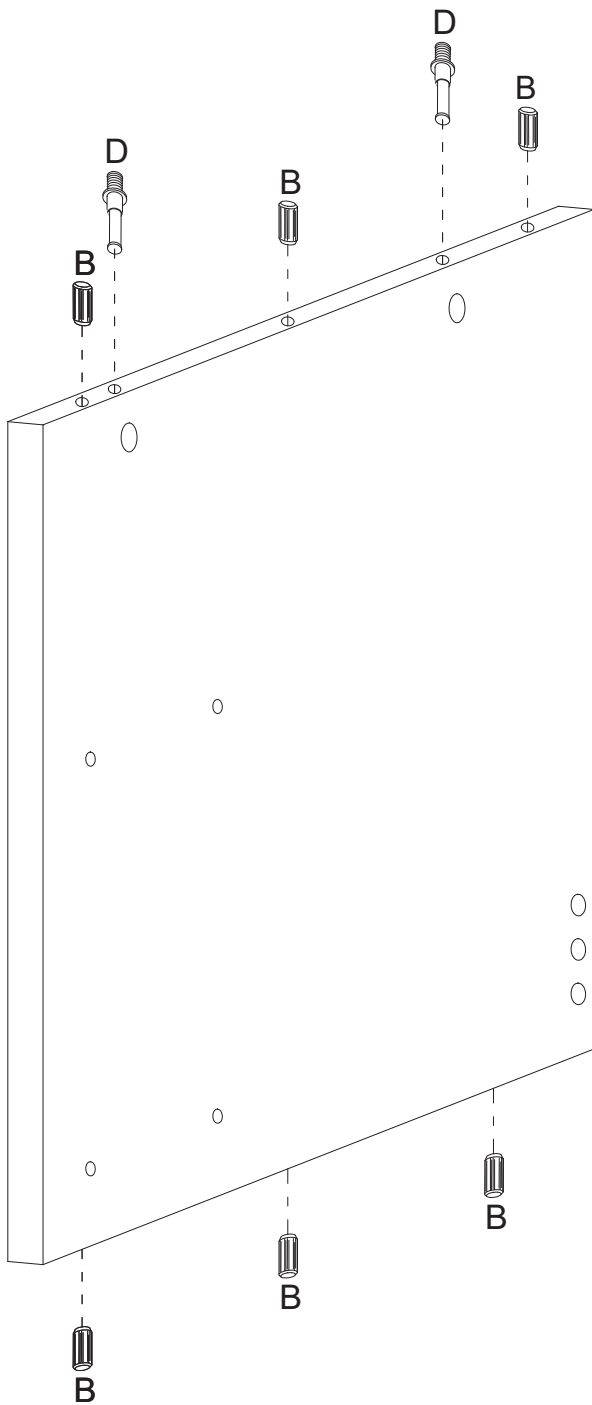

2

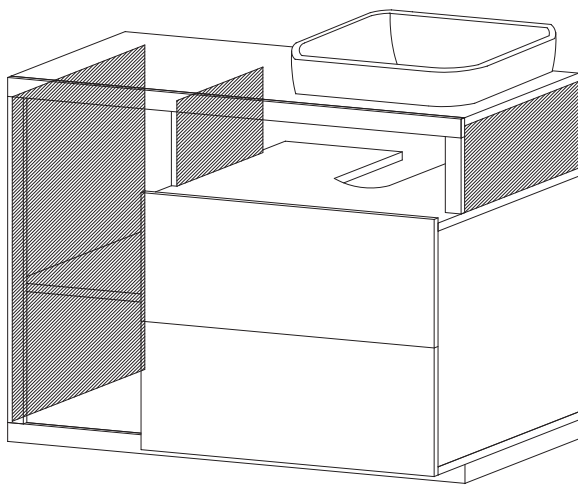


B



8x30 mm.

x17

D



x8


TC



4x15 mm.

x8

ANG



x2


L416










4x16 mm.

x6


P7

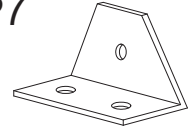

x3

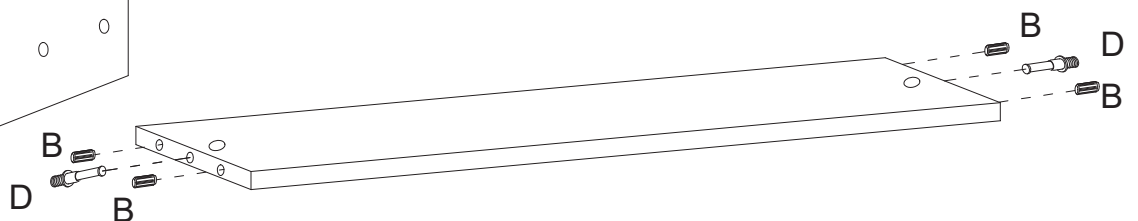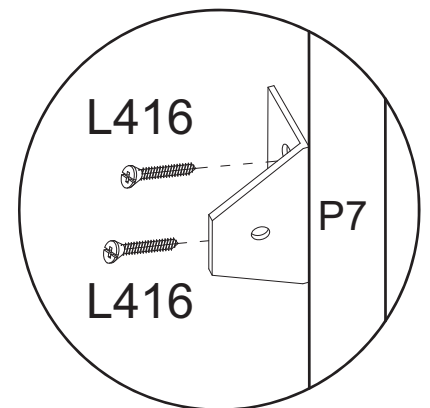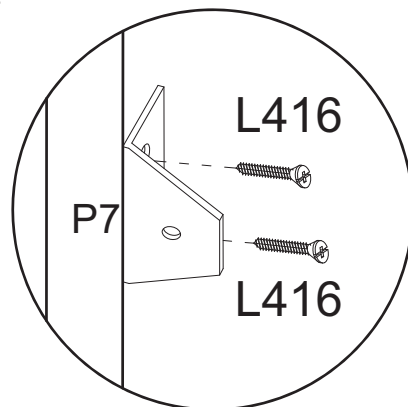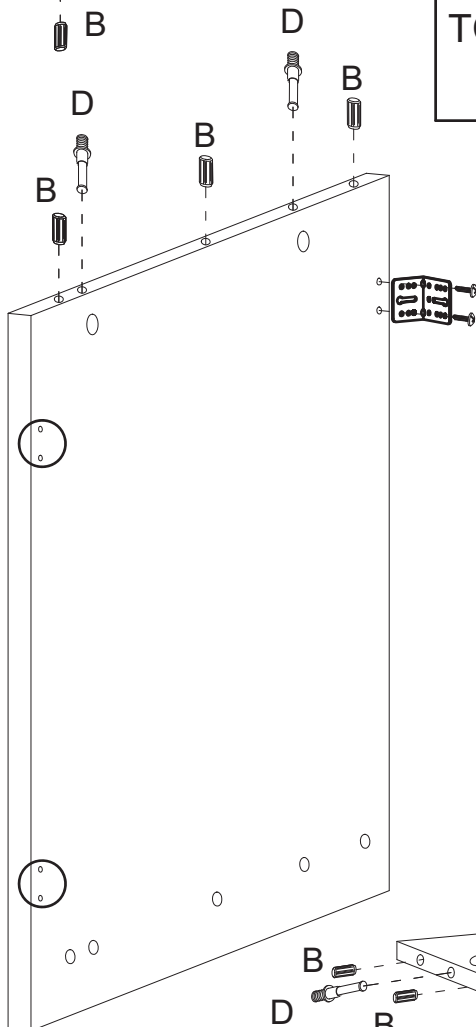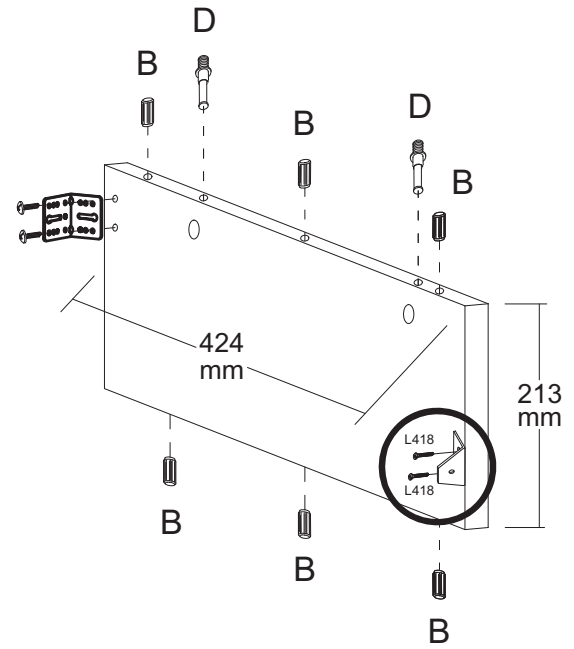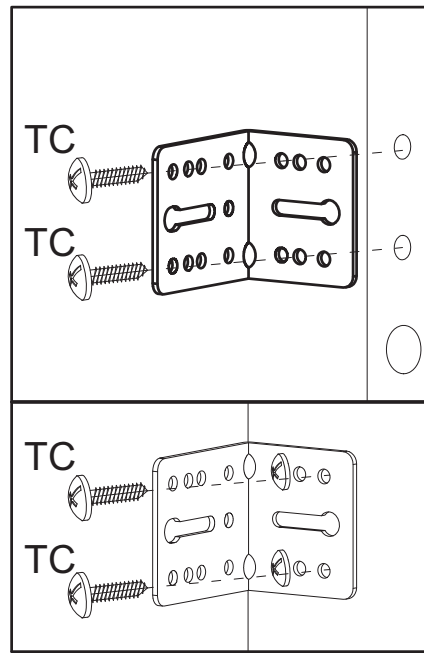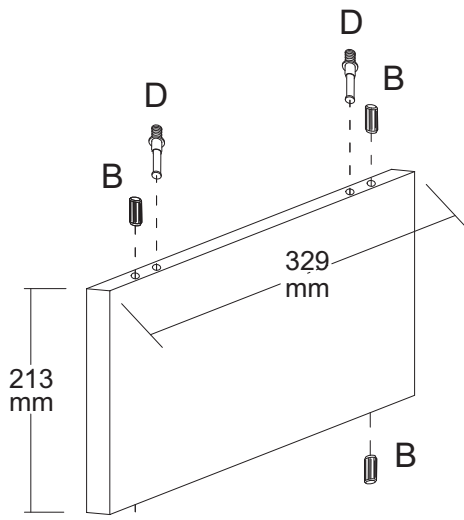

3

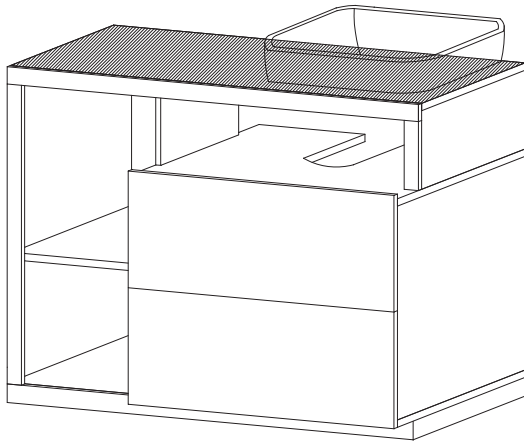


L416

P7





4x16 mm.

x8

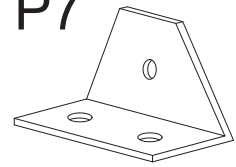


x4

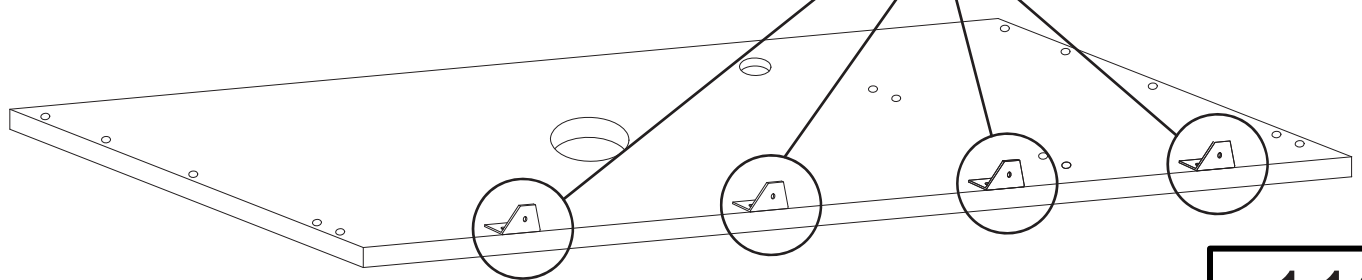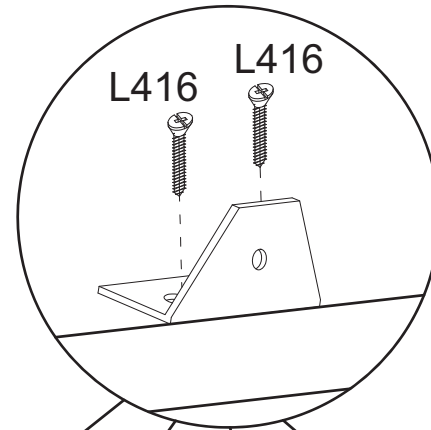

-110

3

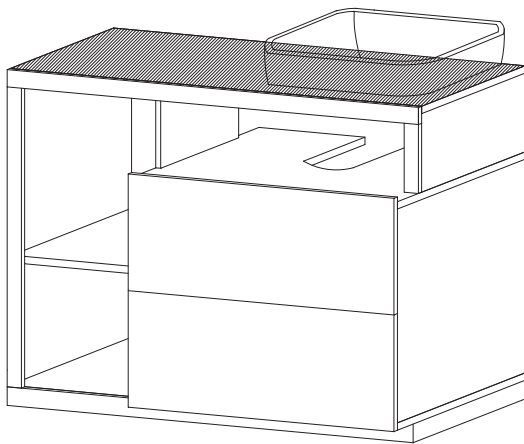


L416

P7





4x16 mm.

x6

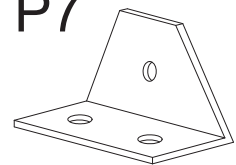


x3

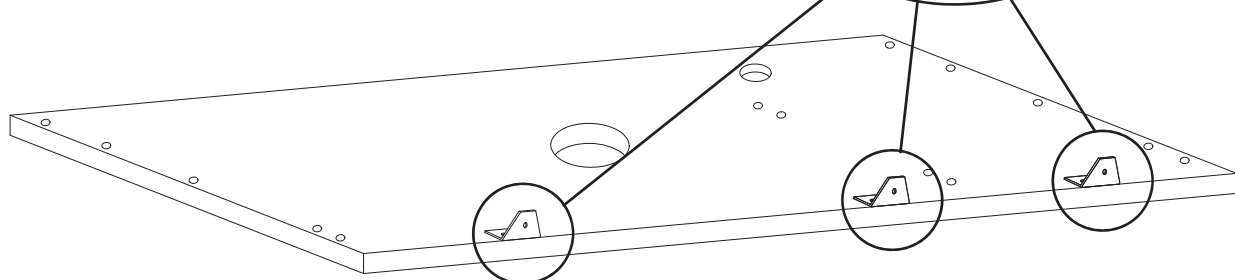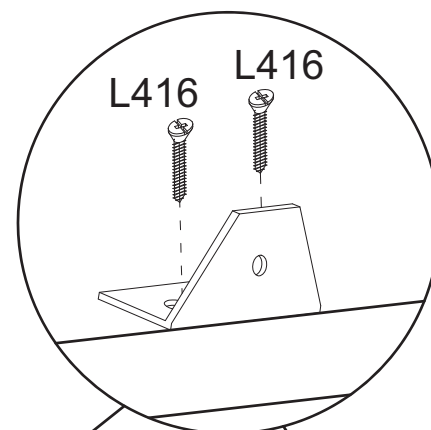

-78

-92

4

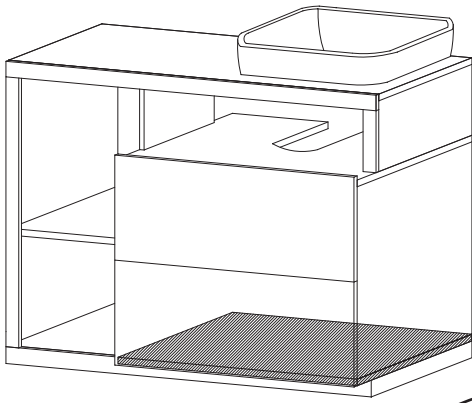

L416




4x16 mm.

x8


T40

6x40 mm.




x2

PIE






x2

P7

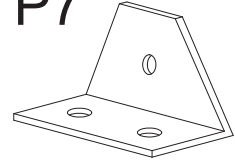


x4

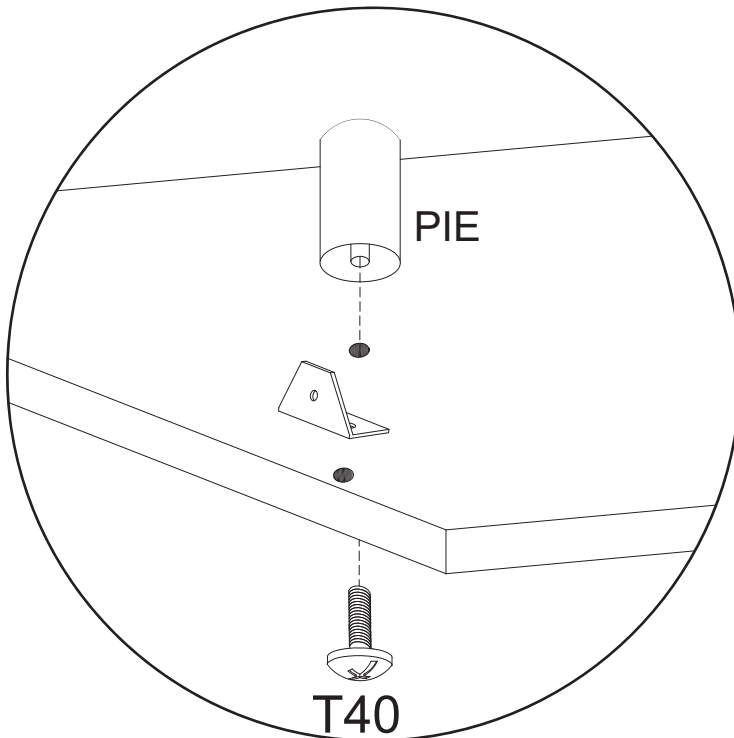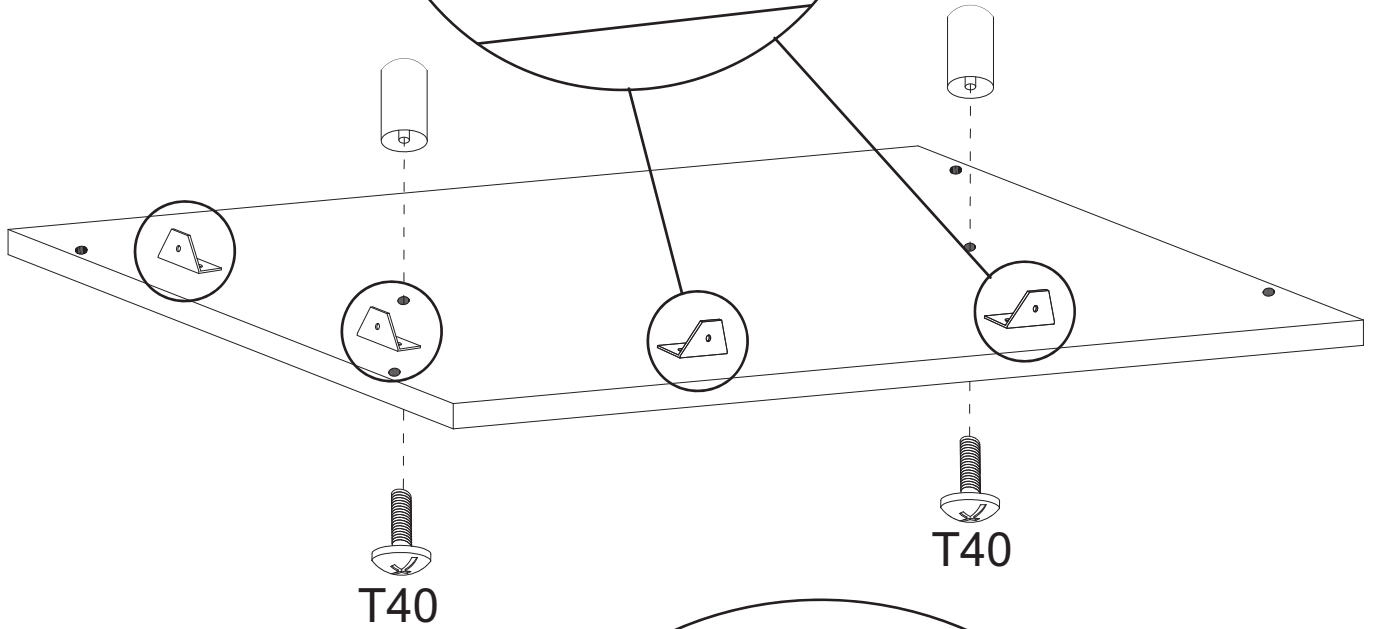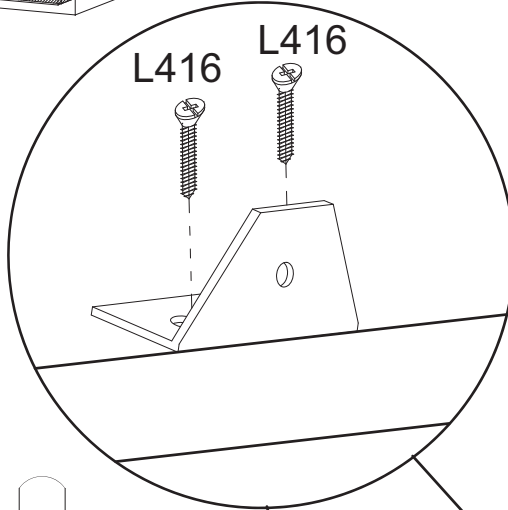

-110

4

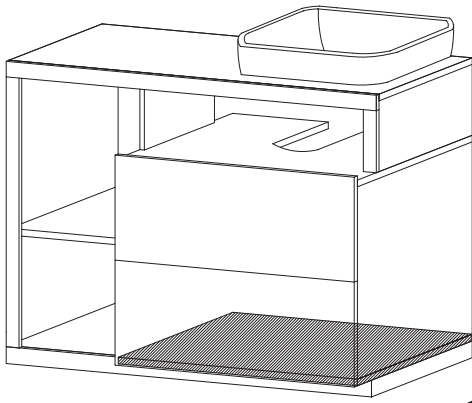

L416




4x16 mm.

x6


T40

6x40 mm.




x2

PIE






x2

P7

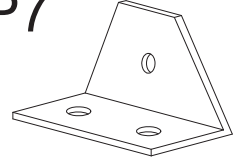


x3

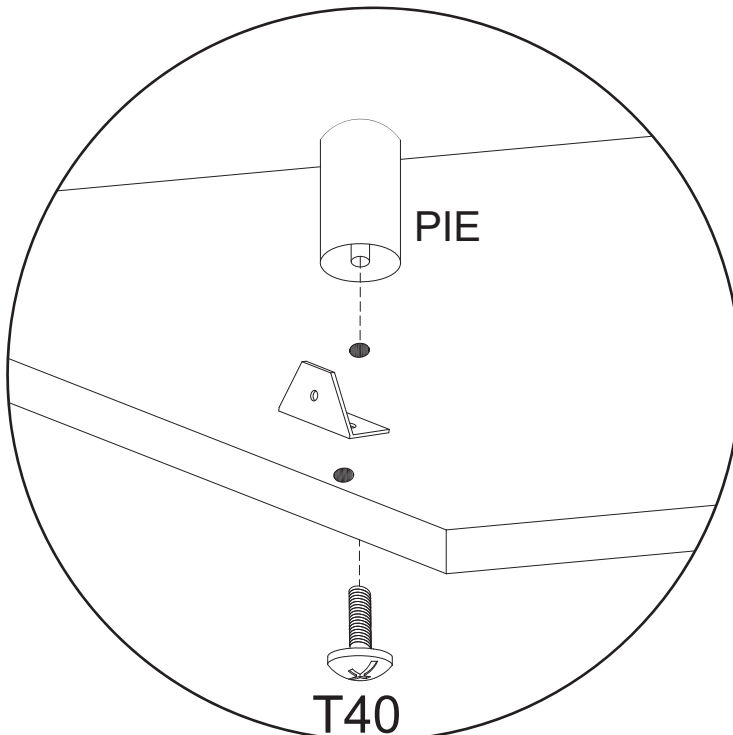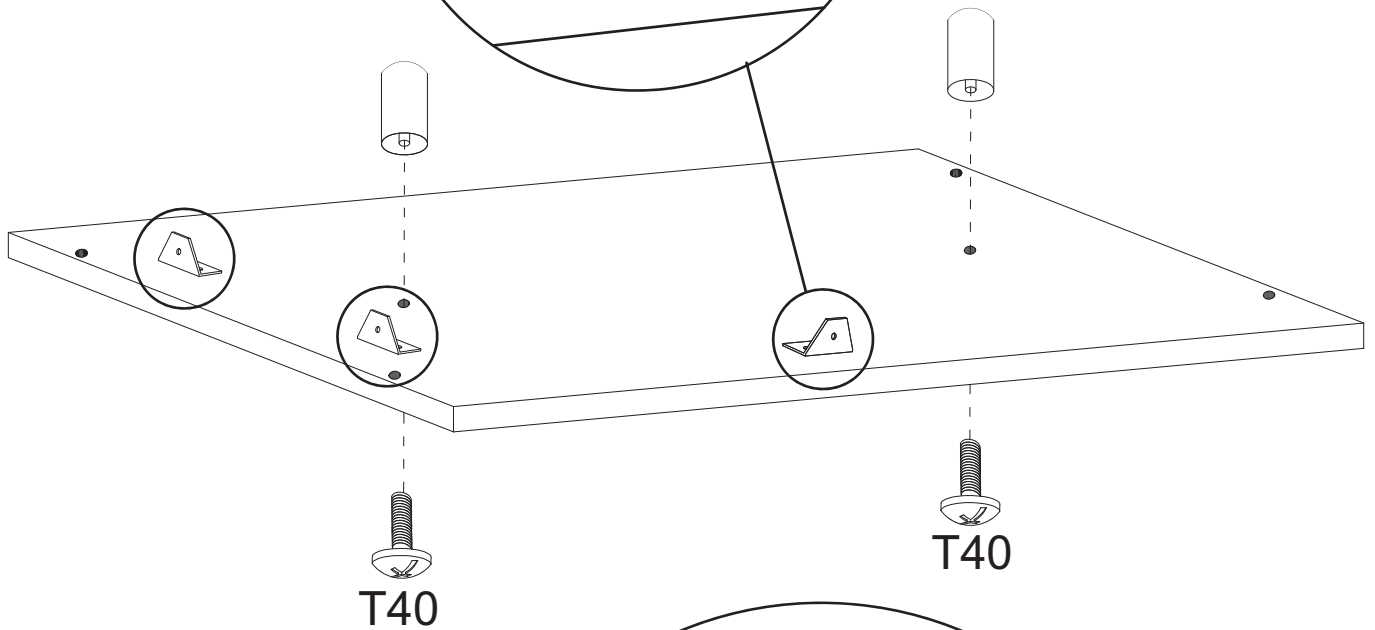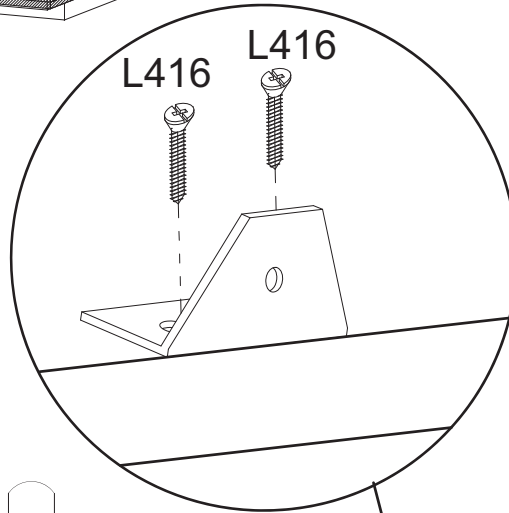


-78
-92


5

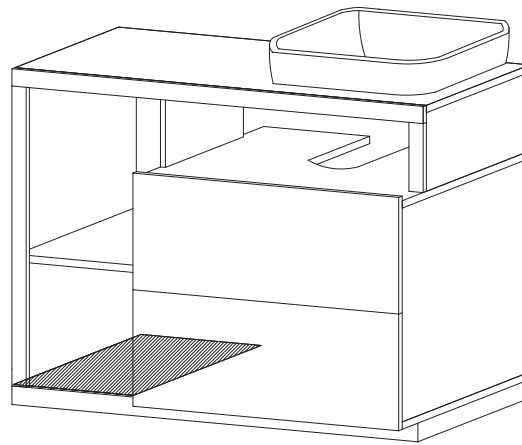


B






D




P7

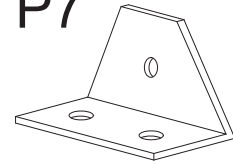



L416

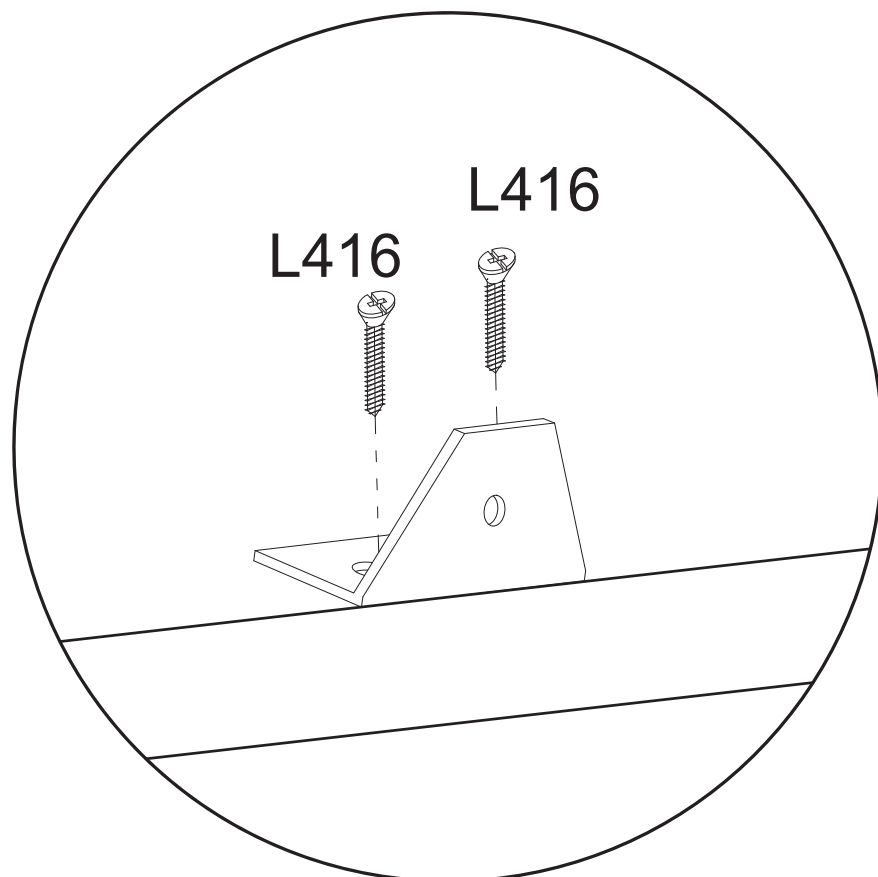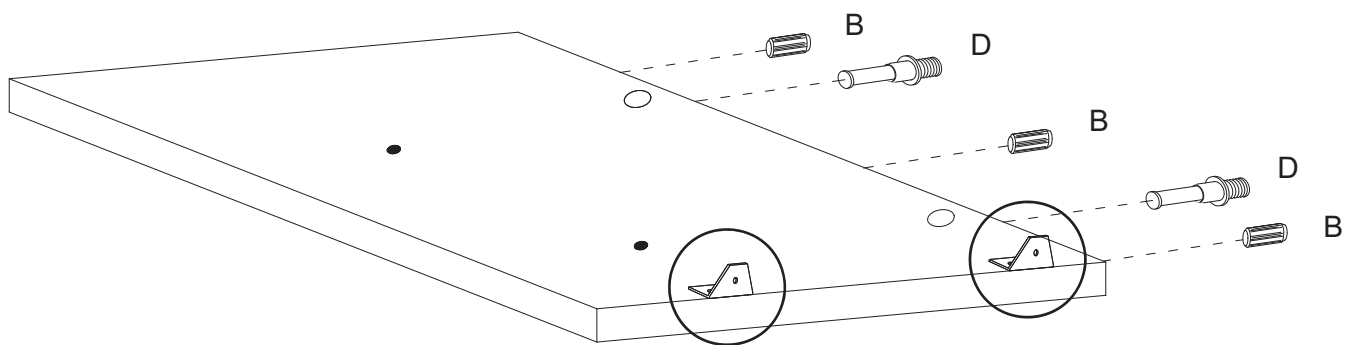

6

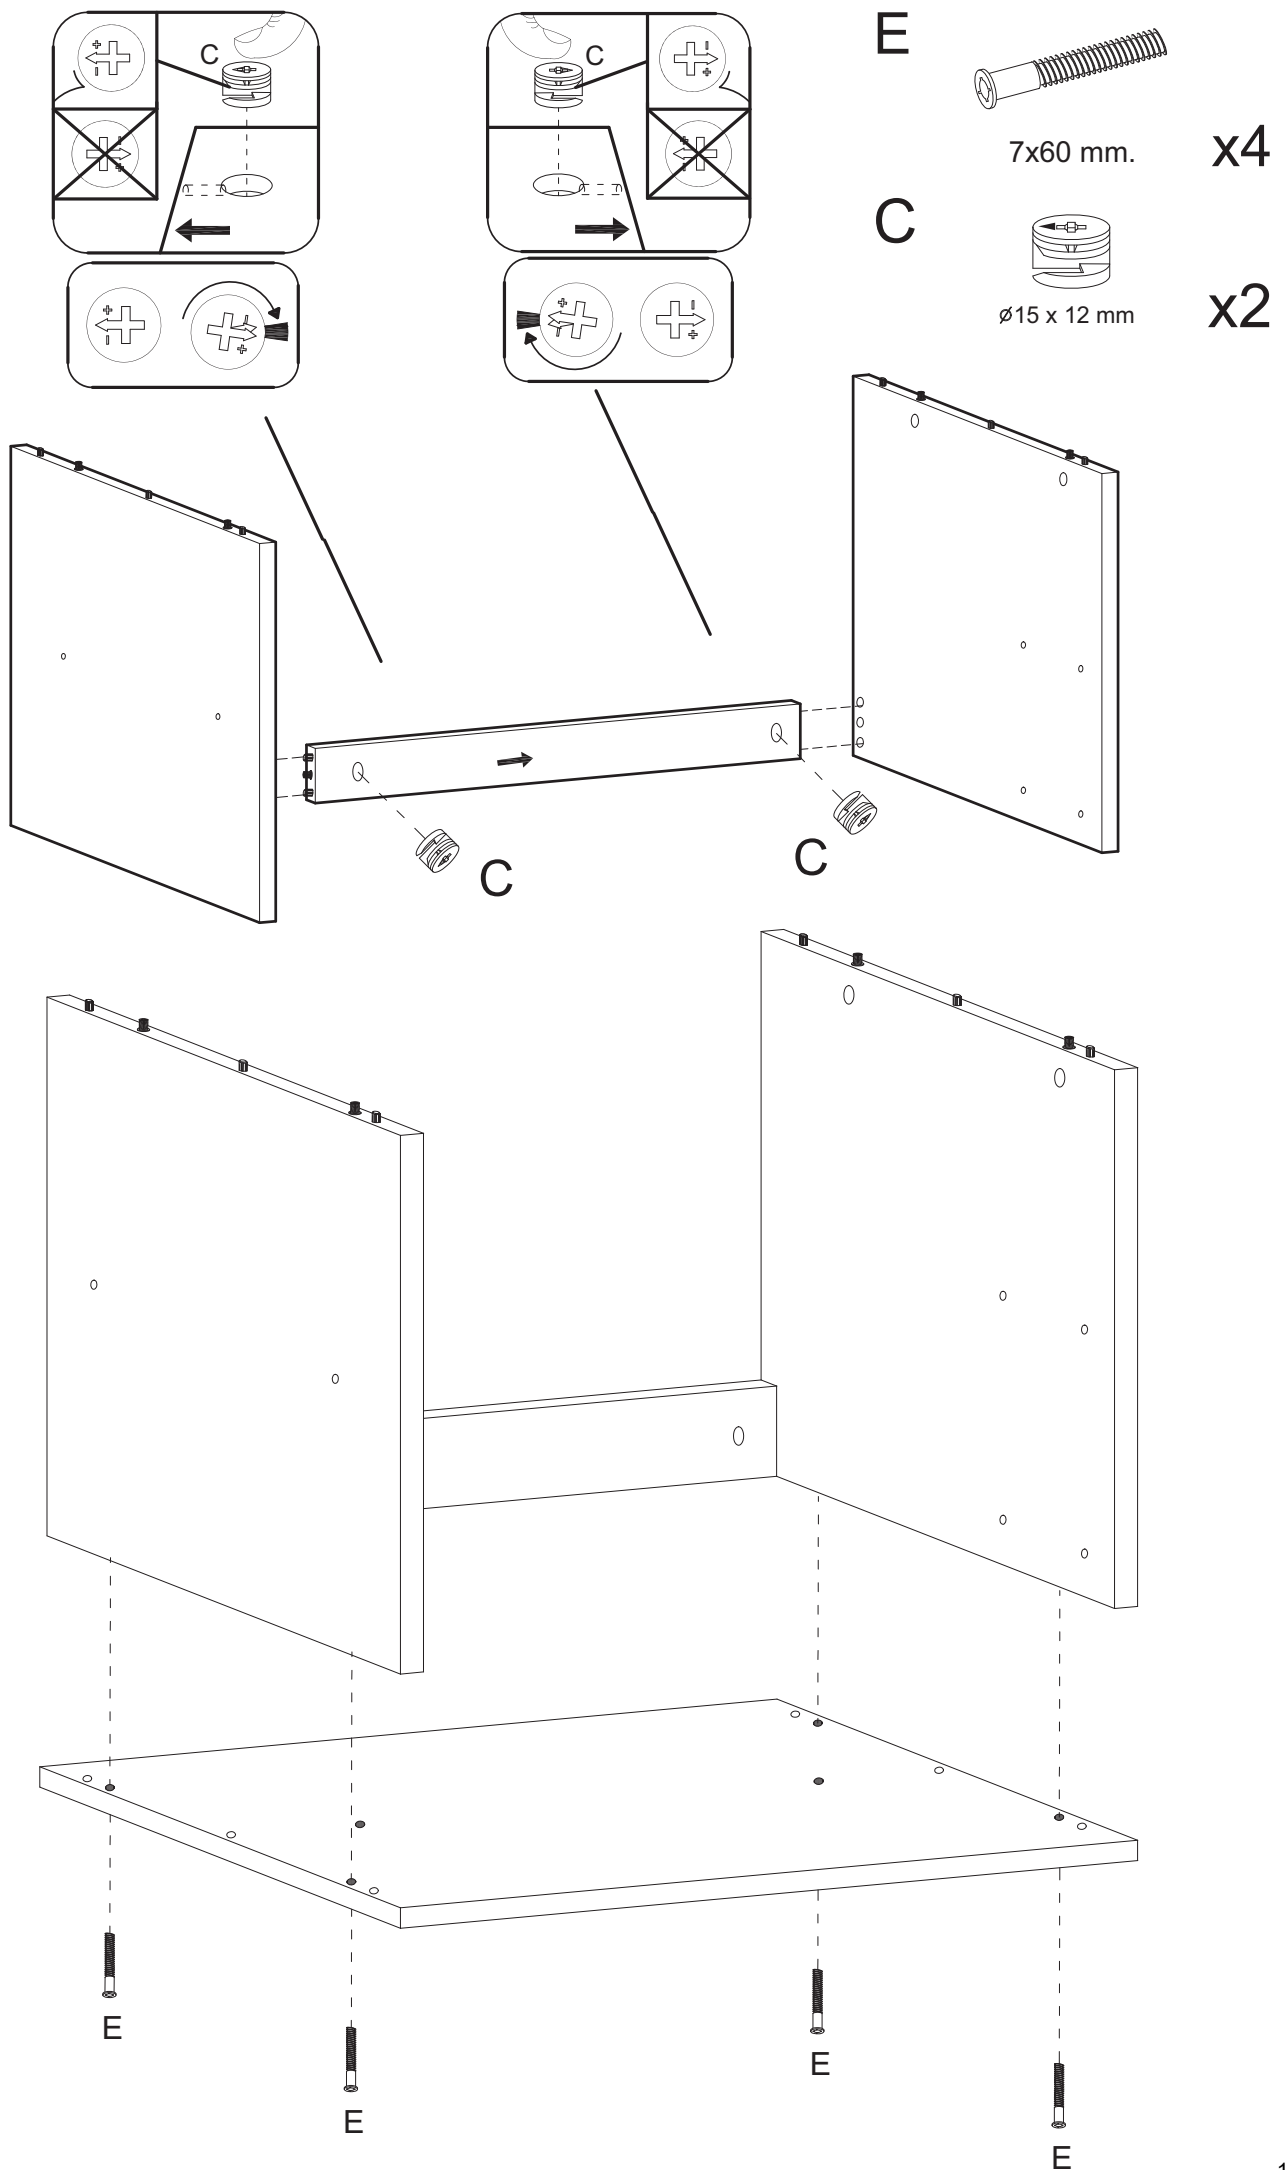


7

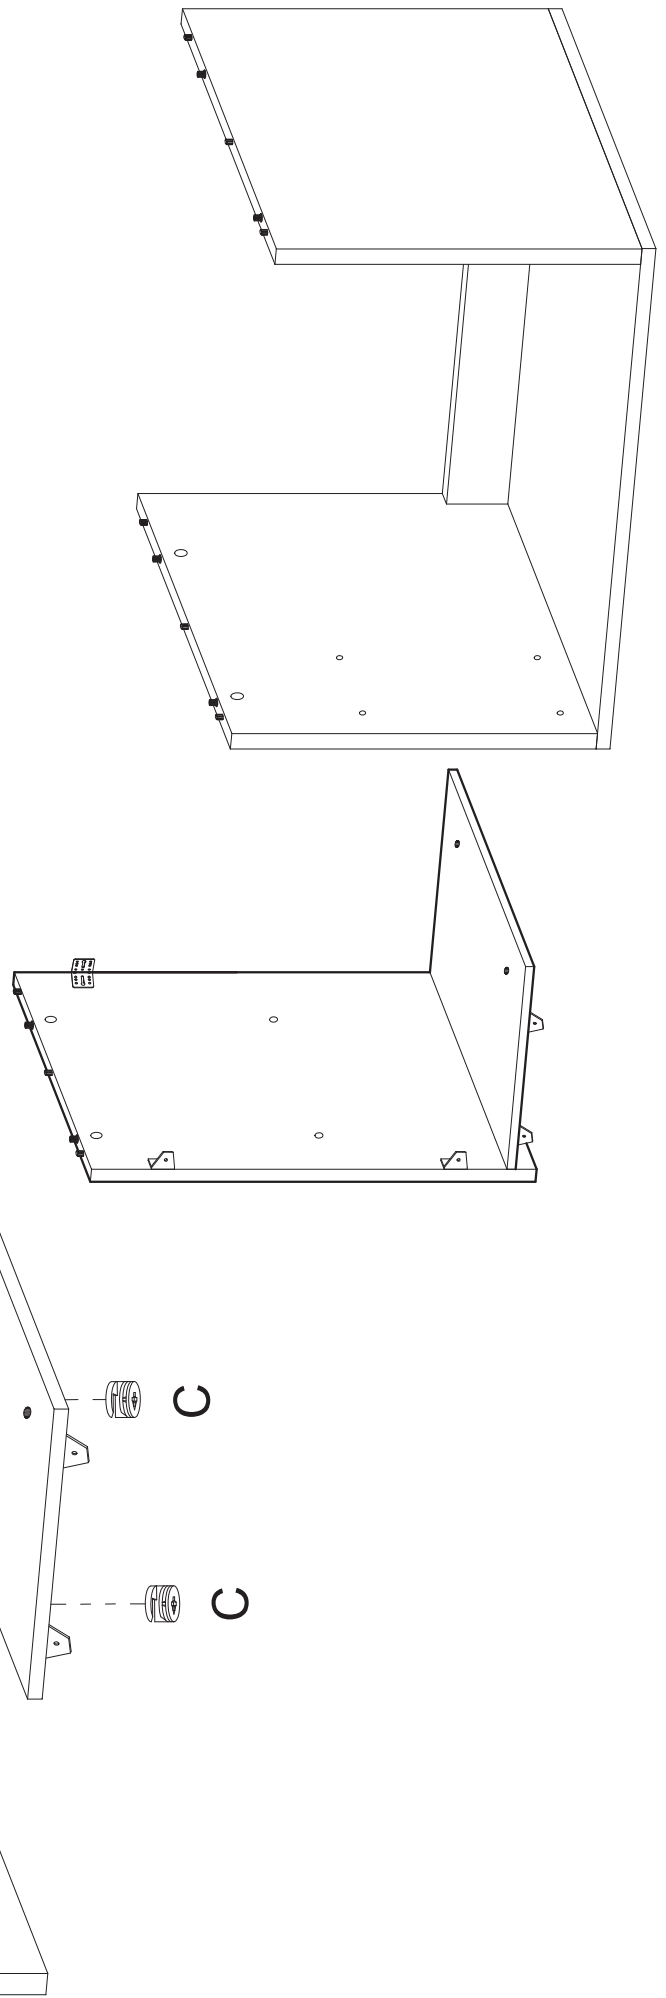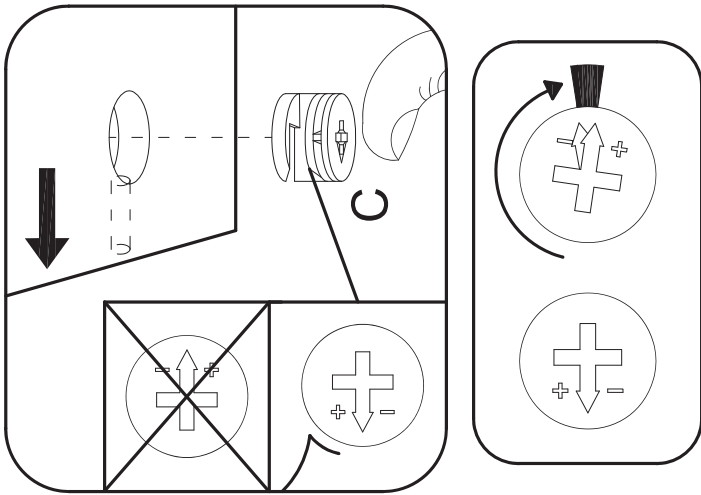

ø15 x 12 mm

x4

C

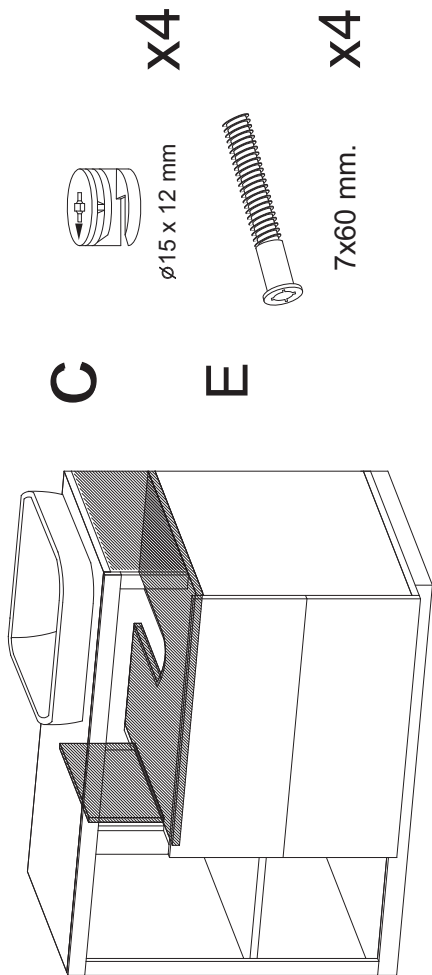






ø15 x 12 mm

x4



x4

7x60 mm.

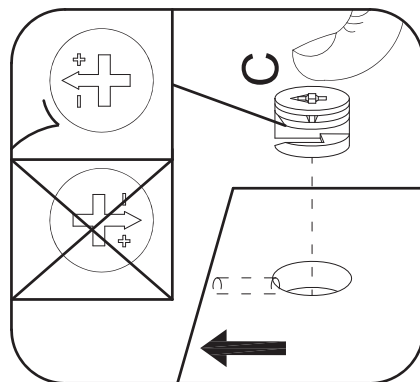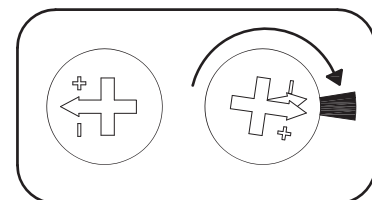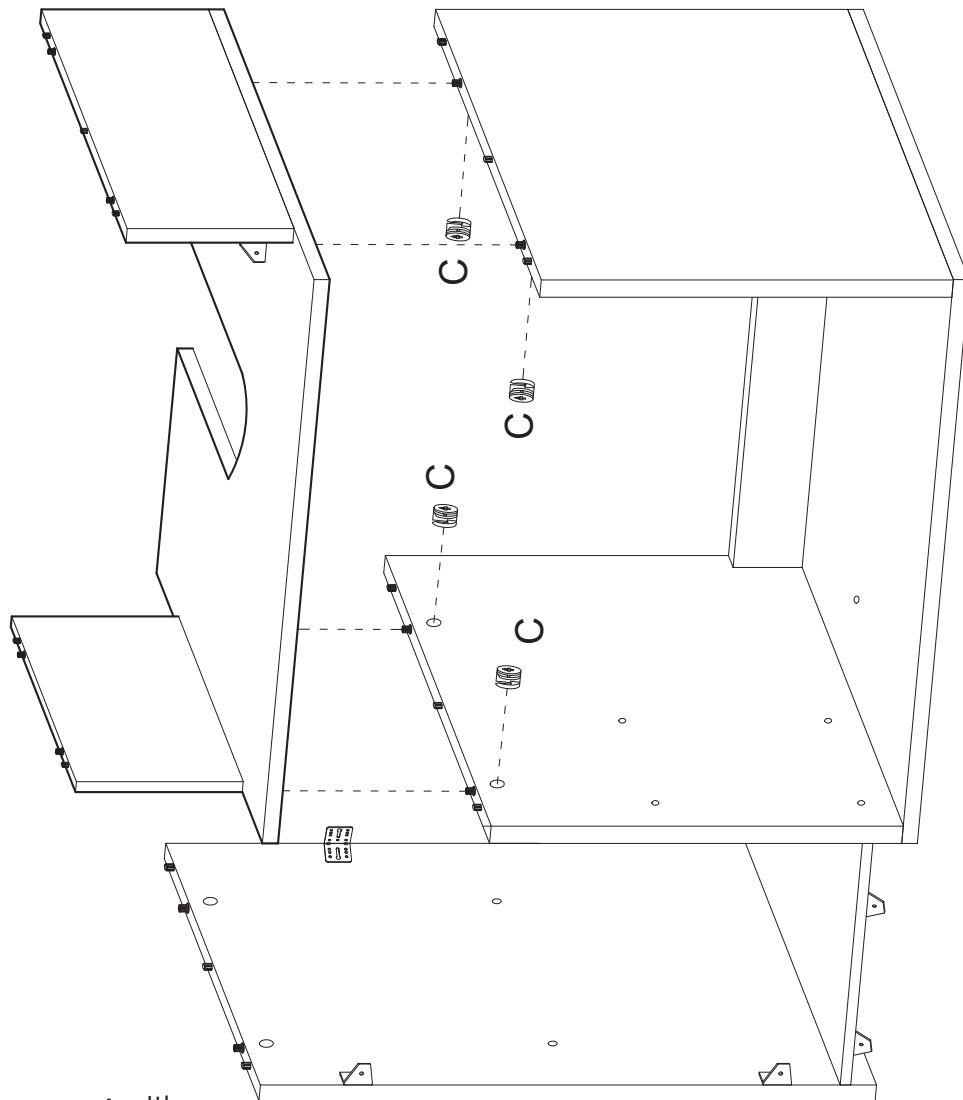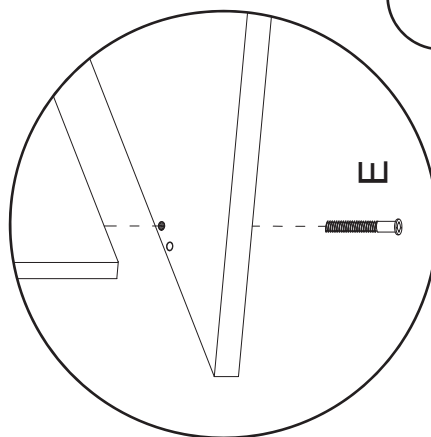
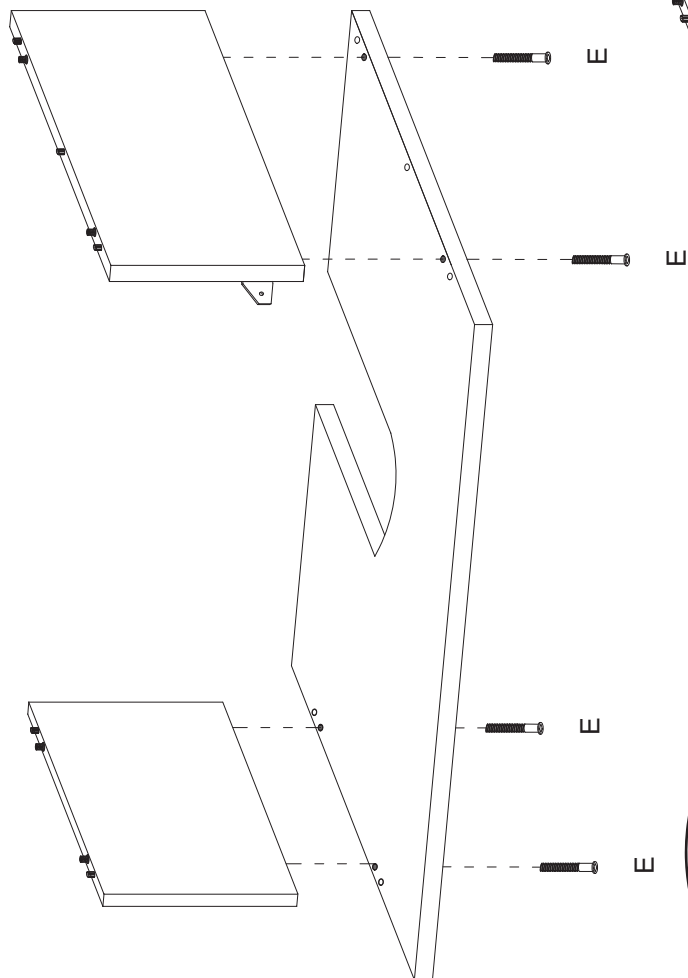




9

E





7x60 mm. X4

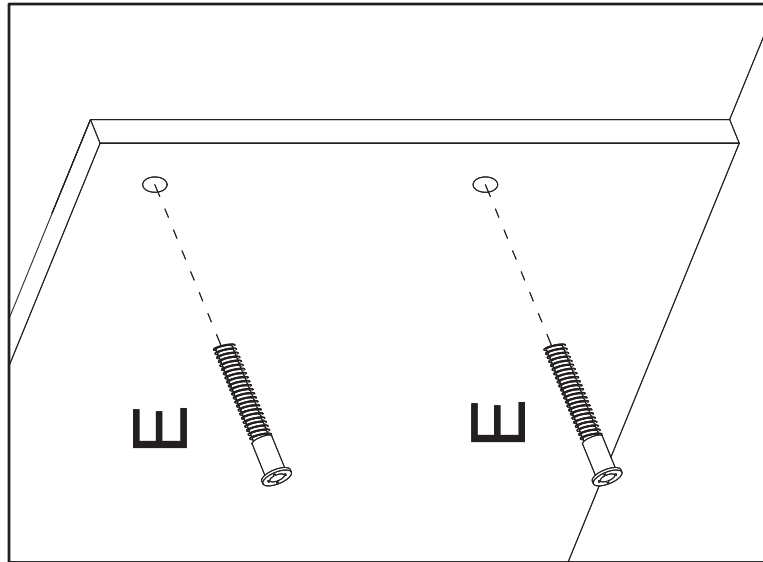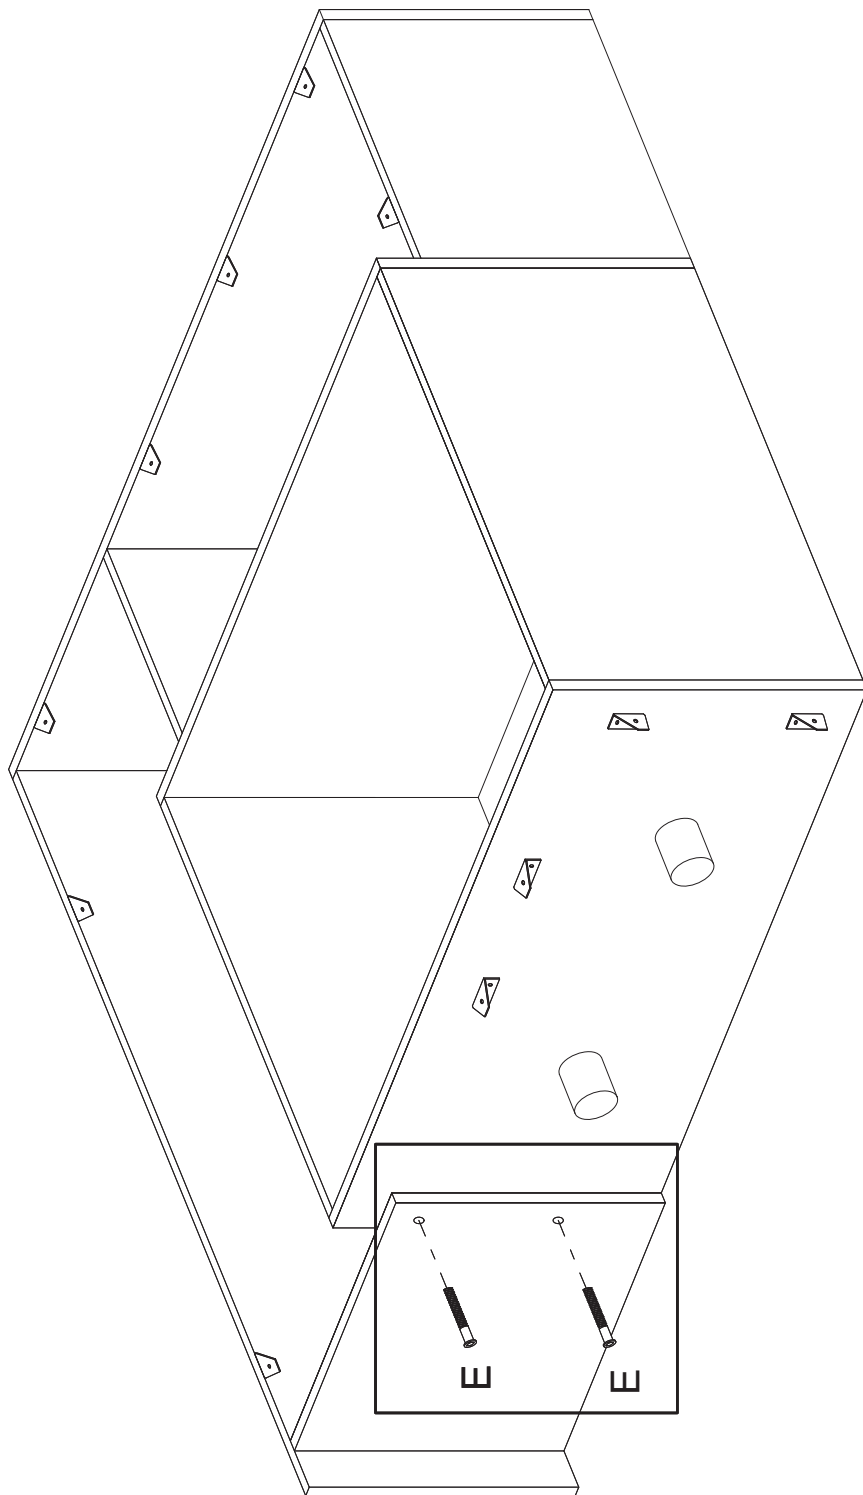

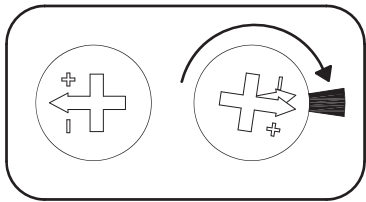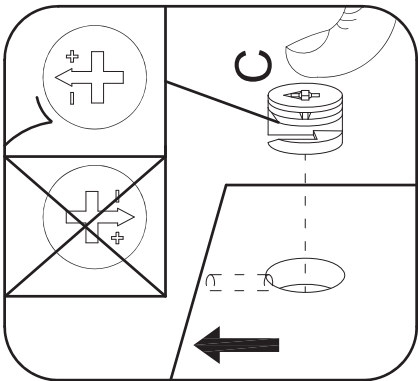


- C
- Ø15 x 12 mm
- x6
- E11
- 6x11 mm.
- x8


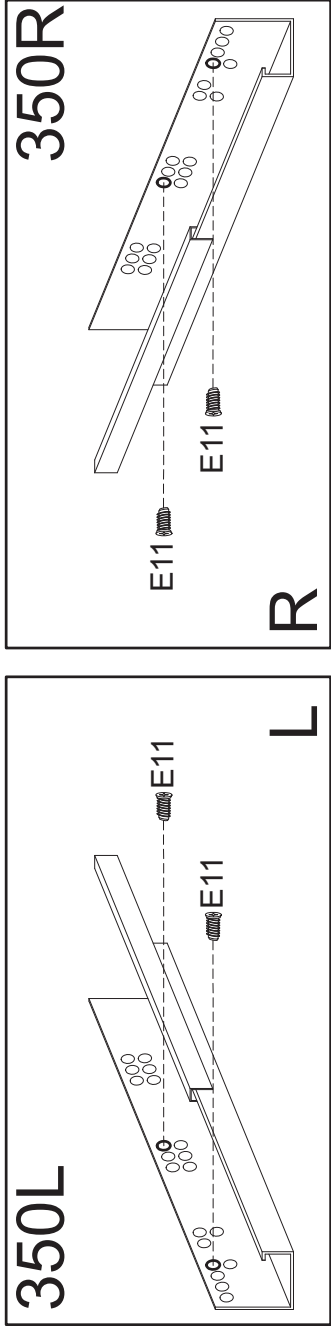
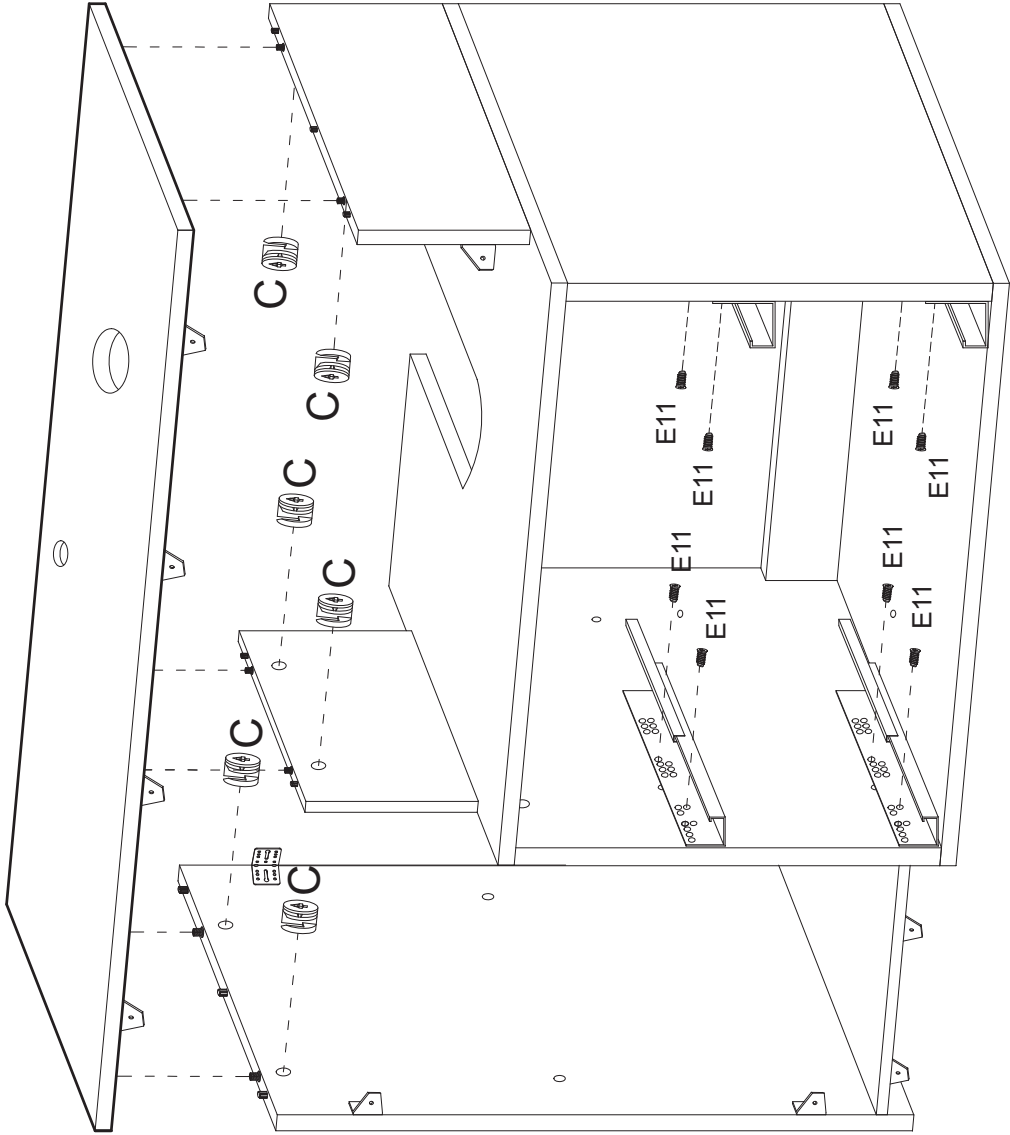


11


-110

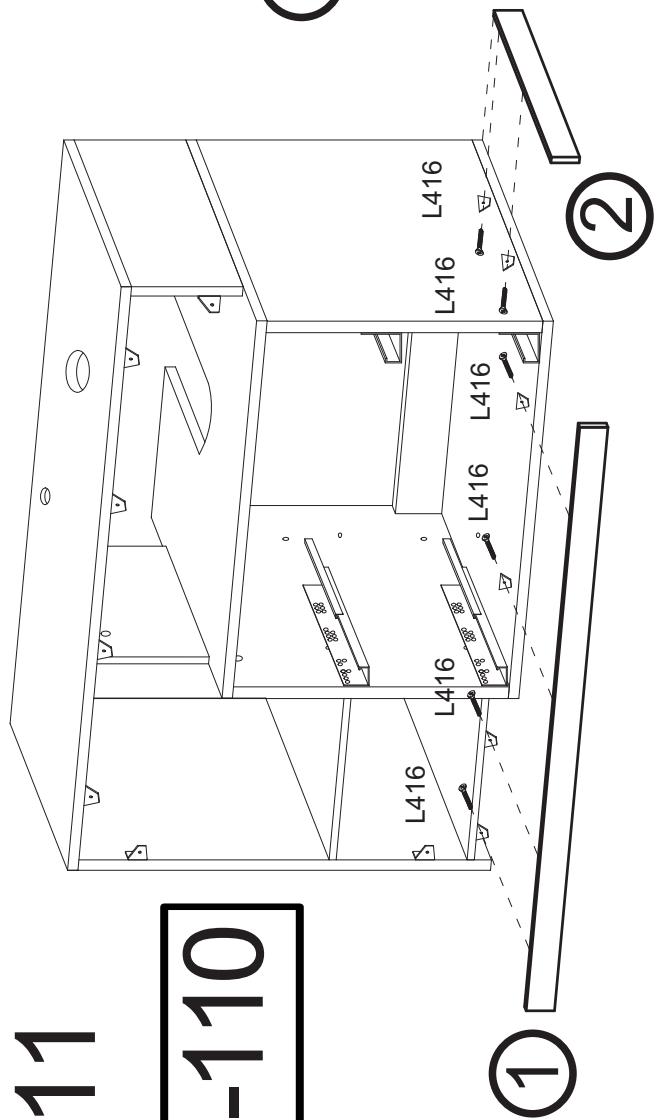

L416
4x16 mm. x13

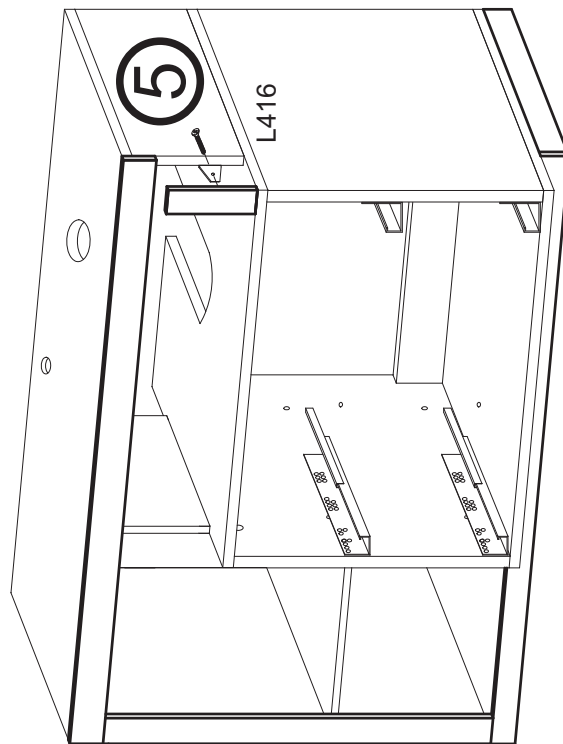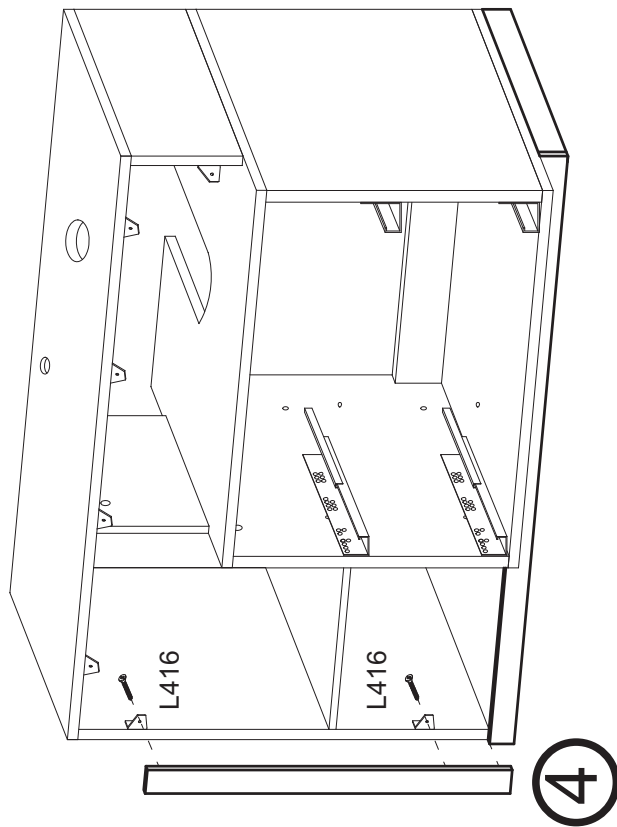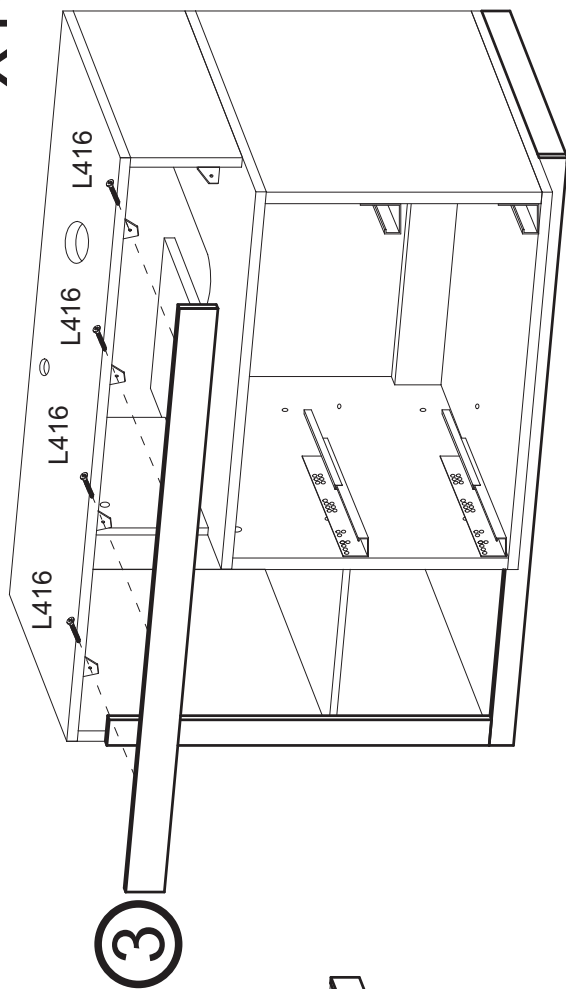


L416

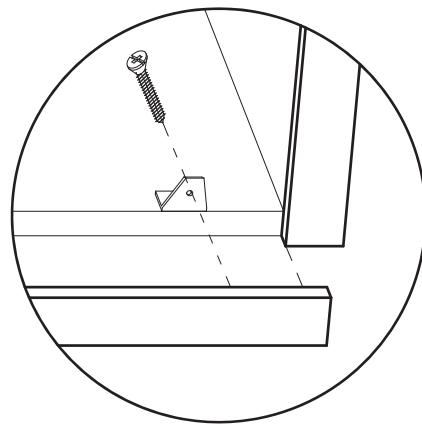

11


-78

-92


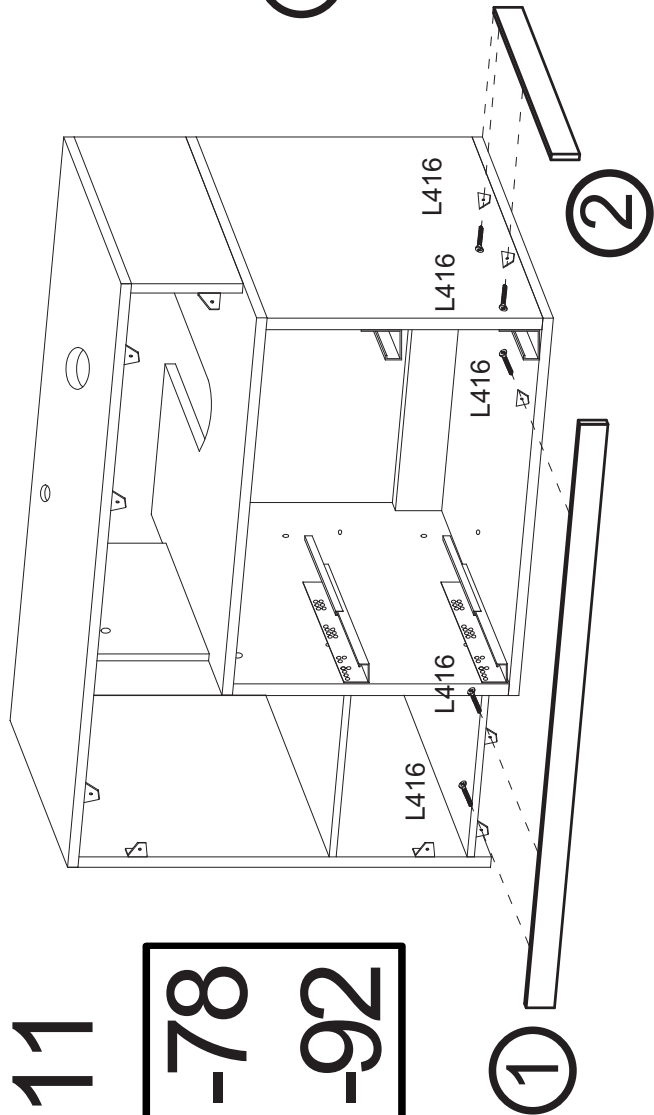


L416


4x16 mm. x11

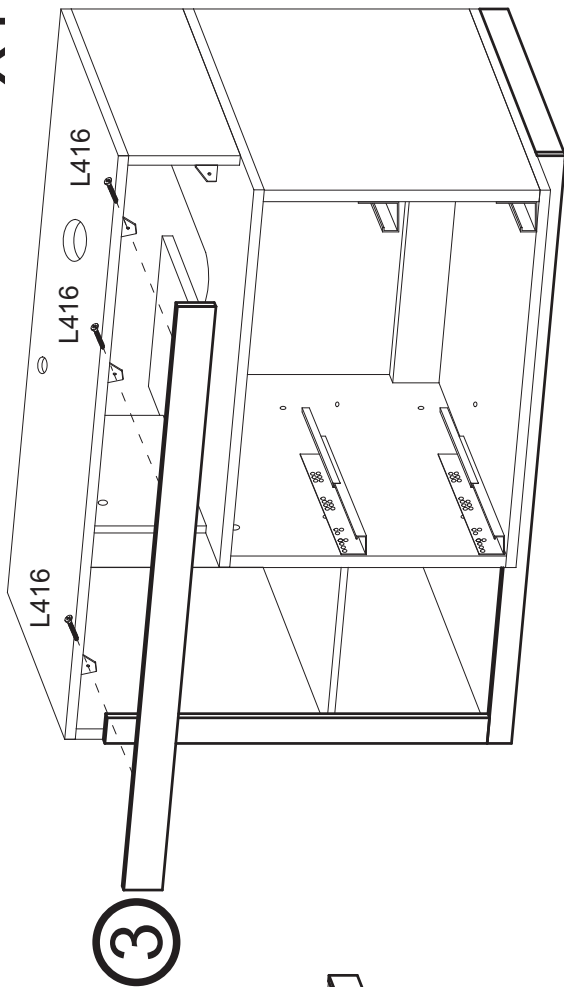

2

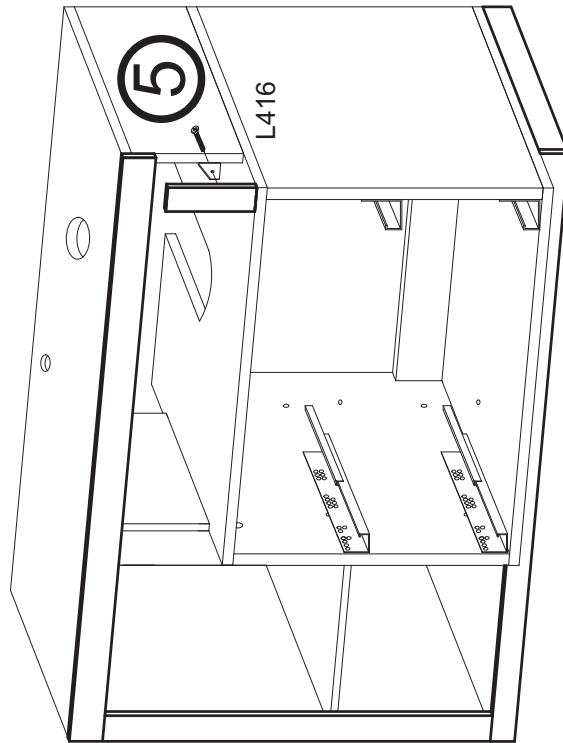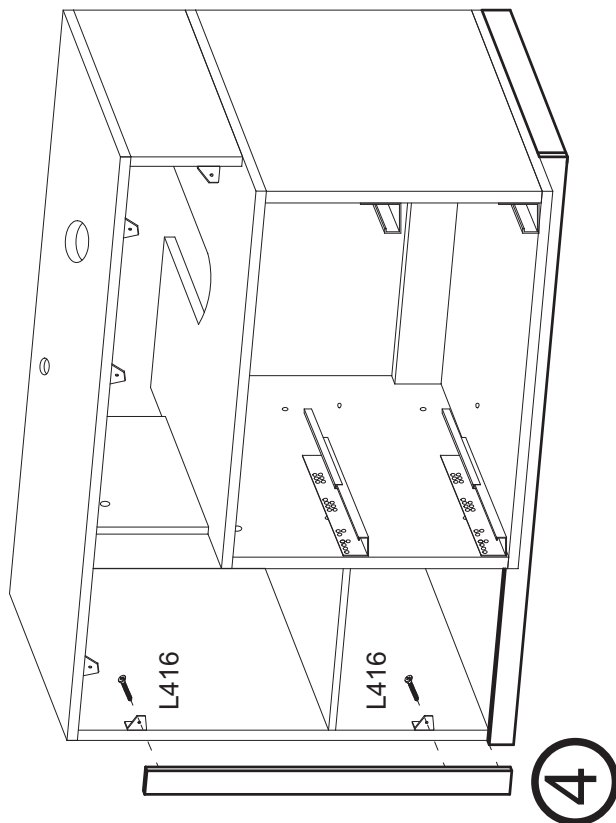

L416

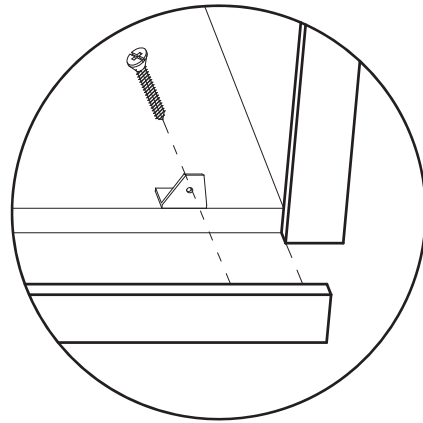


L416



4x16 mm.

PST








CH




x8

x2








x6

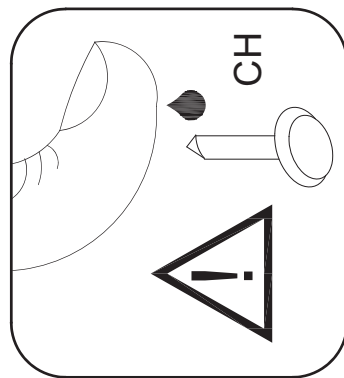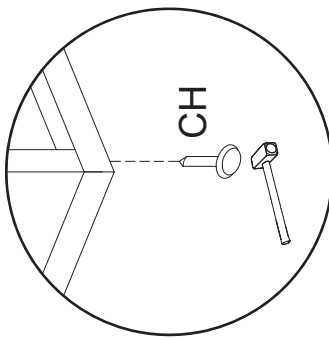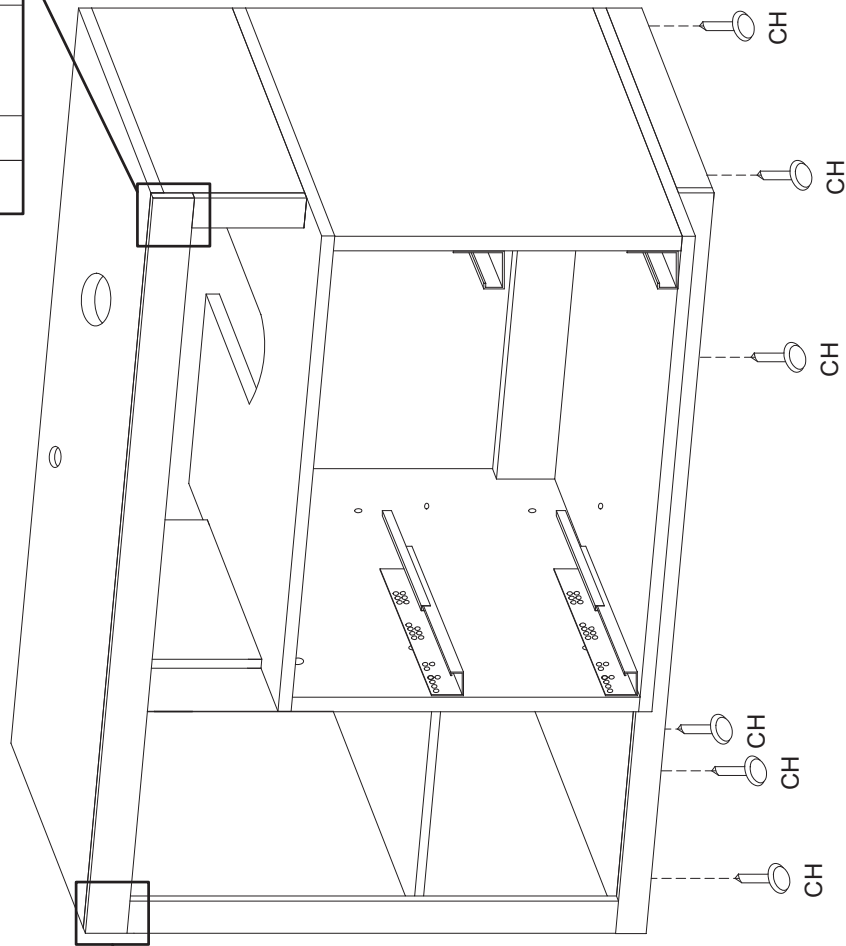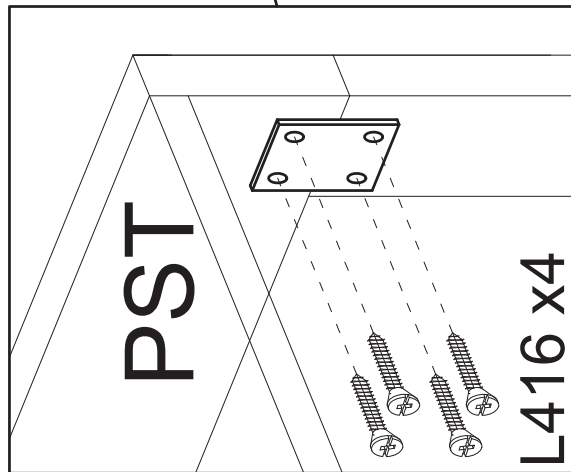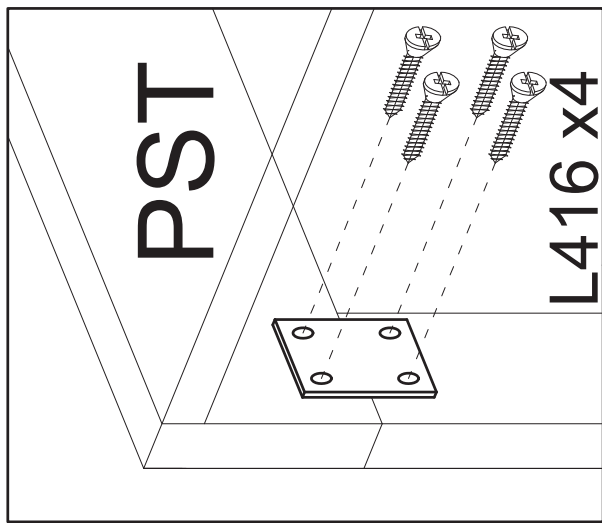

13

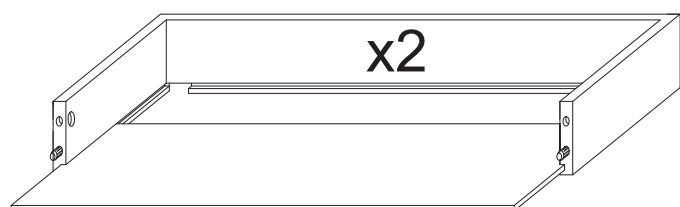




- P  x4
- L3516  3.5x16 mm. x4
- C1  ø12 mm. x4
- D1  x4
- N3AST  x2

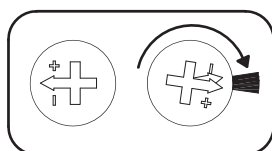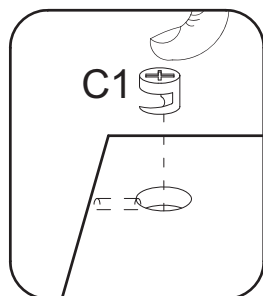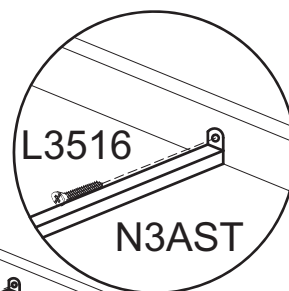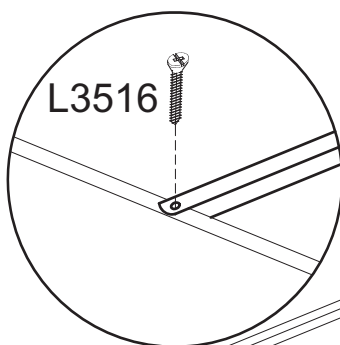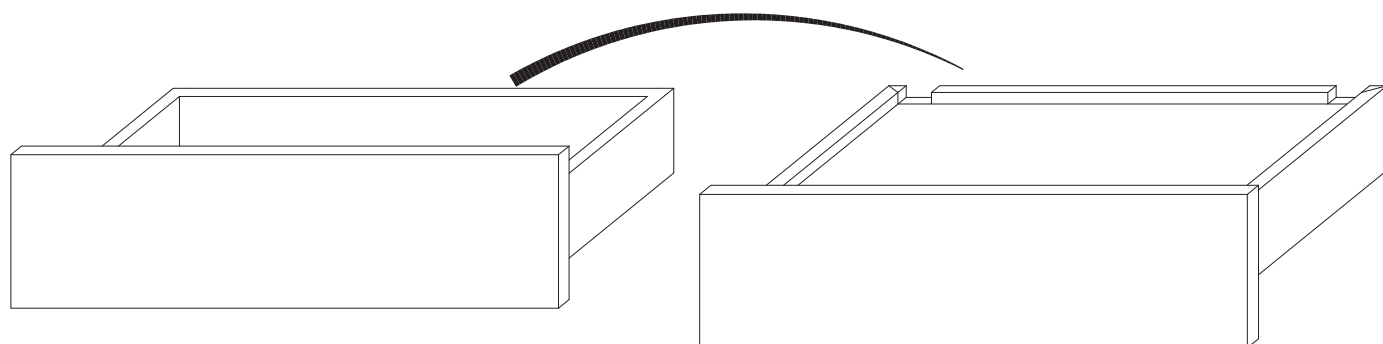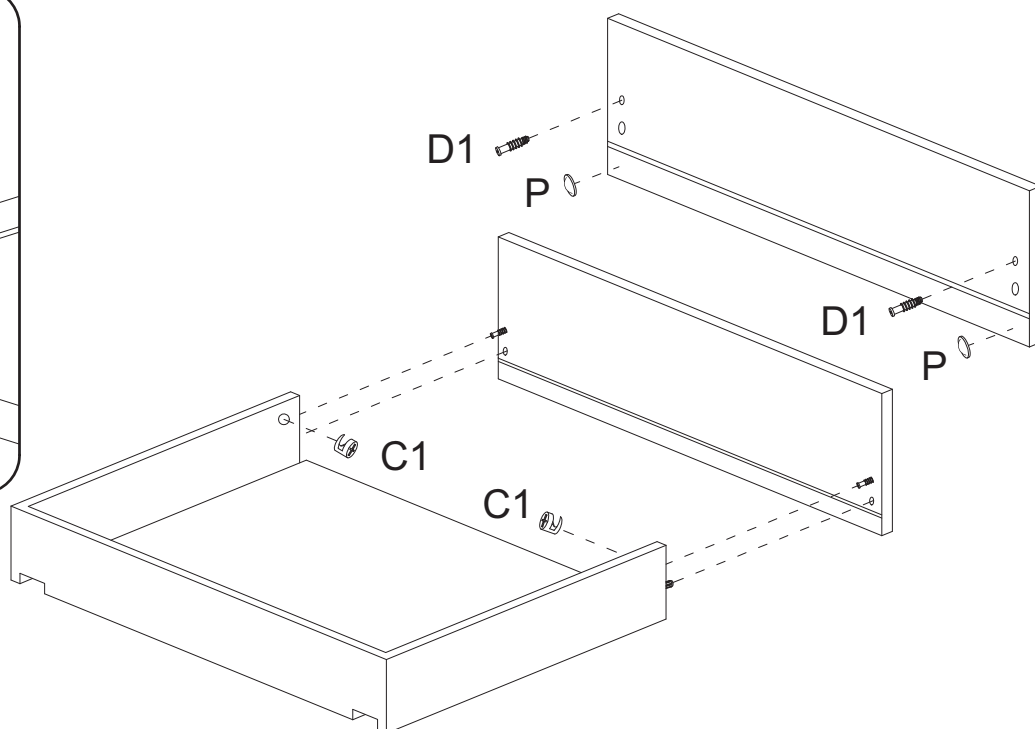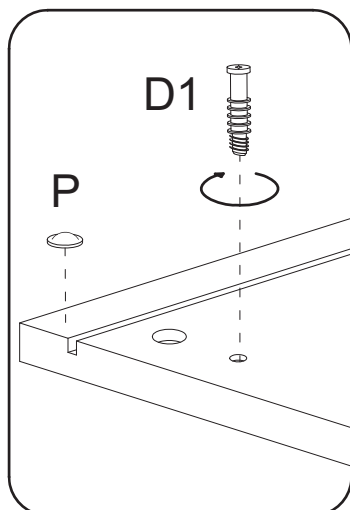

R



x4

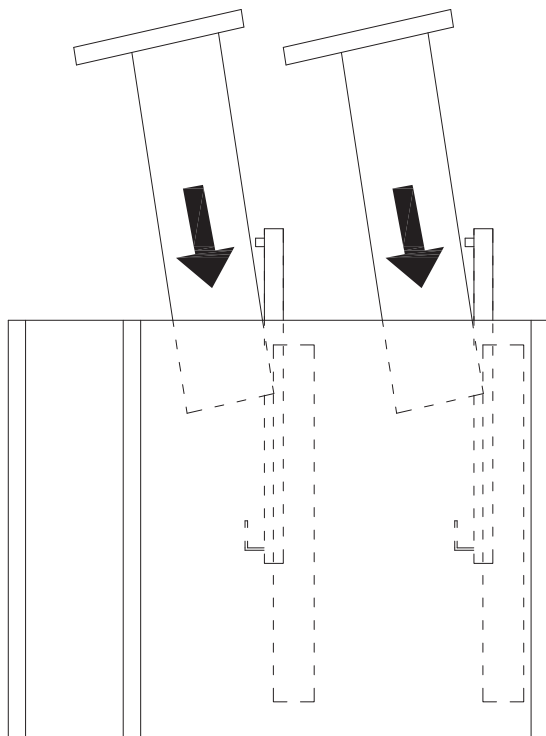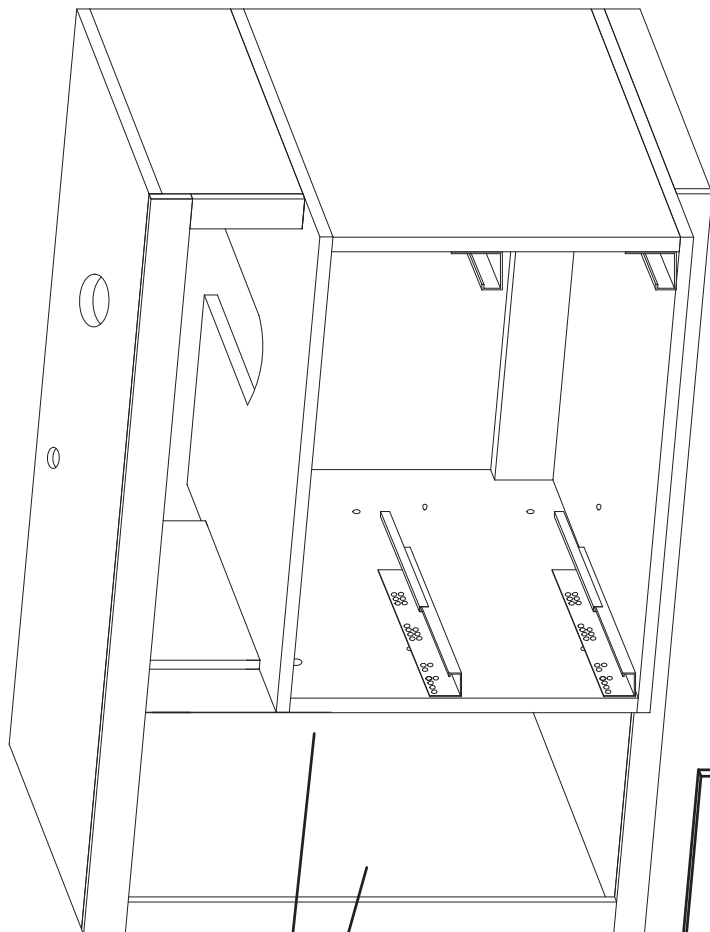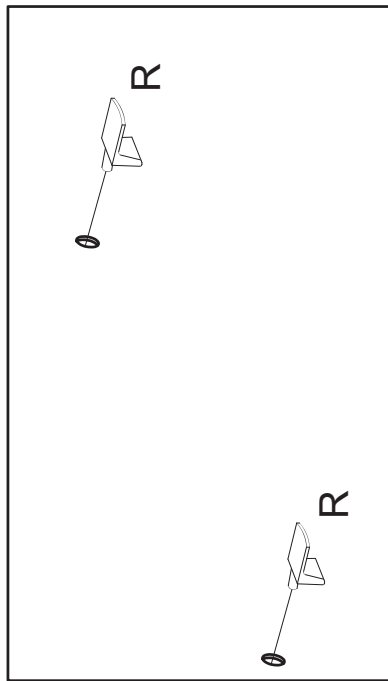

L3516



x2

3.5x16 mm.

MAN



x1

