


# NOVA LUCE

9001083, 9001084

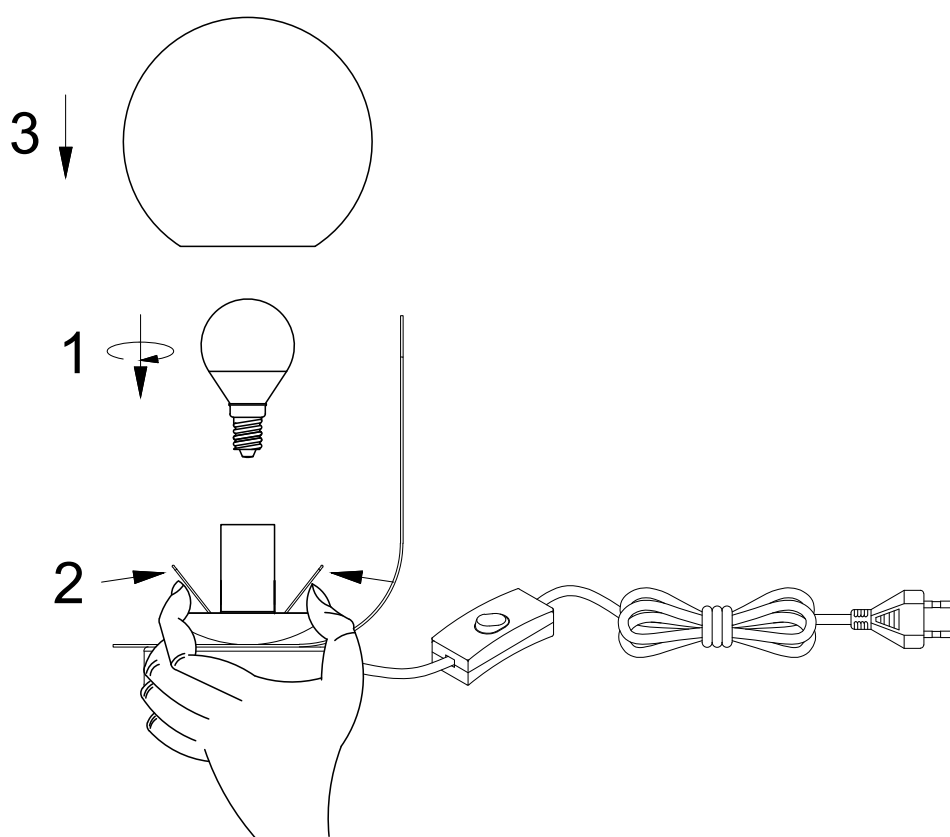

1. Screw The bulb

2. 3. By pressing it towards inside, put the acrylic in place