



NOVA LUCE

9001095

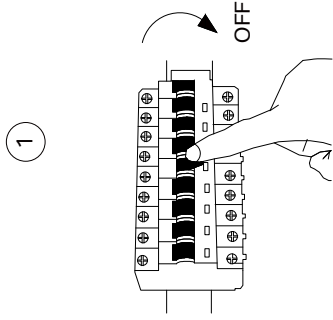

1


Turn off the general switch

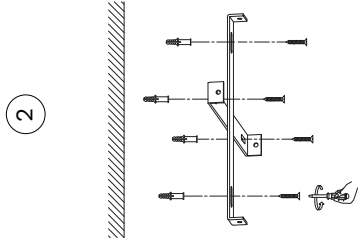

2


Mark, drill holes & apply
plastic anchors with screws

3

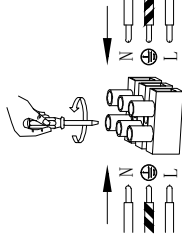


Connect the wires

4

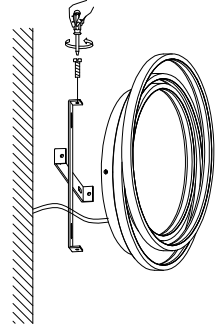

Apply the Side screws

5

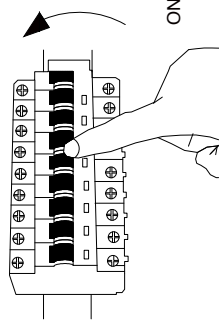

Turn on the general switch

