
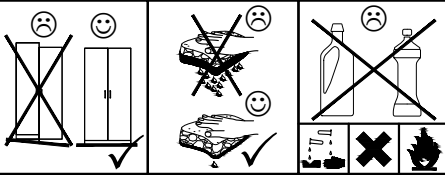


# Montageanleitung

## Clara 15, 4trg. 1SKV

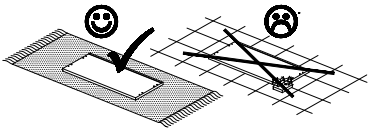

### DE - Sicherheitsvorschriften

Beachten Sie bitte unbedingt die angegebenen Aufbauvorschriften.

### EN - Caution



Follow carefully the assembling instructions described in the directions.

### FR - Sécurité


Respecter les instructions de montage décrites dans la notice.


### NL - Veiligheid

De in de Gebruiksaanwijzing beschreven Instructies respecteren.





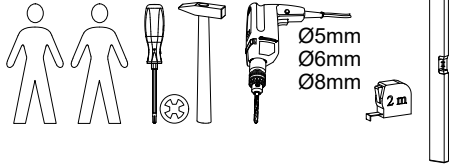










4x EX	4x VB
8x VBS	4x ADK-VBS
2x SB	8x BT
8x TB26-0	8x KP0-26
16x SP1	4x NG
5x GLD-128	10x RWS27
40x NA	1x WBF
1x NH	2x AS
2x MS9	1x LM
2x SKS2	4x ES11

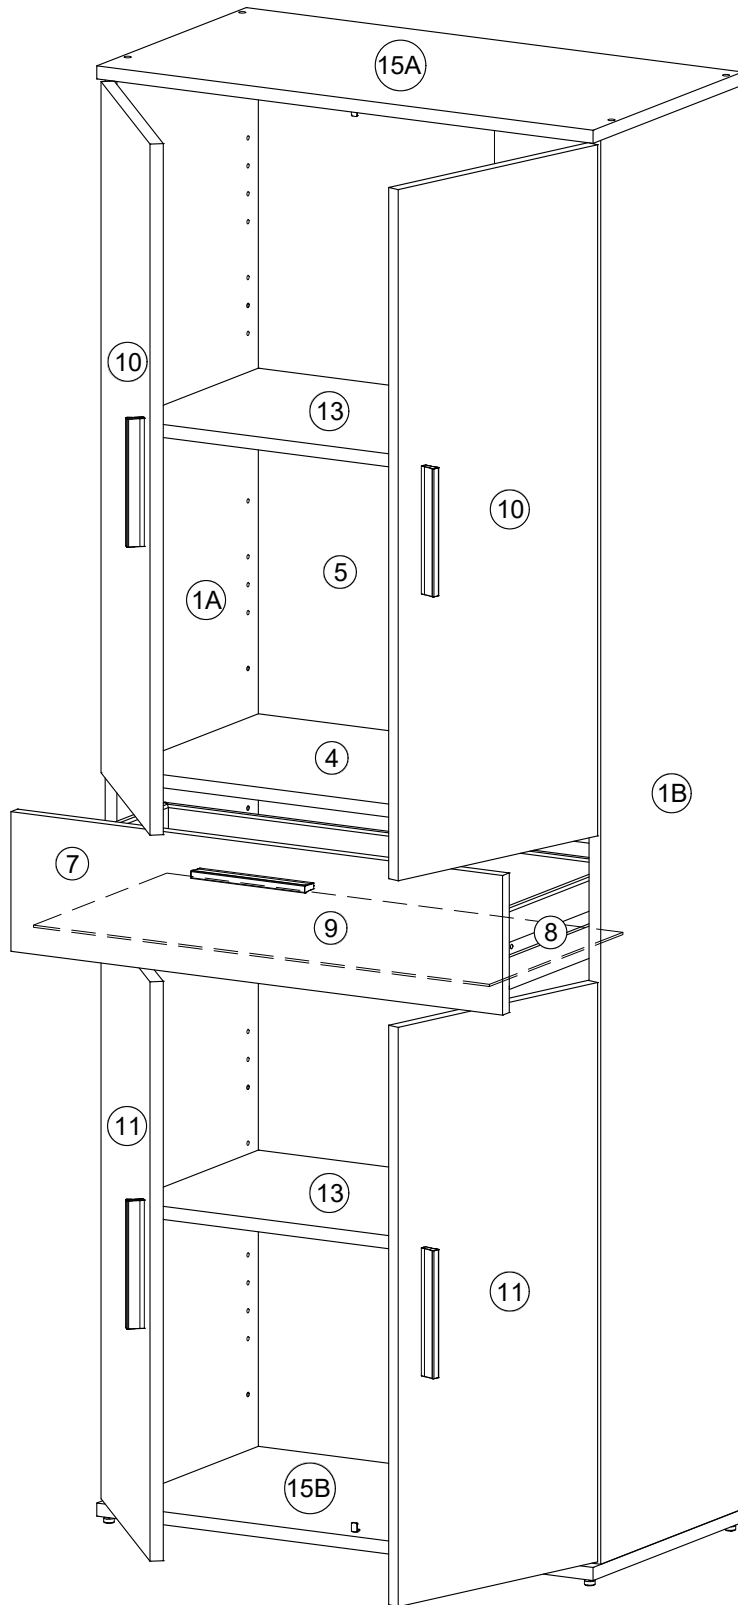



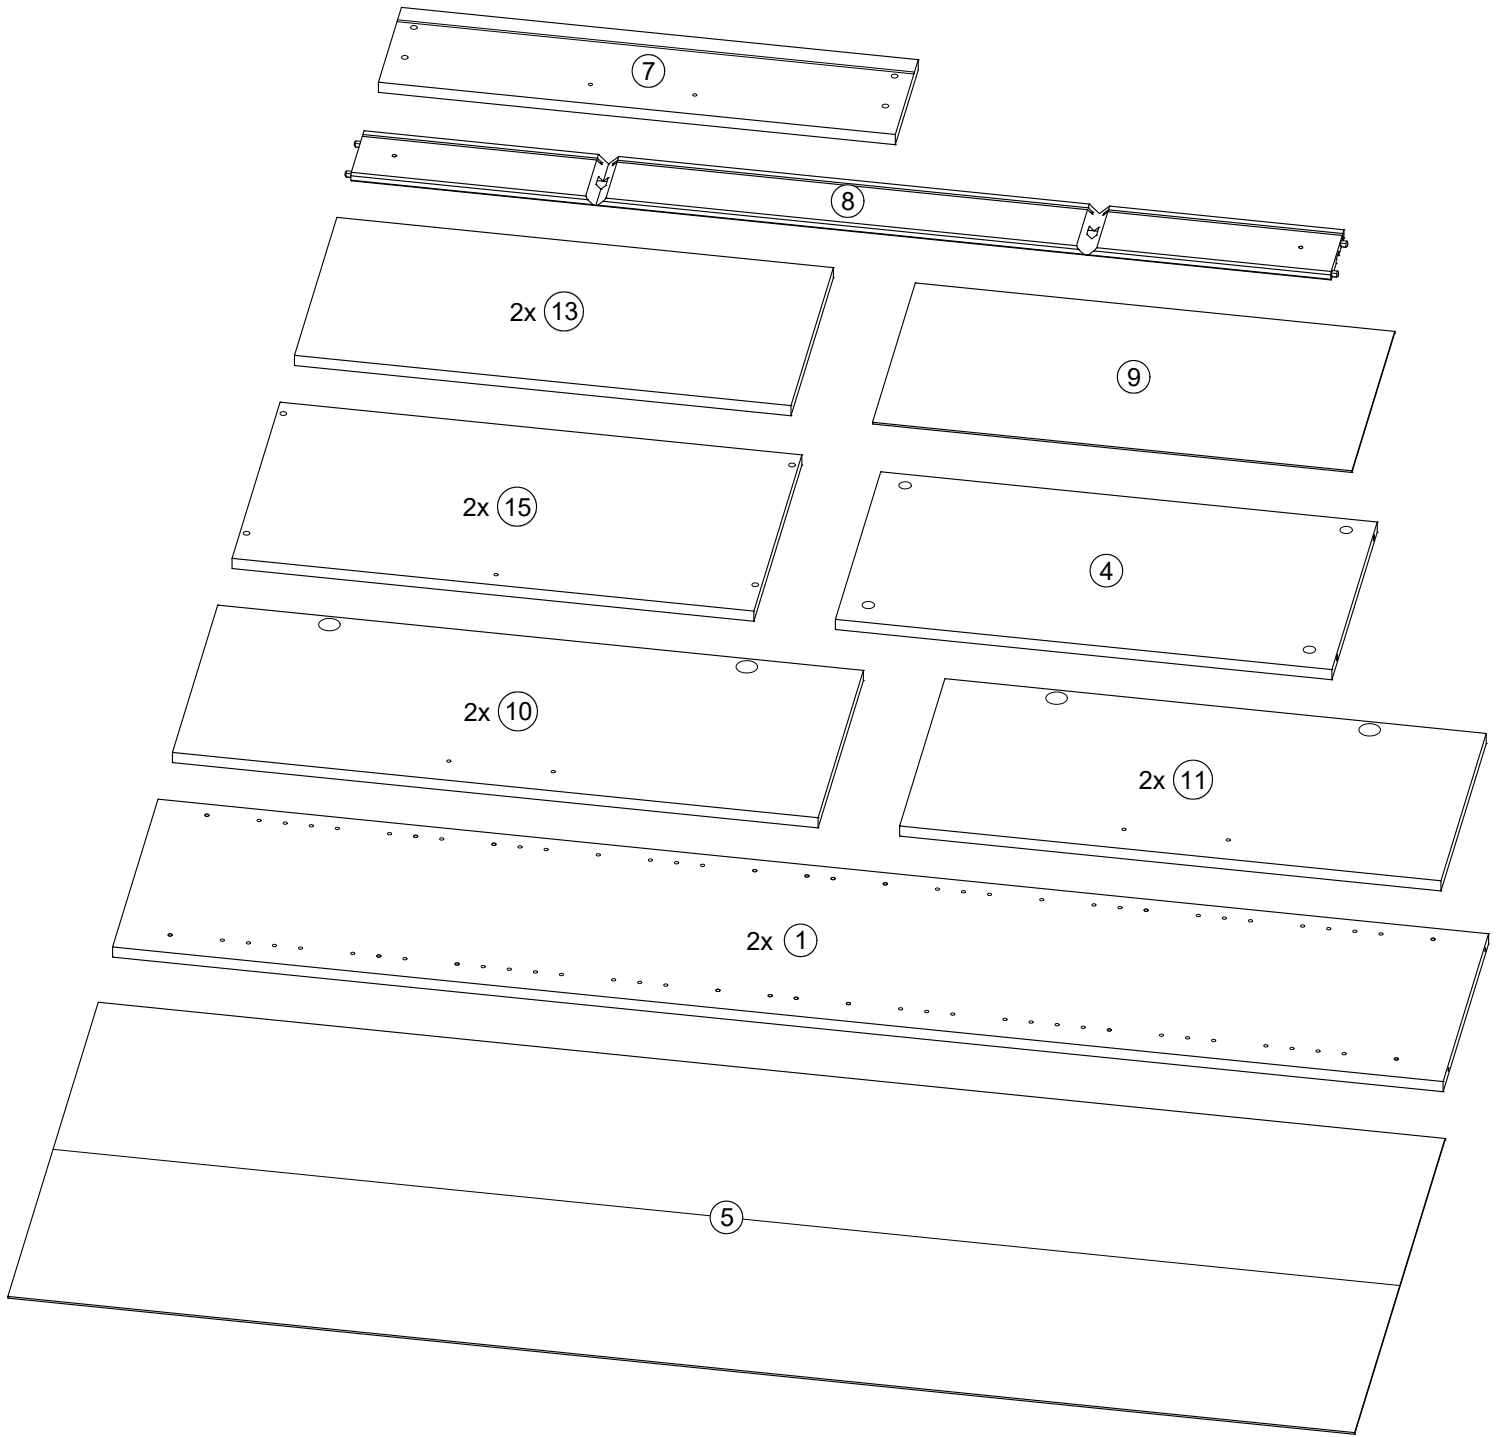


A

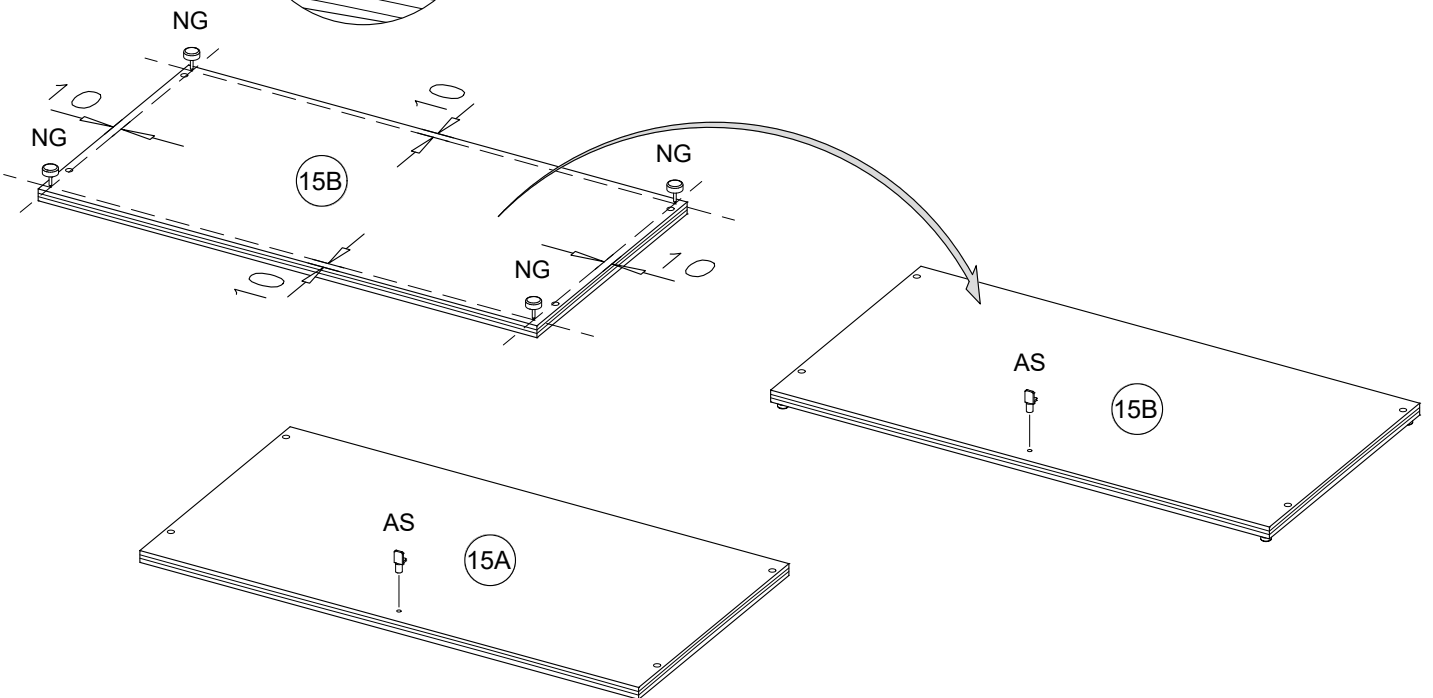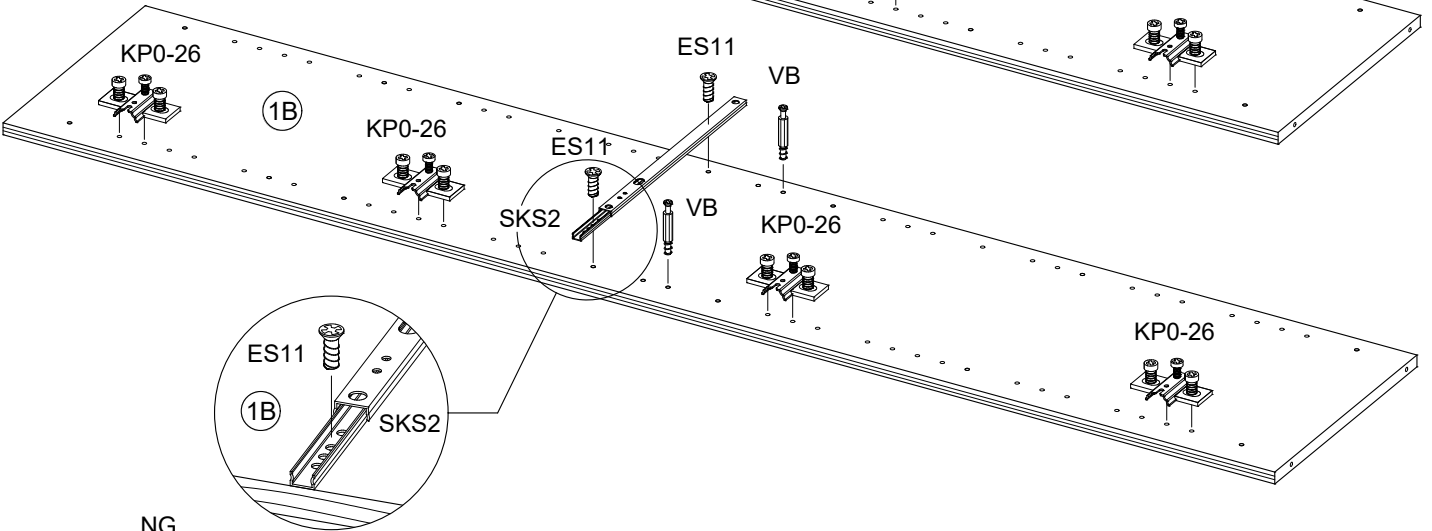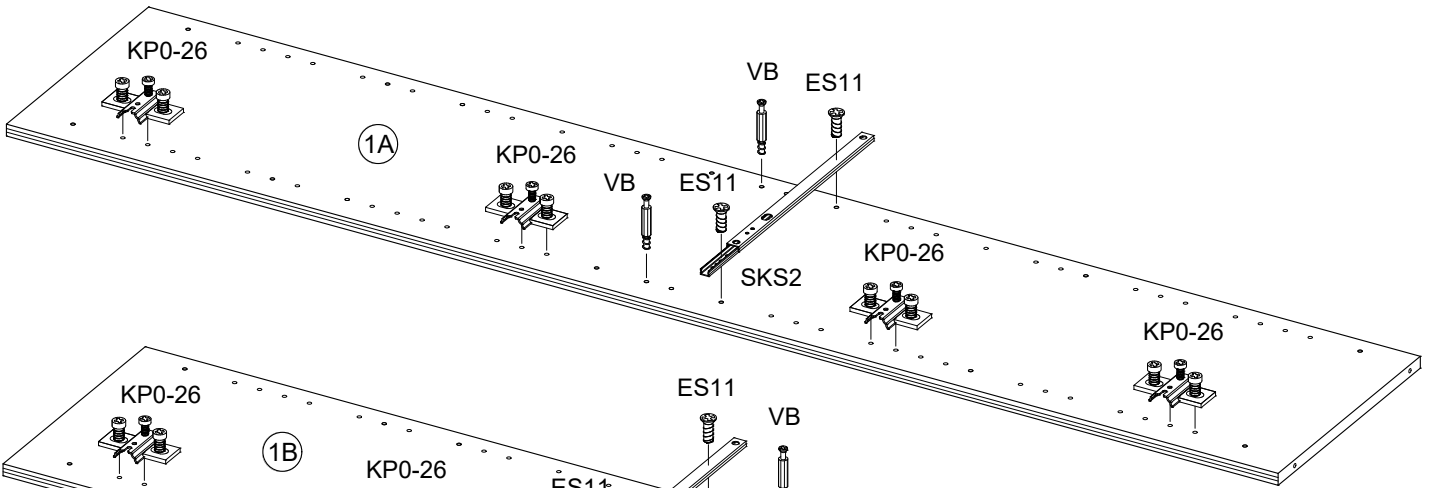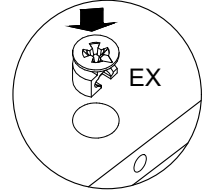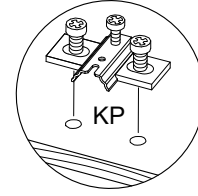
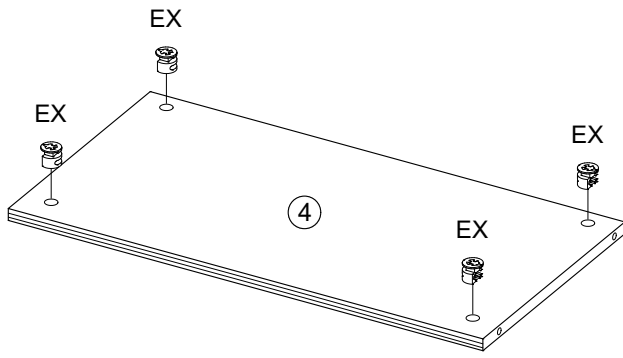


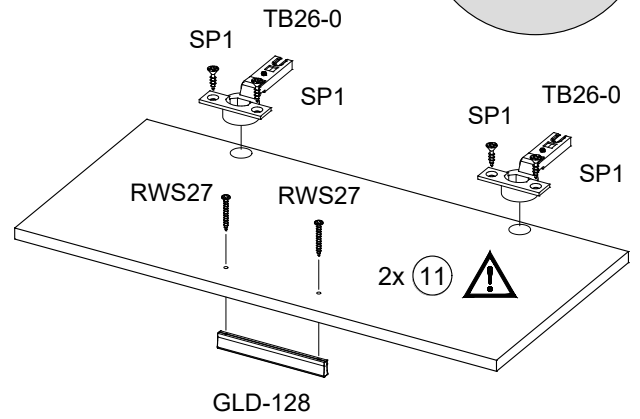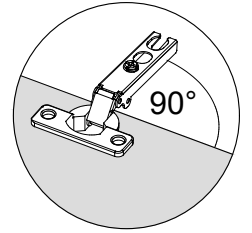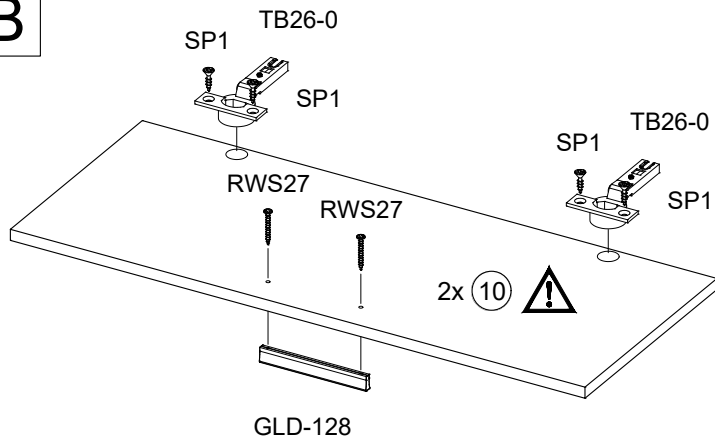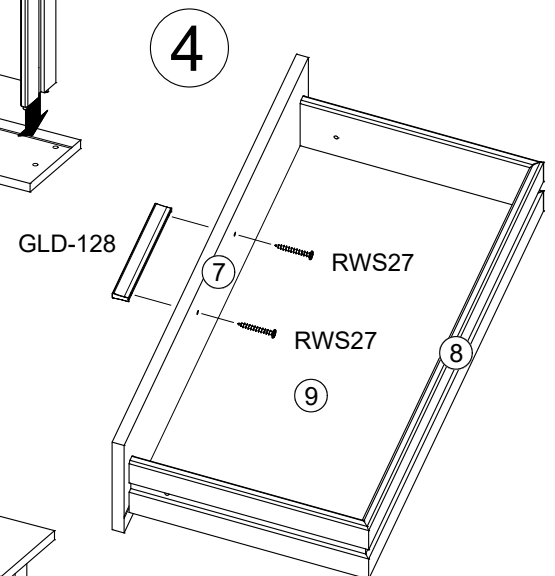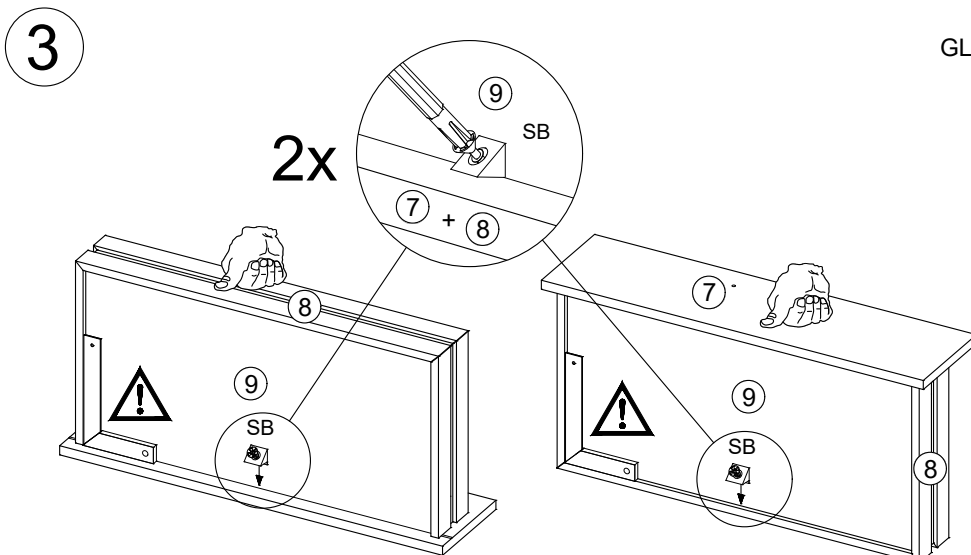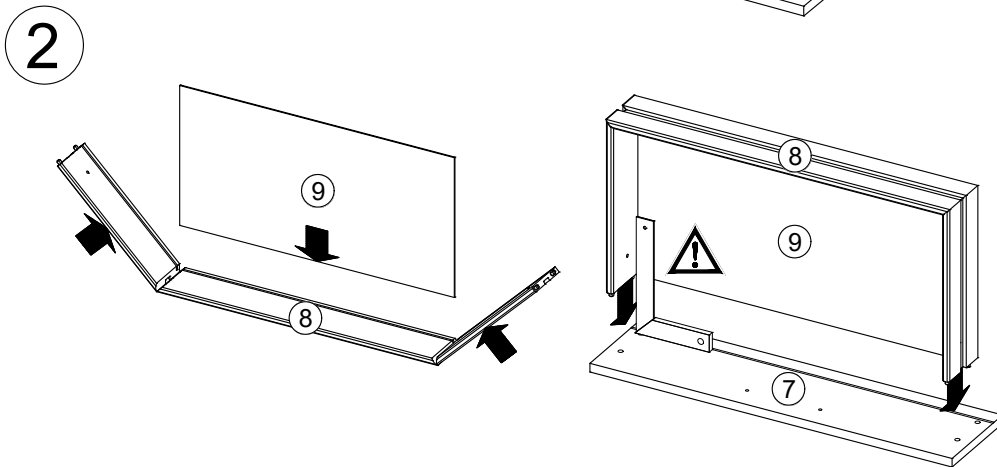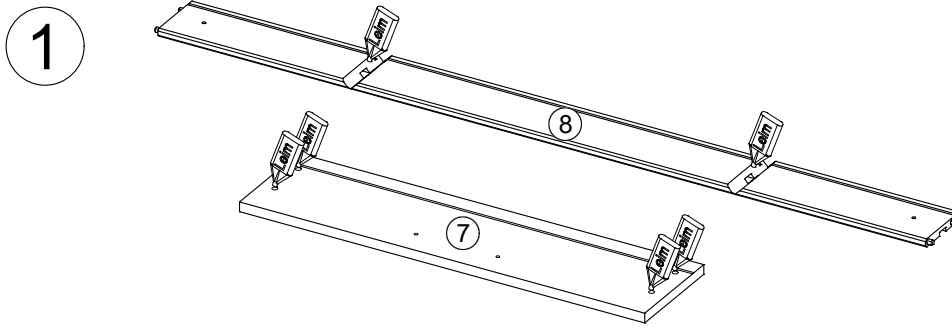**B****C**

30 Minuten trocknen lassen  
30 minutes to dry  
30 minutes pour sécher  
30 minuten laten drogen

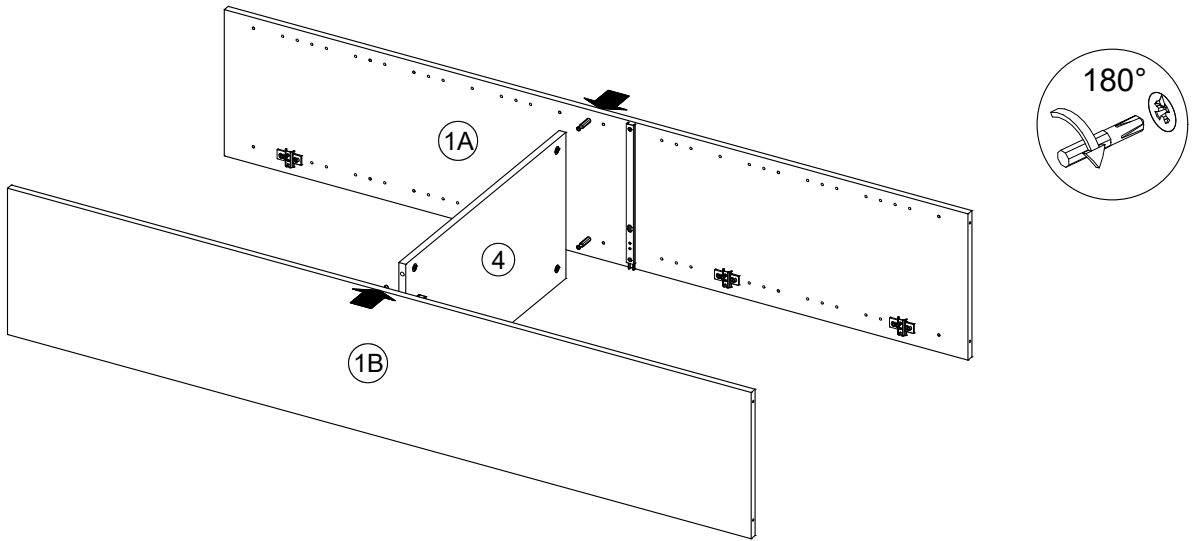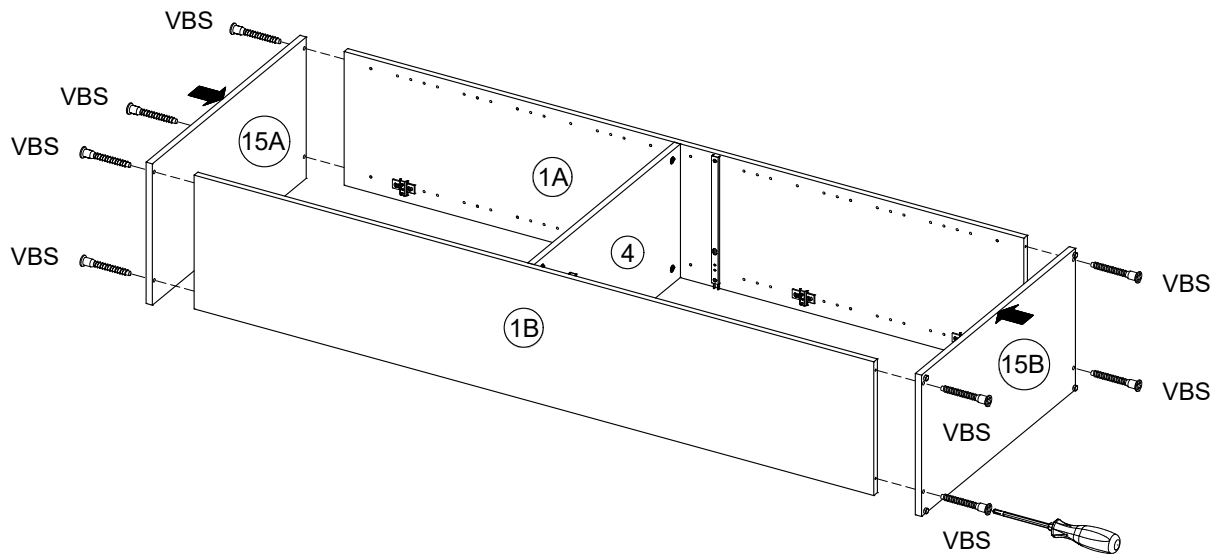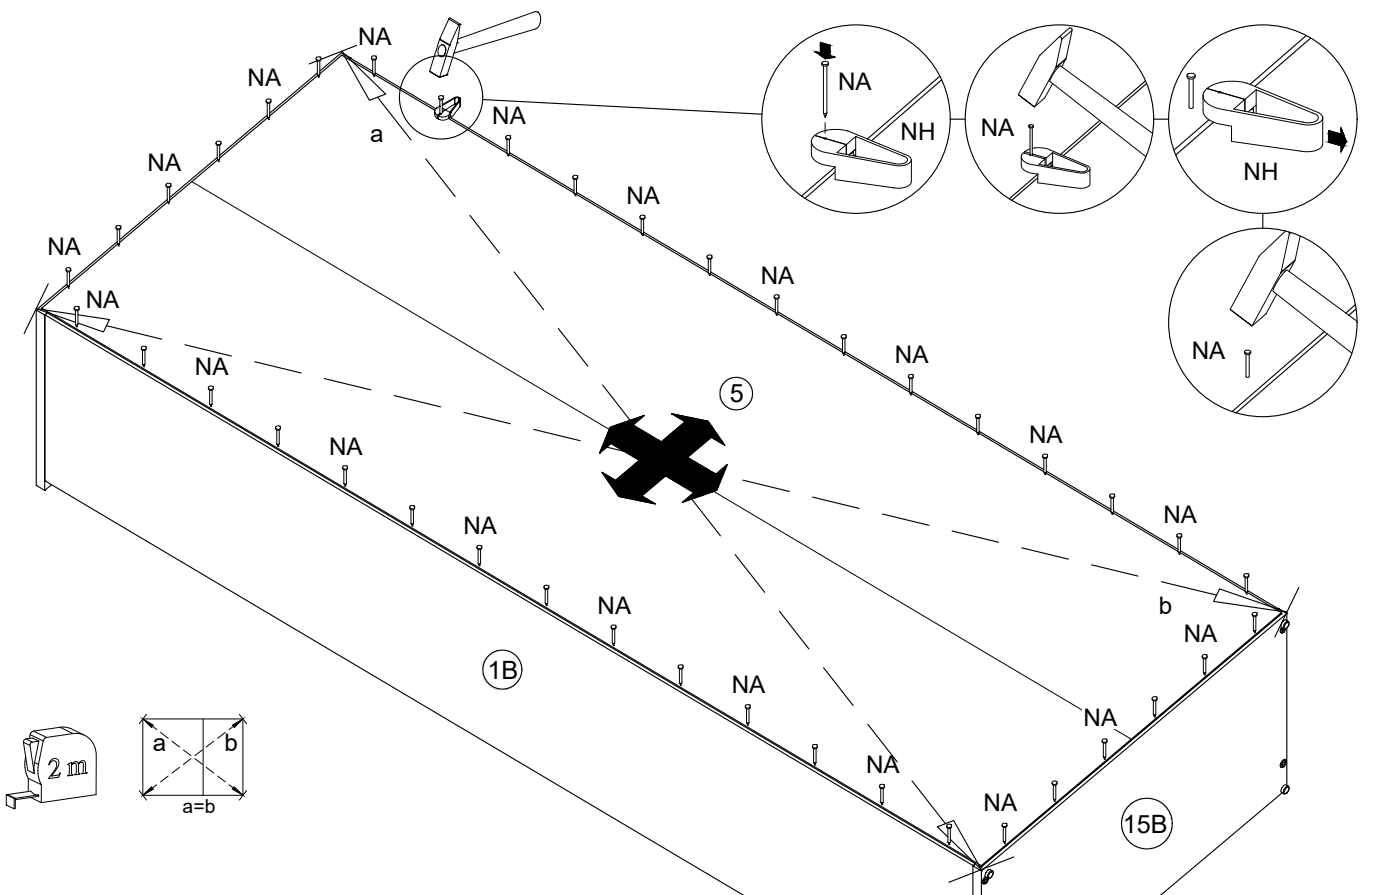**D****E****F**

G

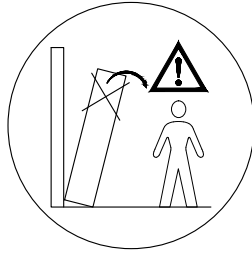
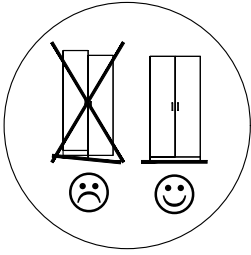


Befestigungsmaterial für die Kippsicherung ist der Wandeigenschaft anzupassen!


Attached wall-fastening-material is for massive walls only. For mounting on all other walls please use special dowels.

matériel de fixation pour le verrou d'inclinaison être adaptés à le matériau du mur




Beugel zowel aan de kast als aan de muur bevestigen om kiepen te voorkomen!

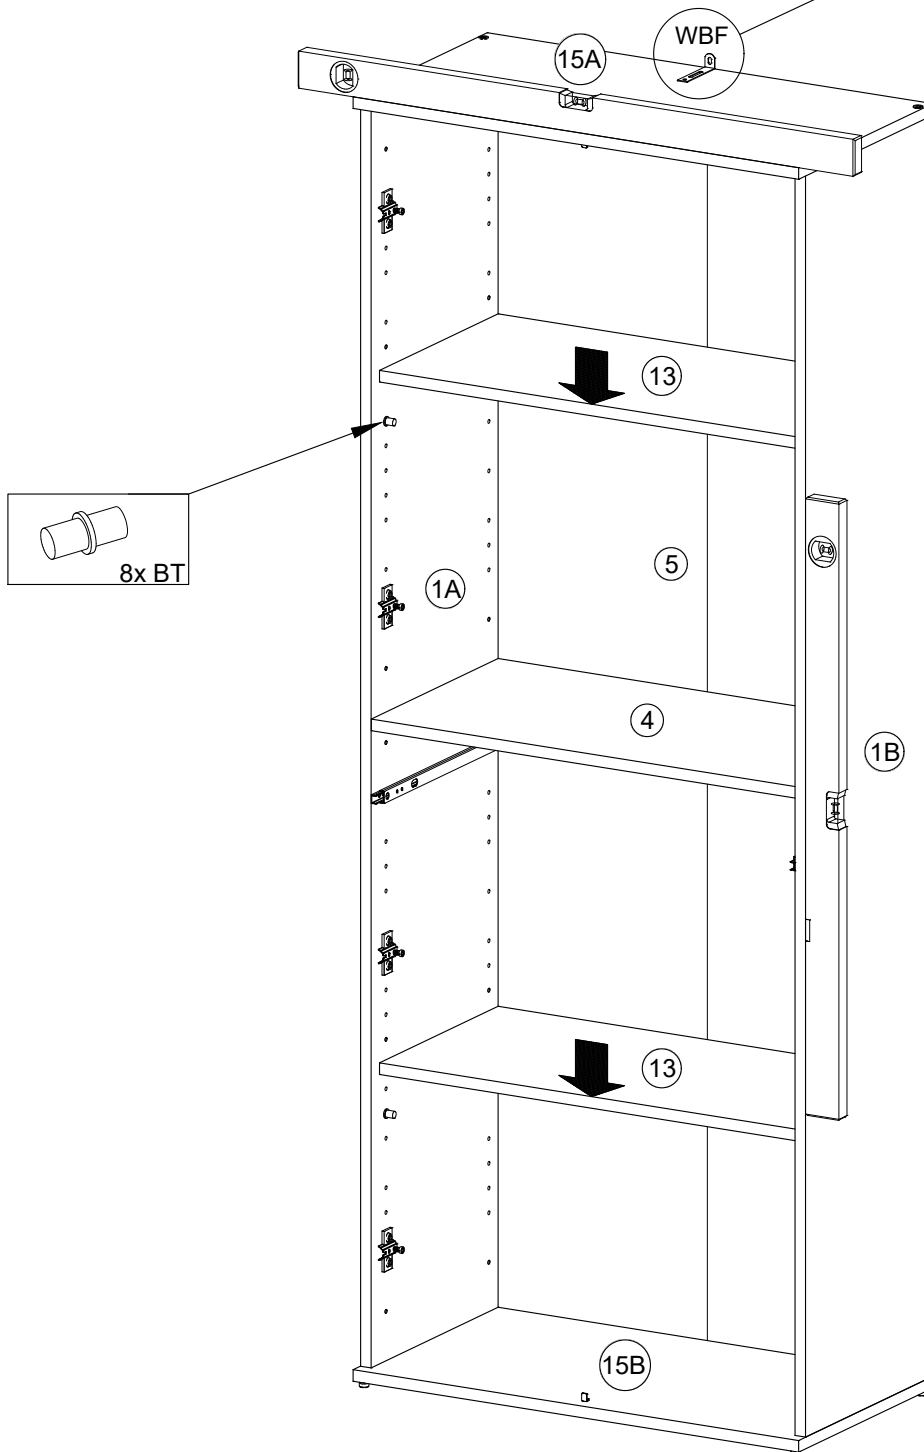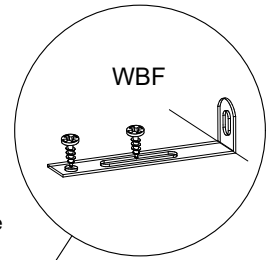

H


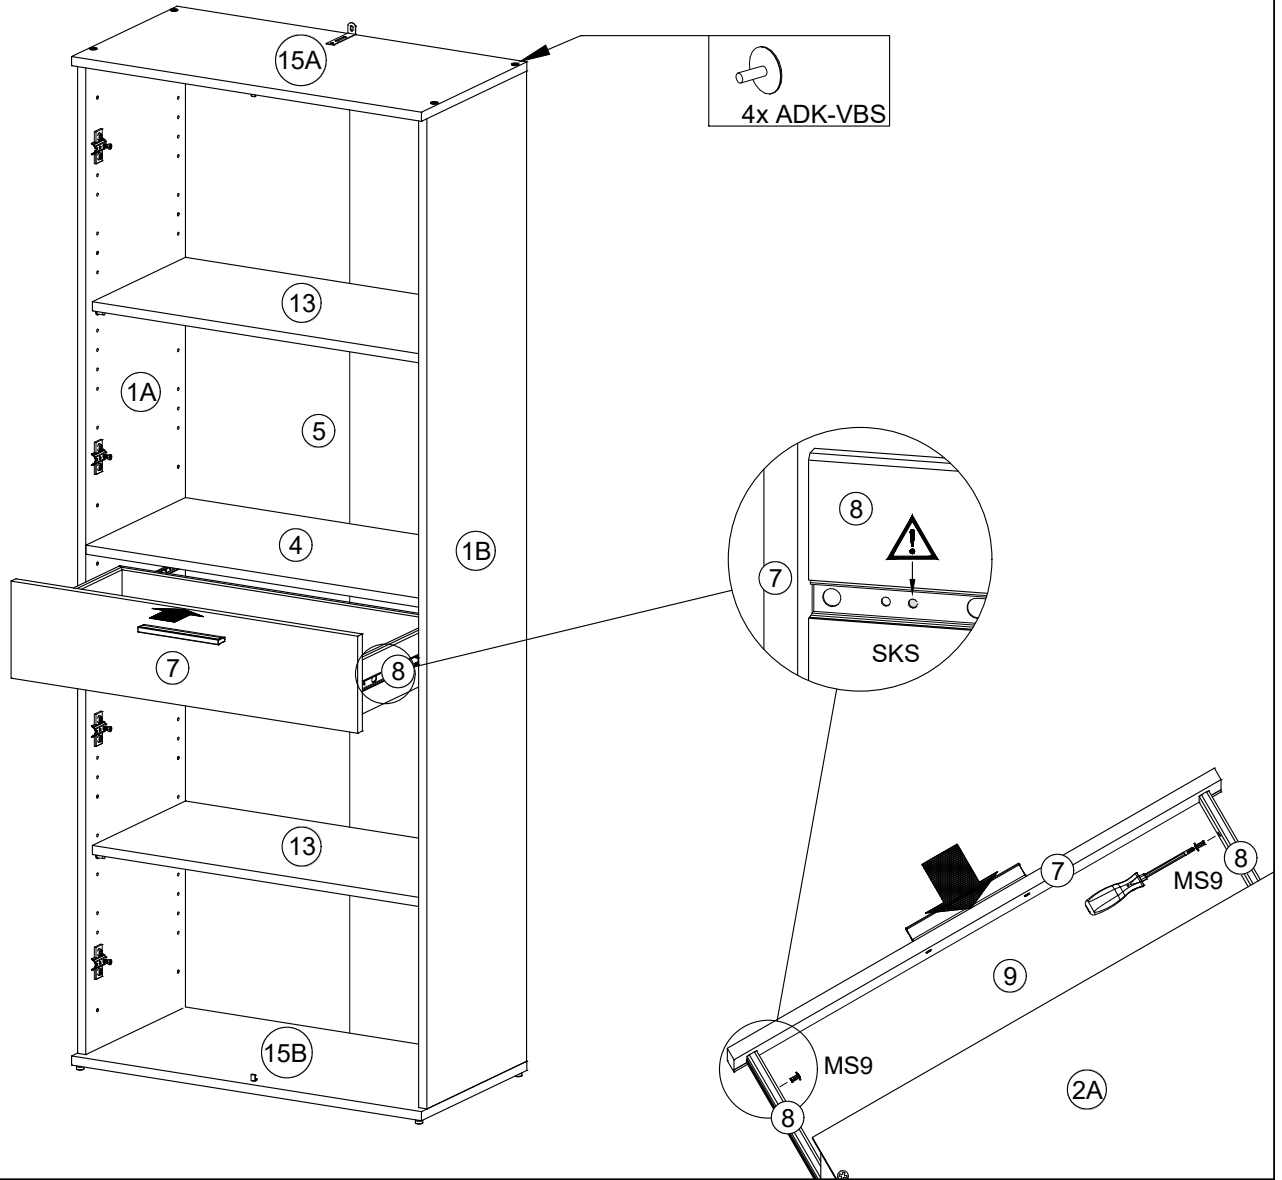


I

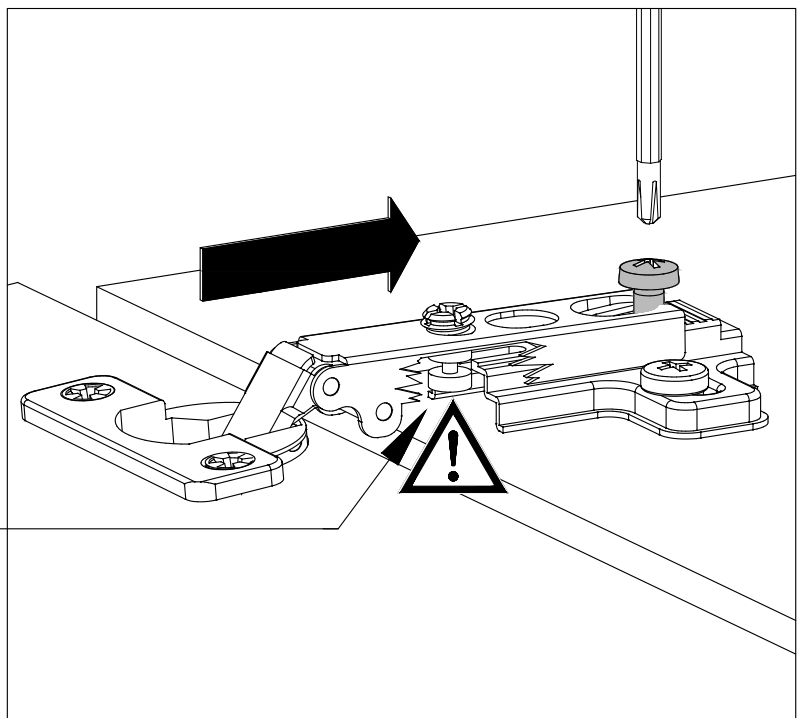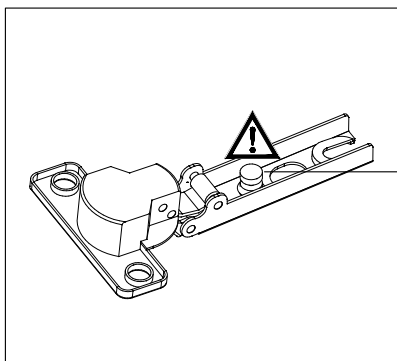

J

8x

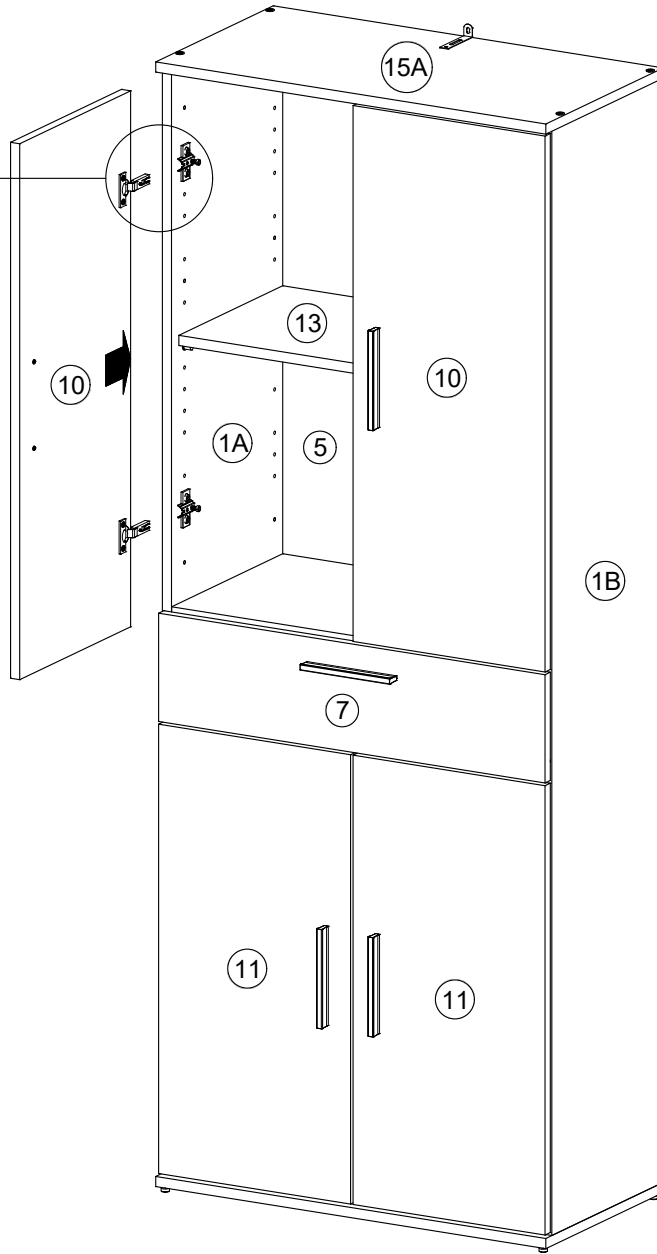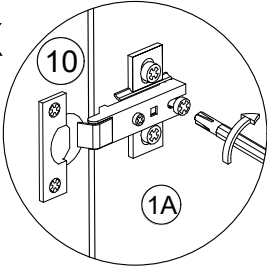

K

