


NOVA LUCE

9006096

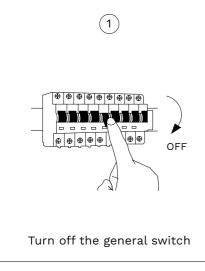


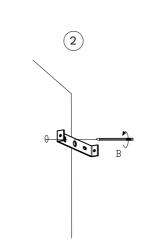


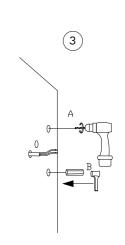


Mark where to drill holes

Make holes & apply anchors

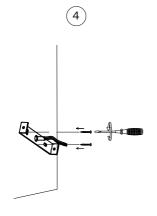

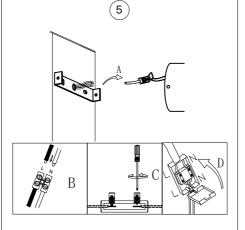

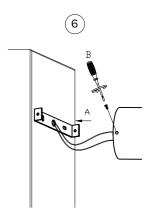


Tie up the screws to make it stable

Connect the wires

Fix the luminaire into place by tying up the side screws Then apply the bulb & fix the cap into place



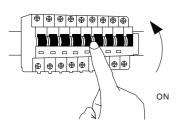



Turn on the general switch

