

2 X

30min

#13

- (D)

AUFBAUANLEITUNG
- (NL)

HANDLEIDING VOOR DE MONTAGE
- (TR)

MONTAJ TALIMATI
- (RO)

INSTRUCTIUNI DE ASAMBLARE
- (F)

INSTRUCTION D'ASSEMBLAGE
- (CZ)

POKYNY K MONTÁŽI
- (BG)

ИНСТРУКЦИИ ЗА МОНТАЖ
- (HR)

NAPUTCI ZA MONTAŽU
- (E)

INSTRUCCIONES DE MONTAJE
- (GB)

ASSEMBLY INSTRUCTIONS
- (PL)

INSTRUKCJA MONTAŻU
- (RU)

Инструкция по монтажу
- (I)

PROCEDURA DI ASSEMBLAGGIO
- (SK)

POKYNY K MONTÁŽI
- (HU)

KÖZGYŰLÉS UTASÍTÁSOK
- (SLO)

ASSEMBLY INSTRUCTIONS
- (S)

MONTERINGSANVISNING
- (LT)

DIEGIMO INSTRUKCIJOS

BOXSPRING SALUS



A

x4

B

x12

M6x20

C

x2

D

x2

E

x6

F



x12

M6x30

G

x4

M6x40

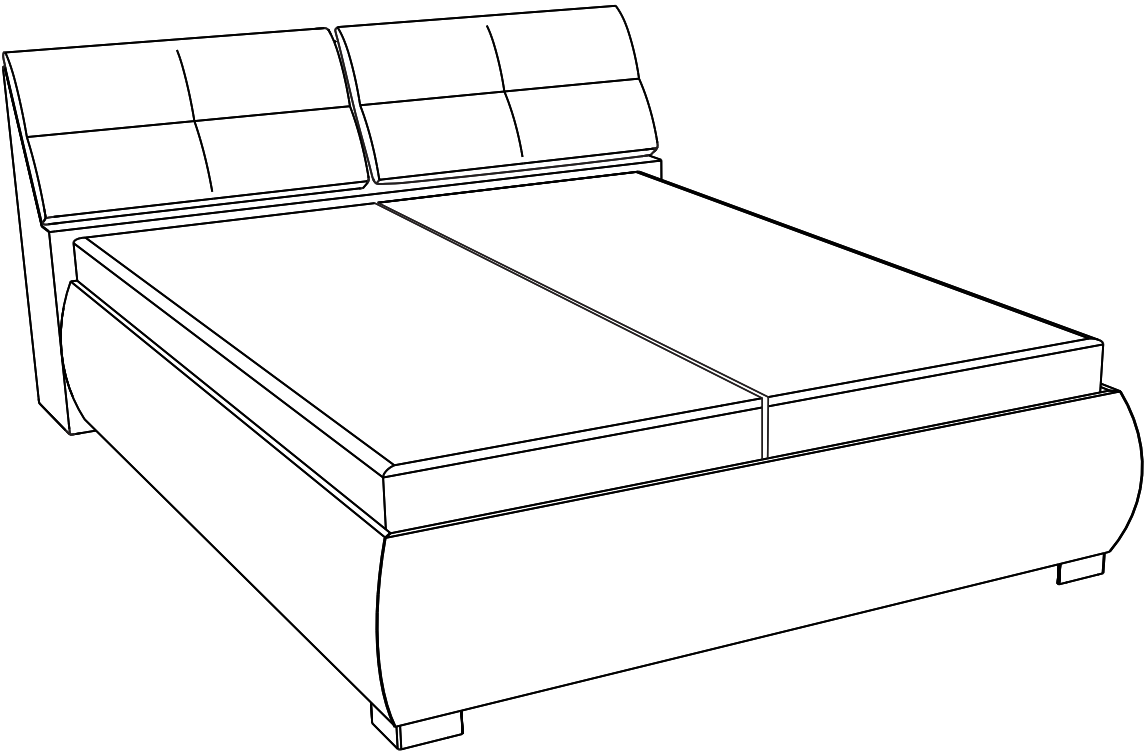

PENSEZ AU TRI!

ENSEMBLE
REDUITS L'IMPACT
ENVIRONNEMENTAL
DES EMBALLAGES

ELEMENTS BOIS
PLASTIQUE
A JETER

ELEMENTS METAL CARTON
PAPIER
A RECYCLER

V2/2018

page 1

CONSIGNE POUVANT VARIER LOCALEMENT > WWW.CONSIGNESDETRE.FR

2 X

30min

- D
AUFBAUANLEITUNG

NL
HANDLEIDING VOOR DE MONTAGE

TR
MONTAJ TALIMATI

RO
INSTRUCTIUNI DE ASAMBLARE

F
INSTRUCTION D'ASSEMBLAGE

CZ
POKYNY K MONTÁŽI

BG
ИНСТРУКЦИИ ЗА МОНТАЖ

HR
NAPUTCI ZA MONTAŽU

E
INSTRUCCIONES DE MONTAJE
- GB
ASSEMBLY INSTRUCTIONS

PL
INSTRUKCJA MONTAŻU

RU
Инструкция по монтажу

I
PROCEDURA DI ASSEMBLAGGIO

SK
POKYNY K MONTÁŽI


HU
KÖZGYŰLÉS UTASÍTÁSOK

SLO
ASSEMBLY INSTRUCTIONS

S
MONTERINGSANVISNING

LT
DIEGIMO INSTRUKCIJOS

BOXSPRING
SALUS

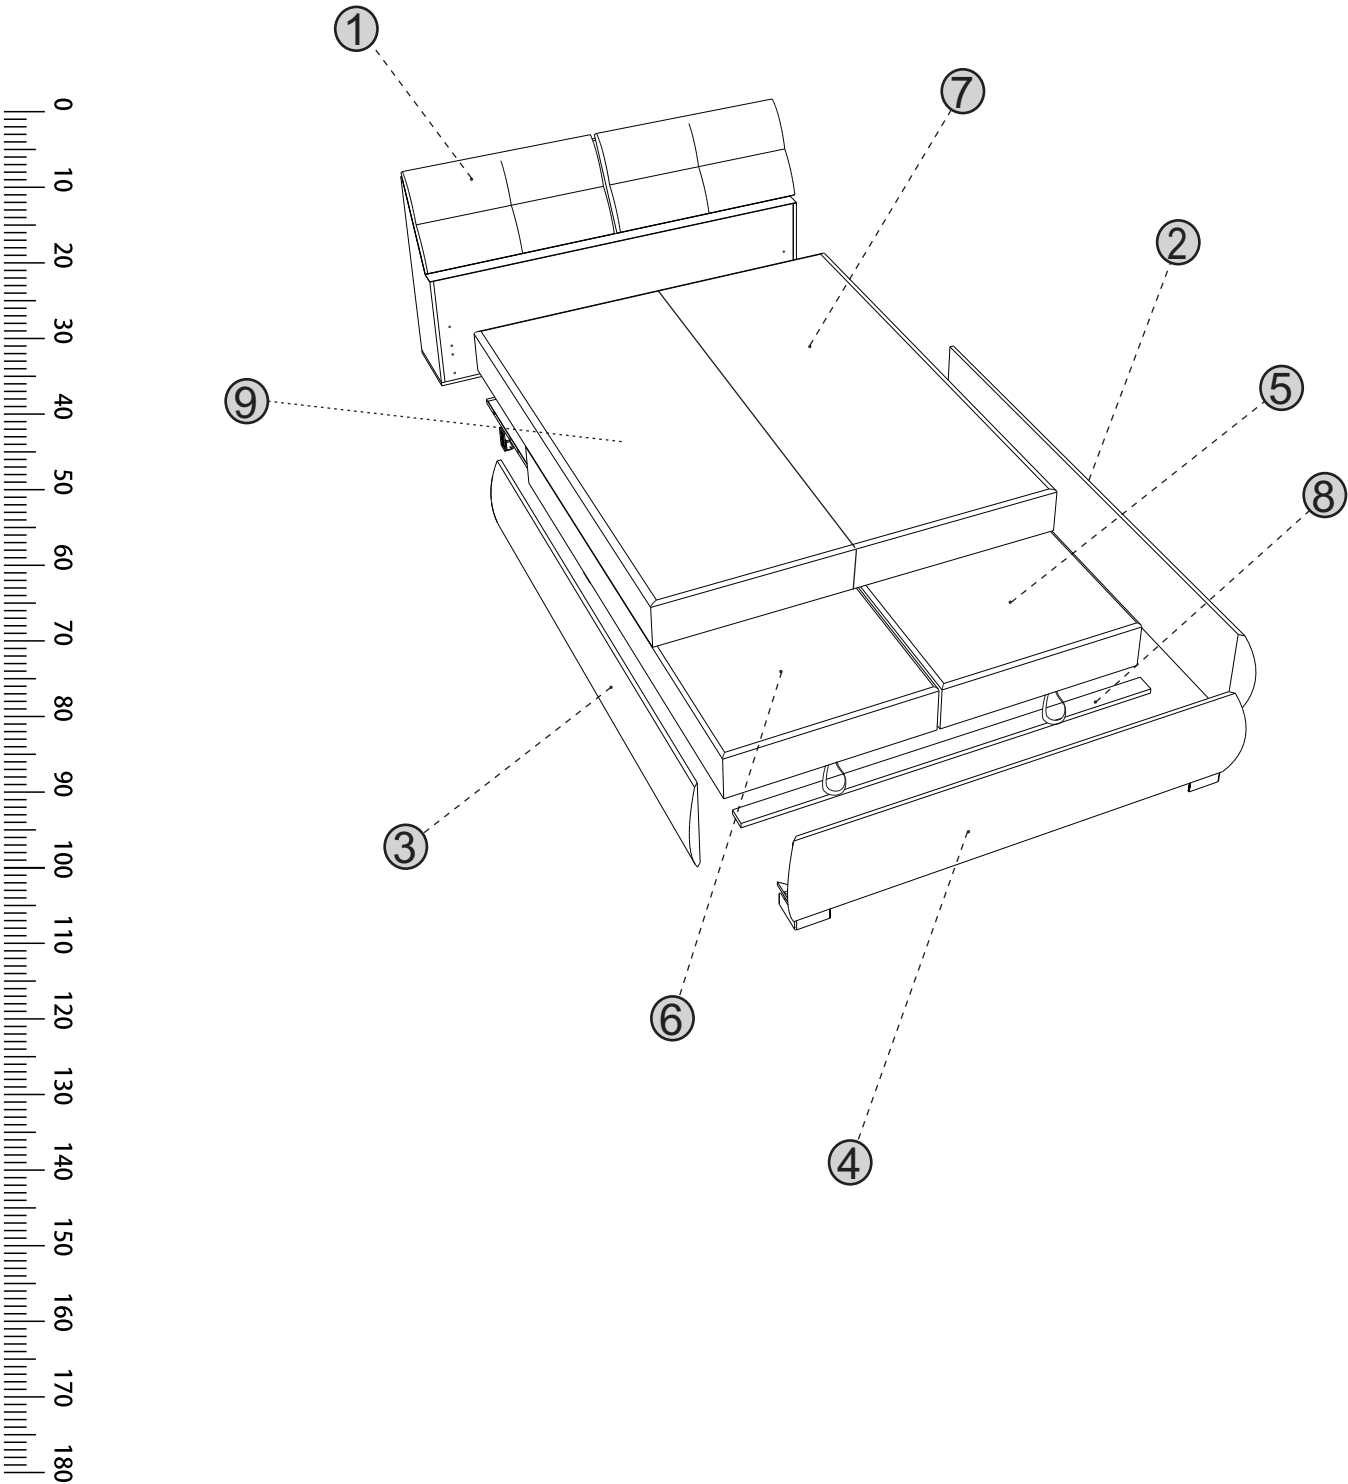

2 X


30min

#13



- (D) AUFBAUANLEITUNG
 (NL) HANDLEIDING VOOR DE MONTAGE
 (TR) MONTAJ TALIMATI
 (RO) INSTRUCTIUNI DE ASAMBLARE
 (F) INSTRUCTION D'ASSEMBLAGE
 (CZ) POKYNY K MONTÁŽI
 (BG) ИНСТРУКЦИИ ЗА МОНТАЖ
 (HR) NAPUTCI ZA MONTAŽU
 (E) INSTRUCCIONES DE MONTAJE

- (GB) ASSEMBLY INSTRUCTIONS
 (PL) INSTRUKCJA MONTAŻU
 (RU) Инструкция по монтажу
 (I) PROCEDURA DI ASSEMBLAGGIO
 (SK) POKYNY K MONTÁŽI
 (HU) KÖZGYŰLÉS UTASÍTÁSOK
 (SLO) ASSEMBLY INSTRUCTIONS
 (S) MONTERINGSANVISNING
 (LT) DIEGIMO INSTRUKCIJOS


BOXSPRING SALUS

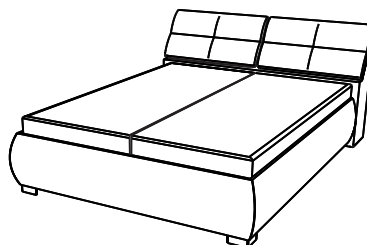

1

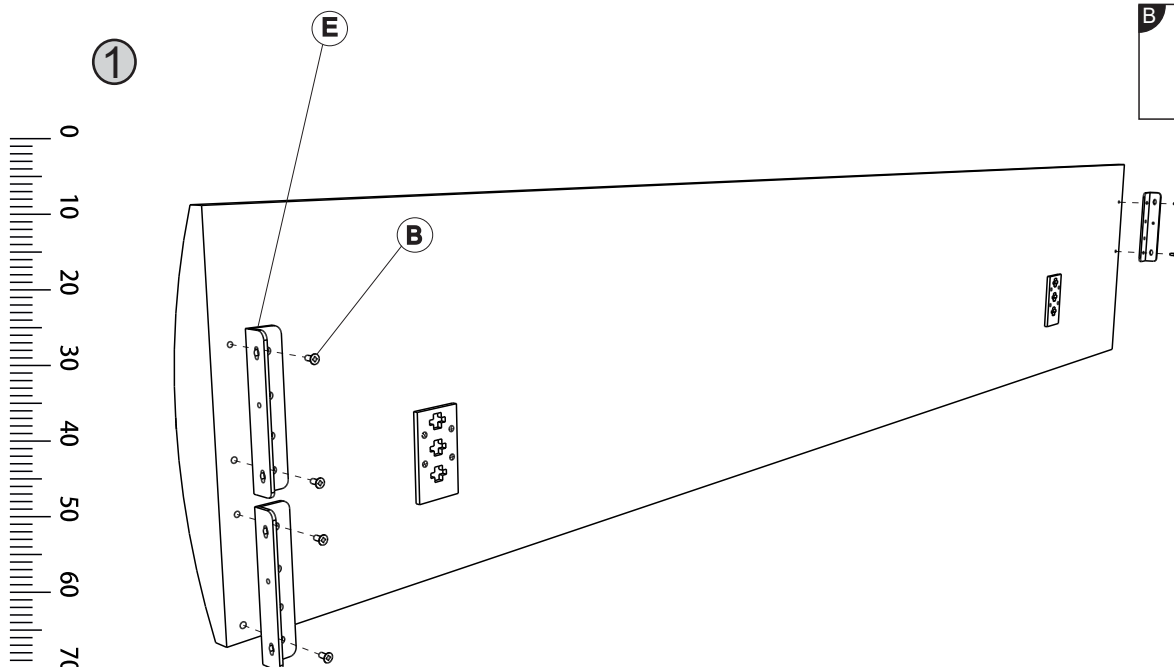

2

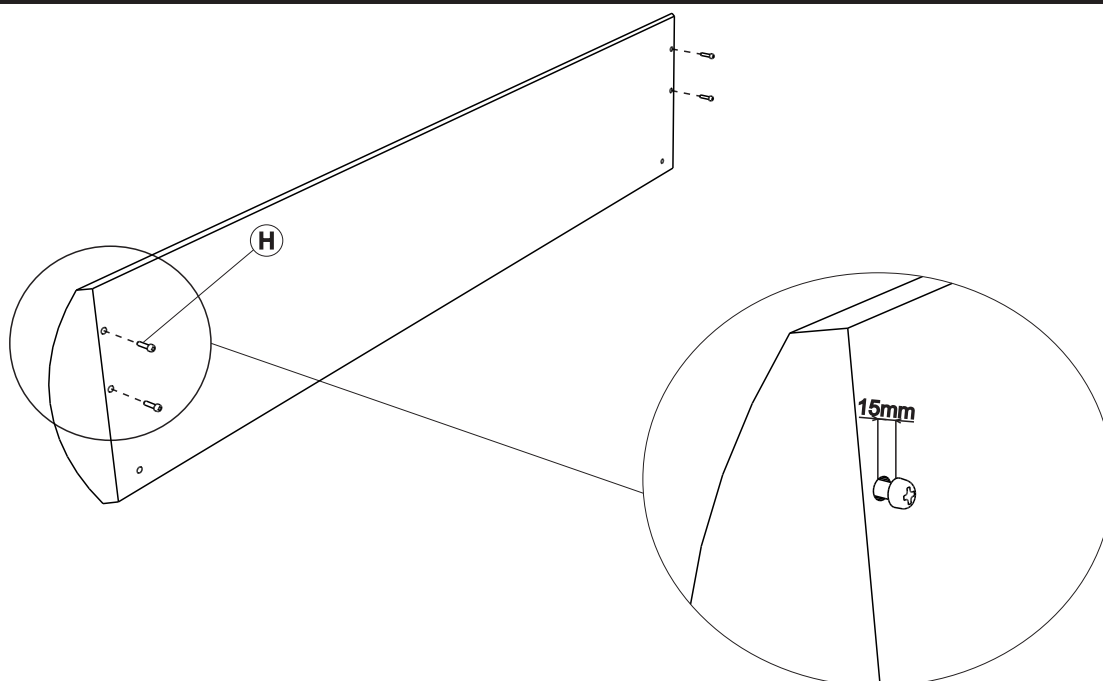

2 X

30min

#13

- D
NL
TR
RO
F
CZ
BG
HR
E


AUFBAUANLEITUNG
HANDLEIDING VOOR DE MONTAGE
MONTAJ TALIMATI
INSTRUCTIUNI DE ASAMBLARE
INSTRUCTION D'ASSEMBLAGE
POKYNY K MONTÁŽI
ИНСТРУКЦИИ ЗА МОНТАЖ
NAPUTCI ZA MONTAŽU
INSTRUCCIONES DE MONTAJE
- GB
PL
RU
I
SK
HU
SLO
S
LT

ASSEMBLY INSTRUCTIONS
INSTRUKCJA MONTAŻU
Инструкция по монтажу
PROCEDURA DI ASSEMBLAGGIO
POKYNY K MONTÁŽI
KÖZGYŰLÉS UTASÍTÁSOK
ASSEMBLY INSTRUCTIONS
MONTERINGSANVISNING
DIEGIMO INSTRUKCIJOS


BOXSPRING SALUS



3

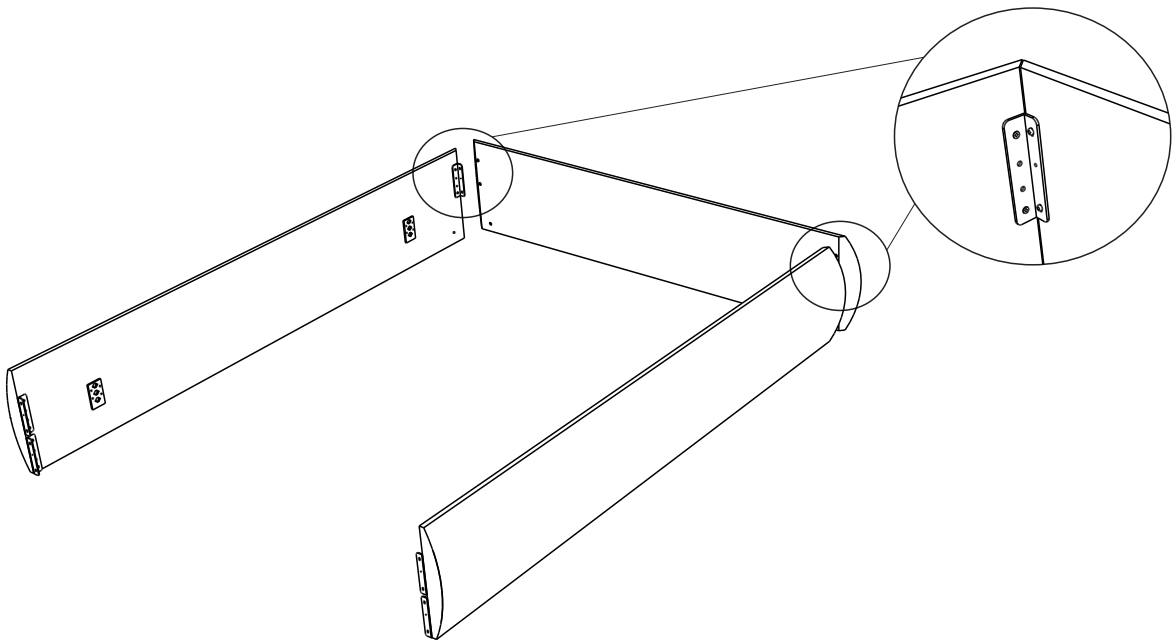

4

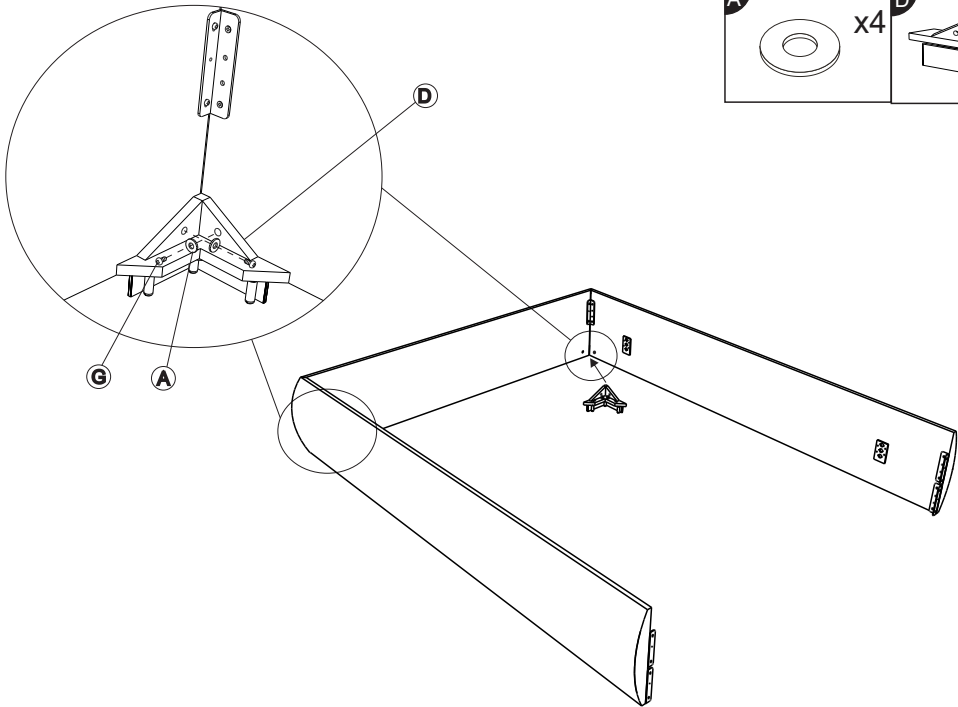

A
x4

D
x2

G
x4

M6x40

2 X

30min

#13

- D
NL
TR
RO
F
CZ
BG
HR
E

AUFBAUANLEITUNG
HANDLEIDING VOOR DE MONTAGE
MONTAJ TALIMATI
INSTRUCTIUNI DE ASAMBLARE
INSTRUCTION D'ASSEMBLAGE
POKYNY K MONTÁŽI
ИНСТРУКЦИИ ЗА МОНТАЖ
NAPUTCI ZA MONTAŽU
INSTRUCCIONES DE MONTAJE
- GB
PL
RU
I
SK
HU
SLO
S
LT

ASSEMBLY INSTRUCTIONS
INSTRUKCJA MONTAŻU
Инструкция по монтажу
PROCEDURA DI ASSEMBLAGGIO
POKYNY K MONTÁŽI
KÖZGYŰLÉS UTASÍTÁSOK
ASSEMBLY INSTRUCTIONS
MONTERINGSANVISNING
DIEGIMO INSTRUKCIJOS

BOXSPRING SALUS



5

6

2 X

30min

#13

- D
NL
TR
RO
F
CZ
BG
HR
E

AUFBAUANLEITUNG
HANDLEIDING VOOR DE MONTAGE
MONTAJ TALIMATI
INSTRUCTIUNI DE ASAMBLARE
INSTRUCTION D'ASSEMBLAGE
POKYNY K MONTÁŽI
ИНСТРУКЦИИ ЗА МОНТАЖ
NAPUTCI ZA MONTAŽU
INSTRUCCIONES DE MONTAJE
- GB
PL
RU
I
SK
HU
SLO
S
LT

ASSEMBLY INSTRUCTIONS
INSTRUKCJA MONTAŻU
Инструкция по монтажу
PROCEDURA DI ASSEMBLAGGIO
POKYNY K MONTÁŽI
KÖZGYŰLÉS UTASÍTÁSOK
ASSEMBLY INSTRUCTIONS
MONTERINGSANVISNING
DIEGIMO INSTRUKCIJOS

BOXSPRING SALUS




7


F

x12

M6x30

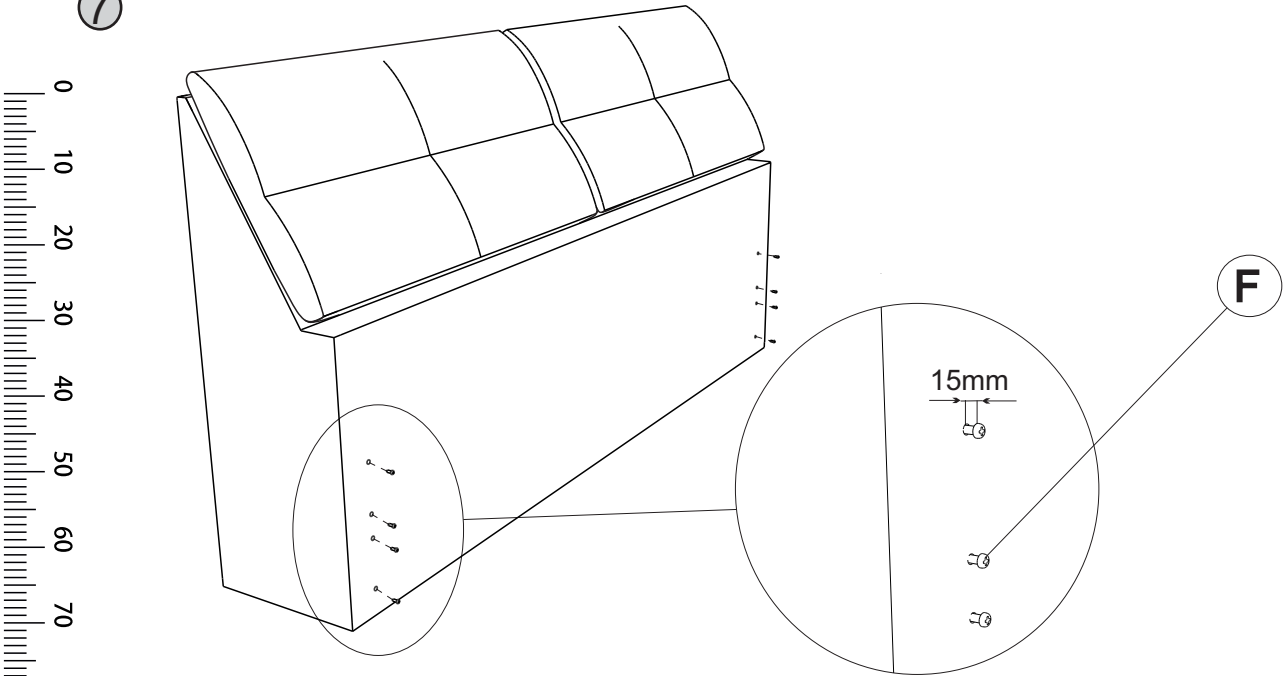

8

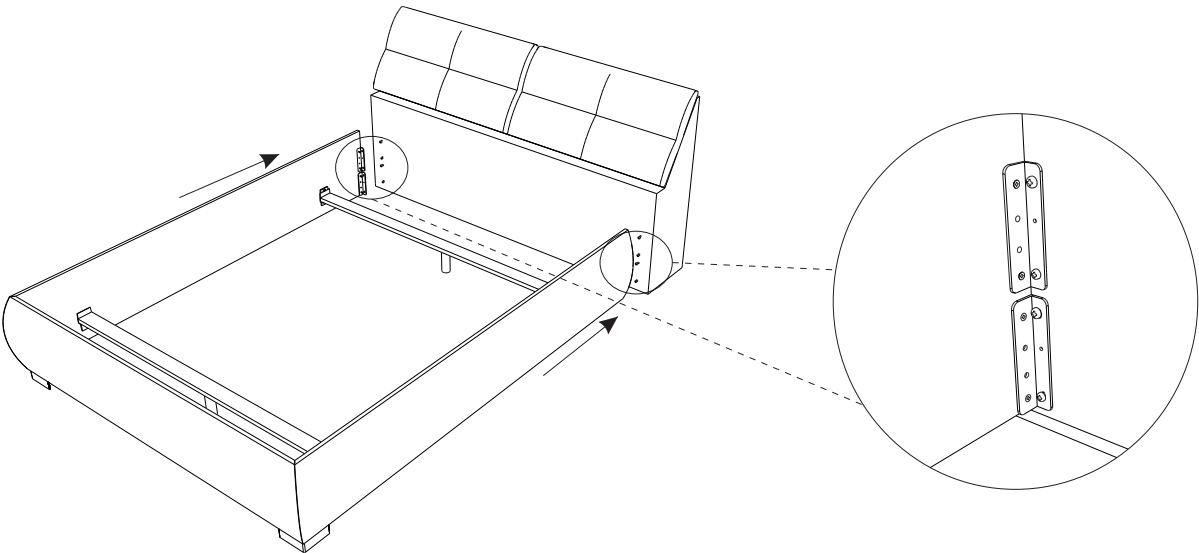

2 X

30min

#13

- D
NL
TR
RO
F
CZ
BG
HR
E

AUFBAUANLEITUNG
HANDLEIDING VOOR DE MONTAGE
MONTAJ TALIMATI
INSTRUCTIUNI DE ASAMBLARE
INSTRUCTION D'ASSEMBLAGE
POKYNY K MONTÁŽI
ИНСТРУКЦИИ ЗА МОНТАЖ
NAPUTCI ZA MONTAŽU
INSTRUCCIONES DE MONTAJE
- GB
PL
RU
I
SK
HU
SLO
S
LT

ASSEMBLY INSTRUCTIONS
INSTRUKCJA MONTAŻU
Инструкция по монтажу
PROCEDURA DI ASSEMBLAGGIO
POKYNY K MONTÁŽI
KÖZGYŰLÉS UTASÍTÁSOK
ASSEMBLY INSTRUCTIONS
MONTERINGSANVISNING
DIEGIMO INSTRUKCIJOS

BOXSPRING SALUS

