

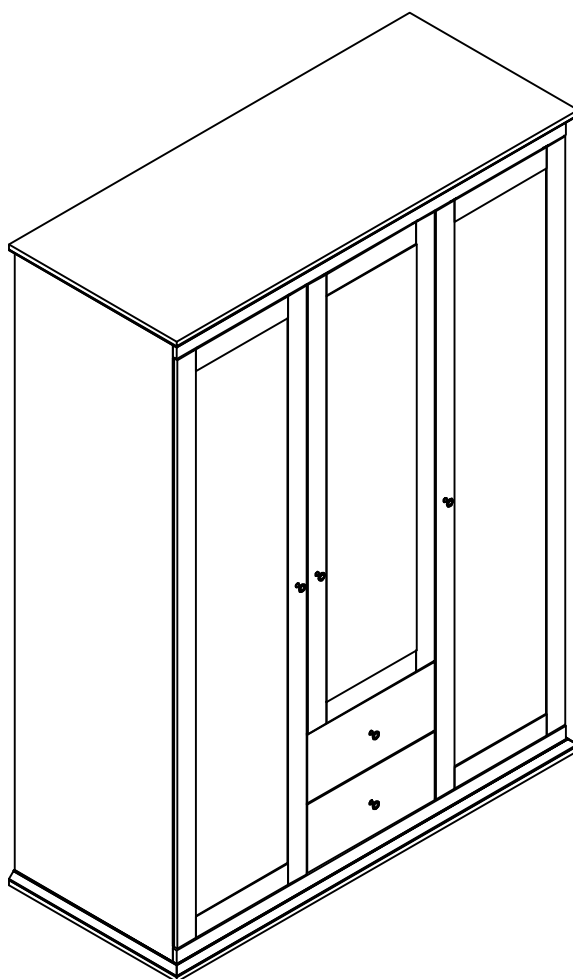
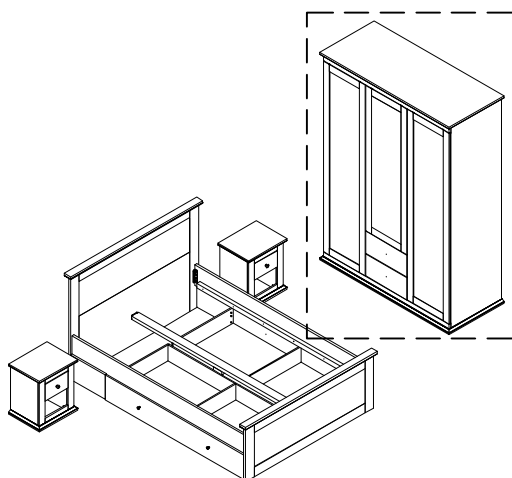
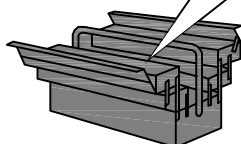



Art. Nr. 3434 6728
6114 0918
















LKZ 41164

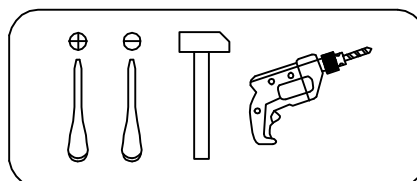

- | | |
|----------------------------------|------------------------------|
| (D) Montageanleitung | (GB) Assembly instructions |
| (FR) Notice de montage | (IT) Istruzioni di montaggio |
| (NL) Handleiding voor de montage | (PL) Instrukcja montazu |
| (CZ) Montážní návod | (SK) Návod na montáž |
| (HU) Szerelési útmutató | (RO) Instrucțiuni de montaj |
| (TR) Montaj talimati | (RU) Инструкция по монтажу |

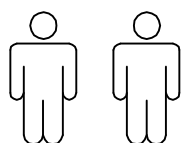



A 090913  7x32 x34	B 000146  15x12 x34	C 100640  20x0.5 x20	D 000151  8x35 x36	E 062367  x5	F 135021  x20
G 000759  3x20 x25	H 155999  x1	I 000754  3.5x16 x2	J 013859  8x40 x1	K 090185  4.5x45 x1	L 010942  4x16 x22
M 053728  x8	N 053685  x3	O 093469  x11	P 101777  70x50 x3	Q 002152  L550 x2	R 000767  3x13 x16
S 000762  3.5x13 x8	T 170390  x4	U 189554  x5	V 013794  M4x22 x5	W 076684  x2	X 000126  x3
Y 030579  x40	Z 235593  6x8 x12				




N	Size/MaB (mm)	Qty	✓	N	Size/MaB (mm)	Qty	✓
1A	2062x596x16	1		13	952x572x16	1	
2A	2062x596x16	1		14	468x572x16	1	
3	550x170x12	2		15	468x572x16	1	
4	550x170x12	2		16	1924x488x16	2	
5	419x170x12	2		17	1468x480x17	1	
6	1468x65x16	2		18	2073x480x3	3	
7	480x224x16	2		19	547x429x3	2	
8	1436x200x16	1		20	L=463	1	
9A	2062x572x16	1		21	L=947	1	
10A	532x572x16	1		22	L=2060	1	
11	1514x635x38	1		23			
12	1514x635x38	1		24			




Service - Dienstverlening - Serwis - Servis - Сервисная служба

Name - Naam - Nazwa - Isim - Название




Nr. - No. - Номер

Typ - Type - Tip - Тип

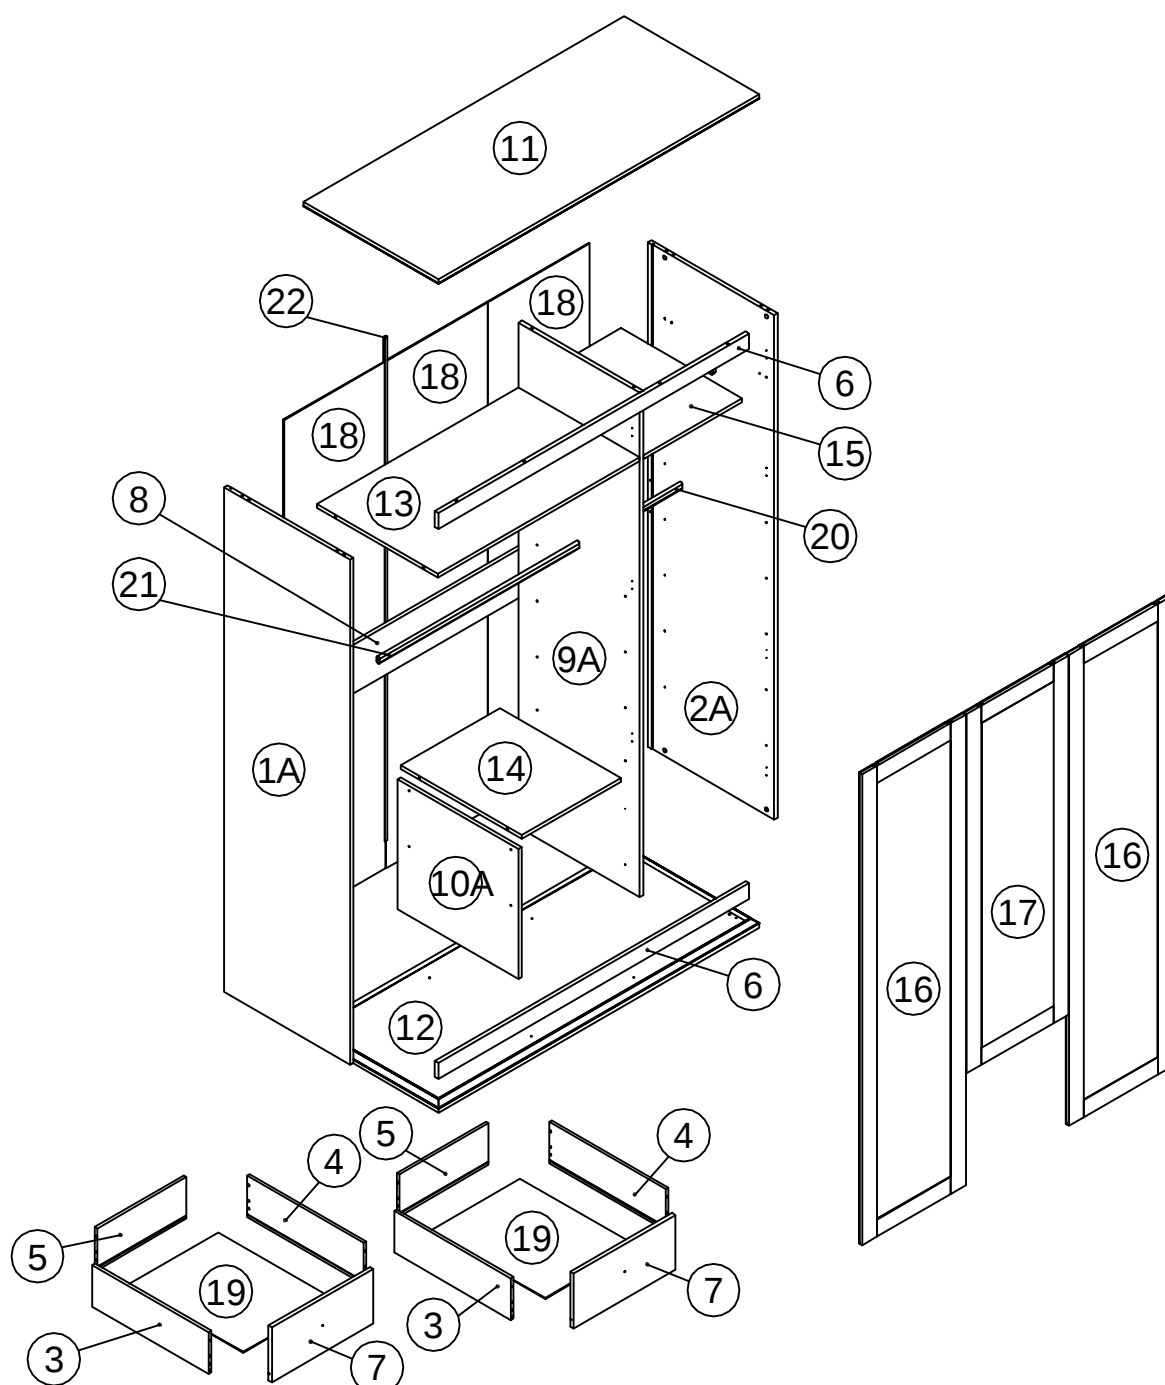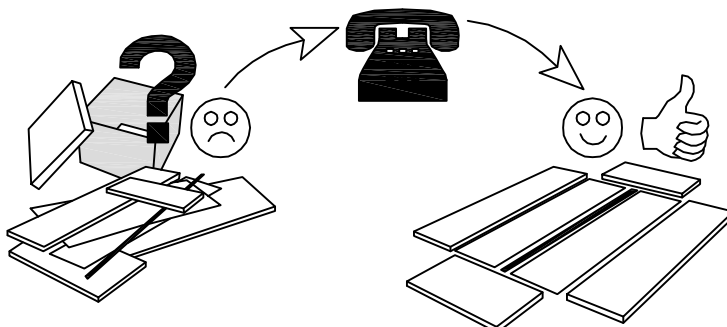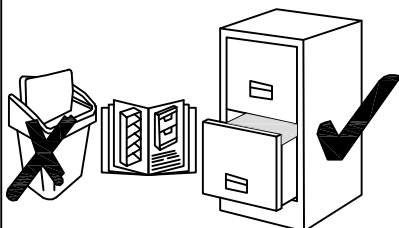


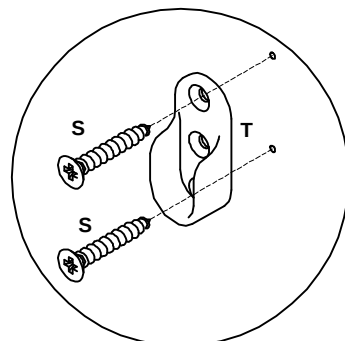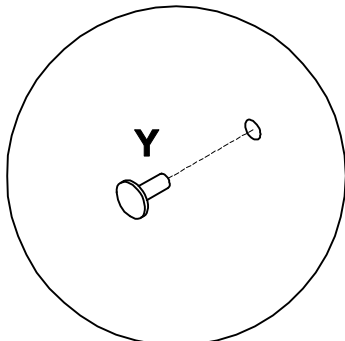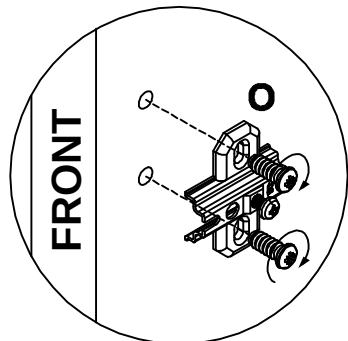

- | | | |
|---------------------|---|---------------------|
| A
090913 |  | 7x32
x8 |
| B
000146 |  | 15x12
x8 |
| D
000151 |  | 8x35
x8 |
| O
093469 |  | x8 |
| S
000762 |  | 3.5x13
x4 |
| T
170390 |  | x2 |
| Y
0303579 |  | x20 |

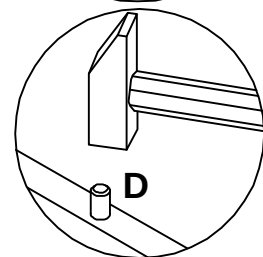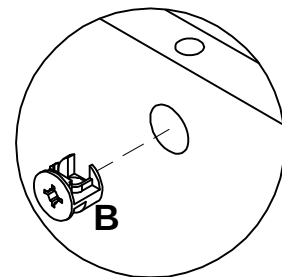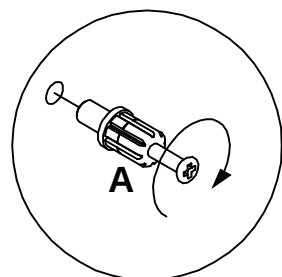


2

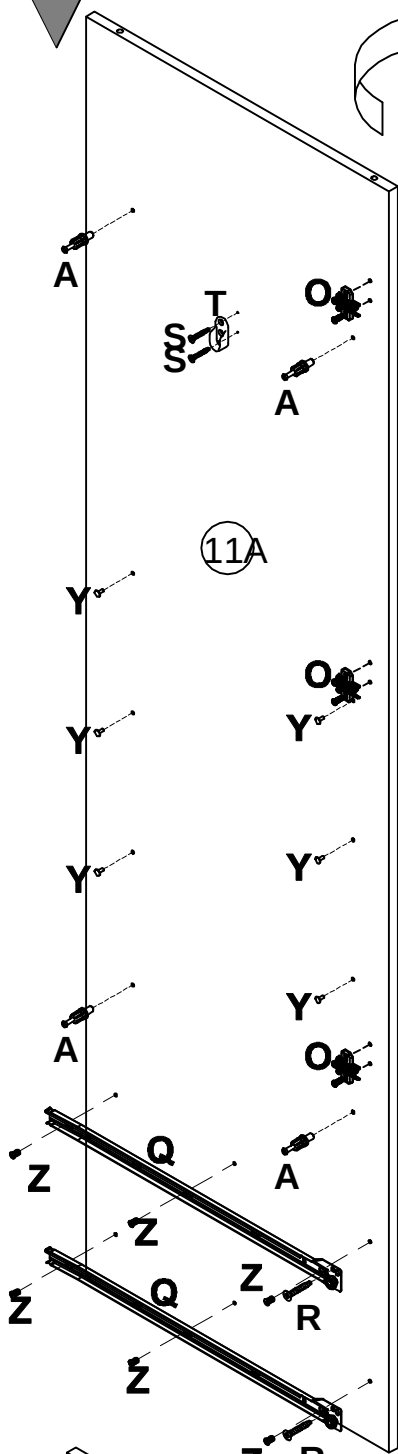


11A







11A

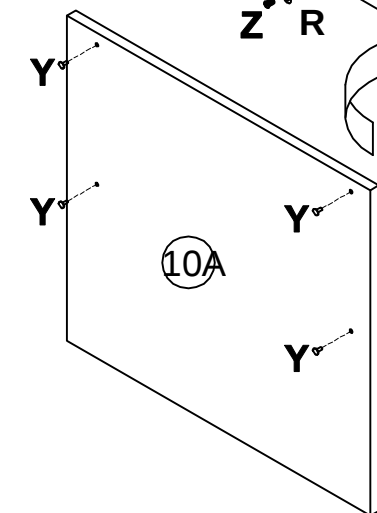


10A

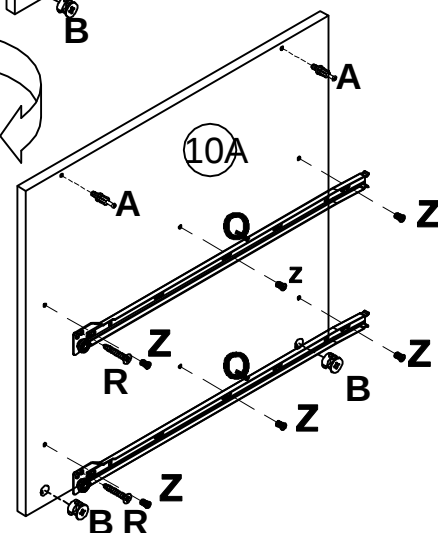




10A

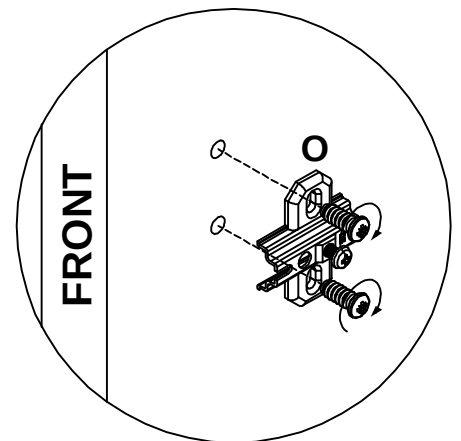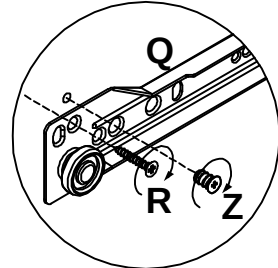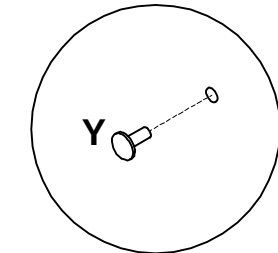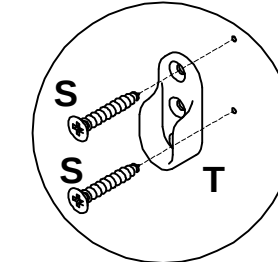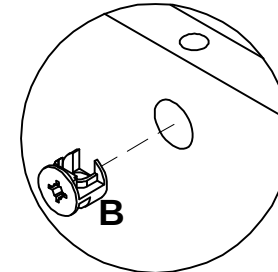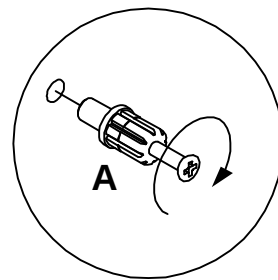


A		7x32	x8
B		15x12	x4
O			x6
Q		L550	x4
R		3x13	x4
S		3.5x13	x4
T			x2
Y			x12
Z		6x8	x12

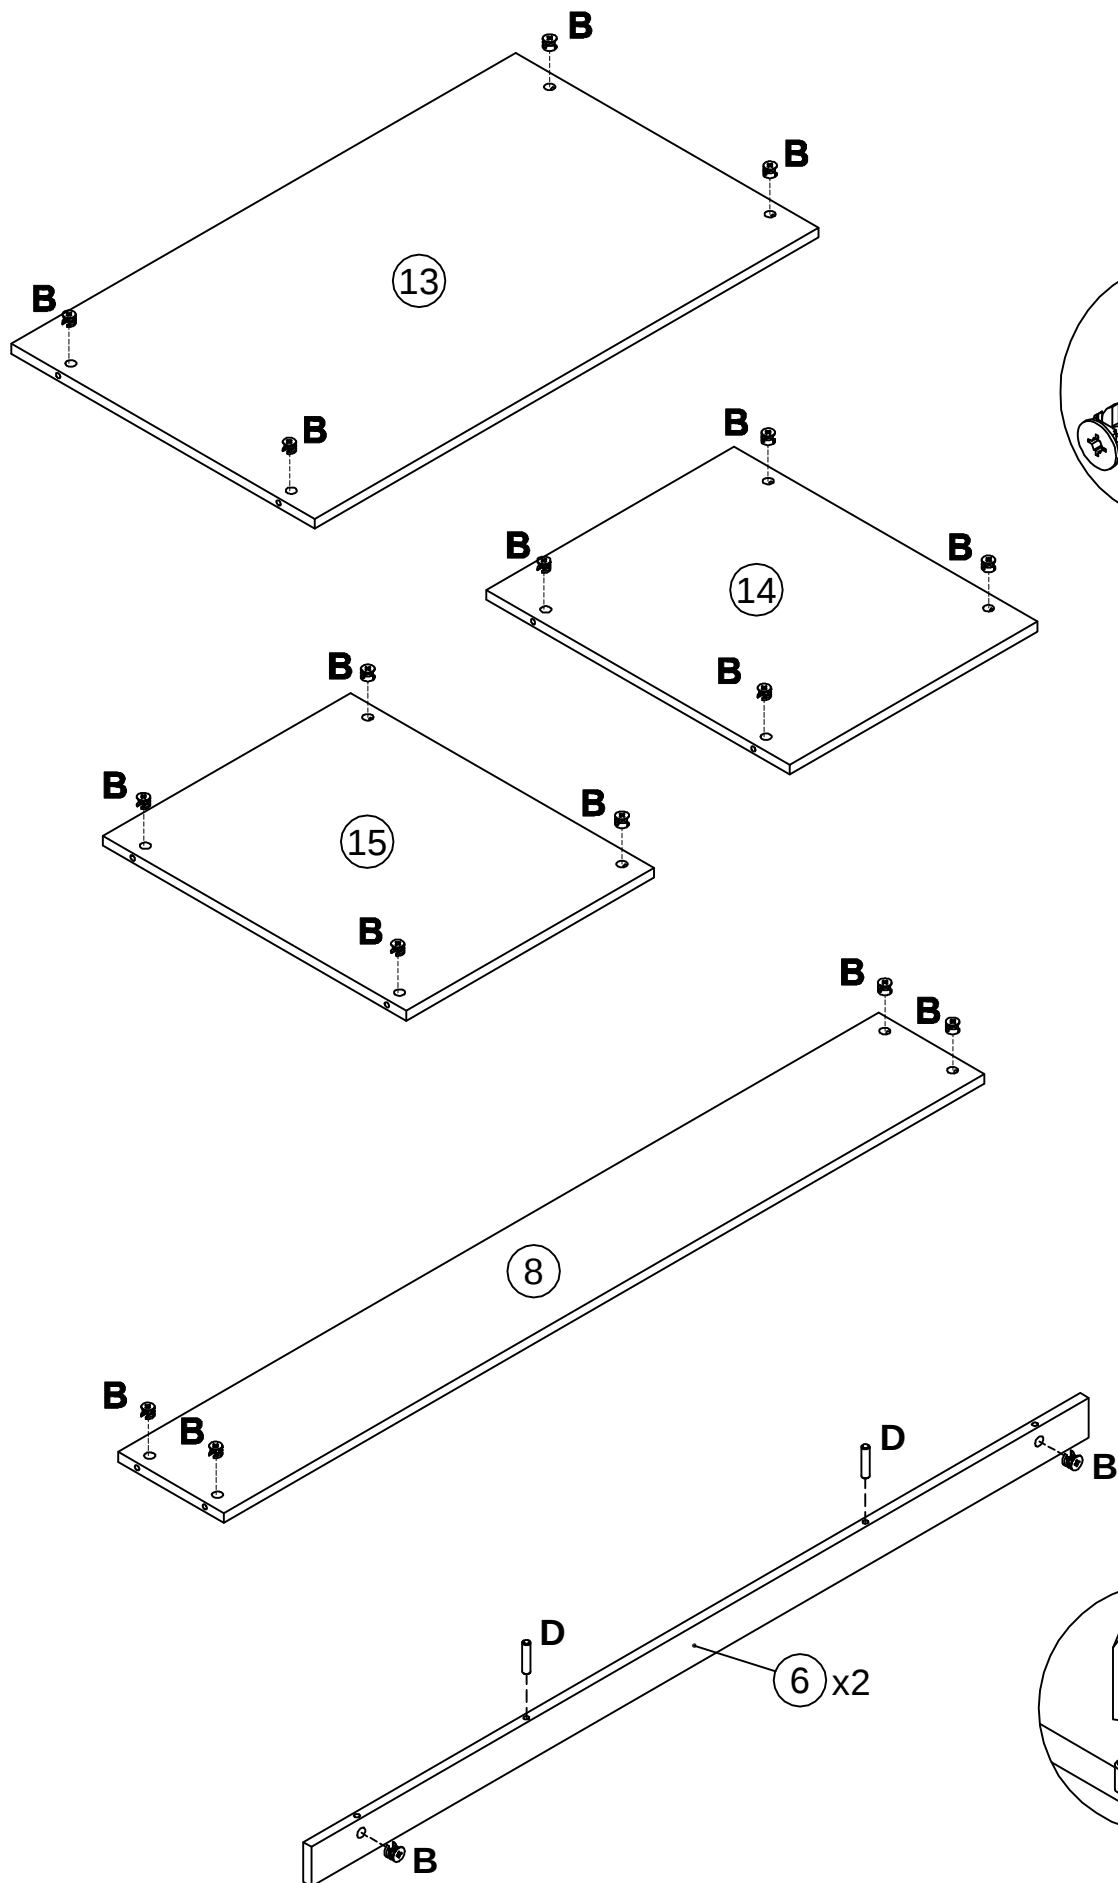





B		15x12
000146		x20
D		8x35
000151		x4

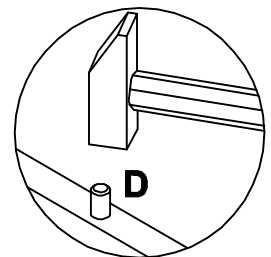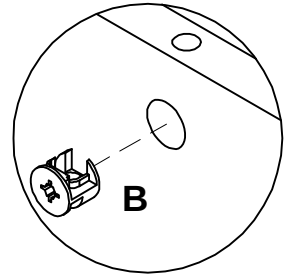


4

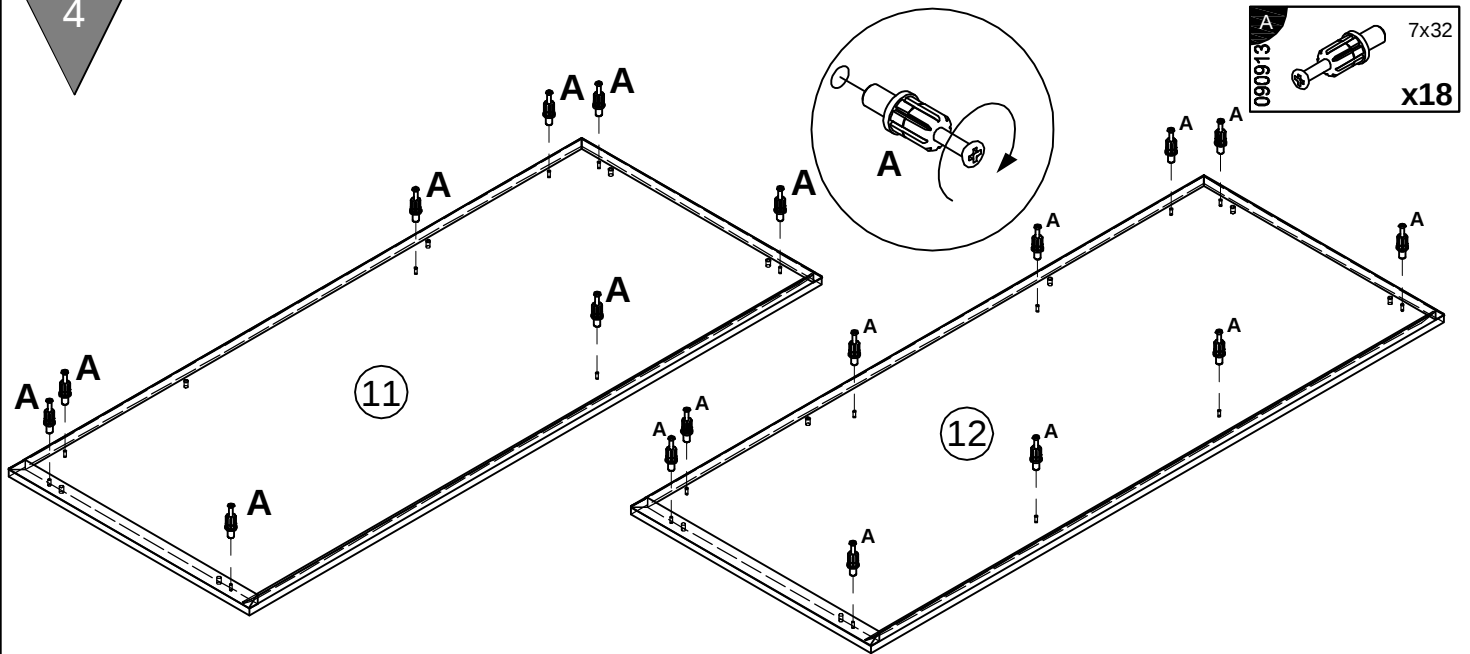


5

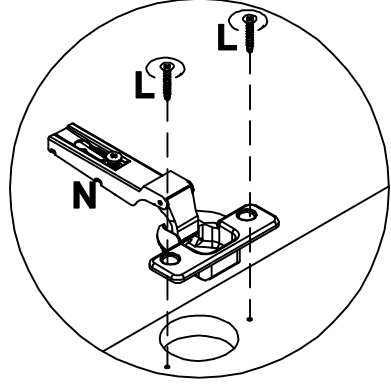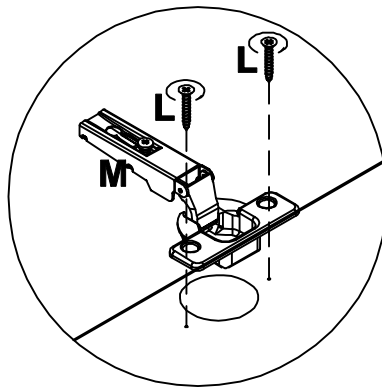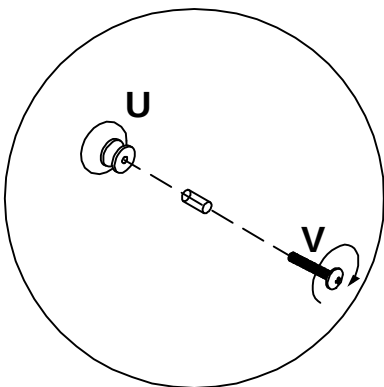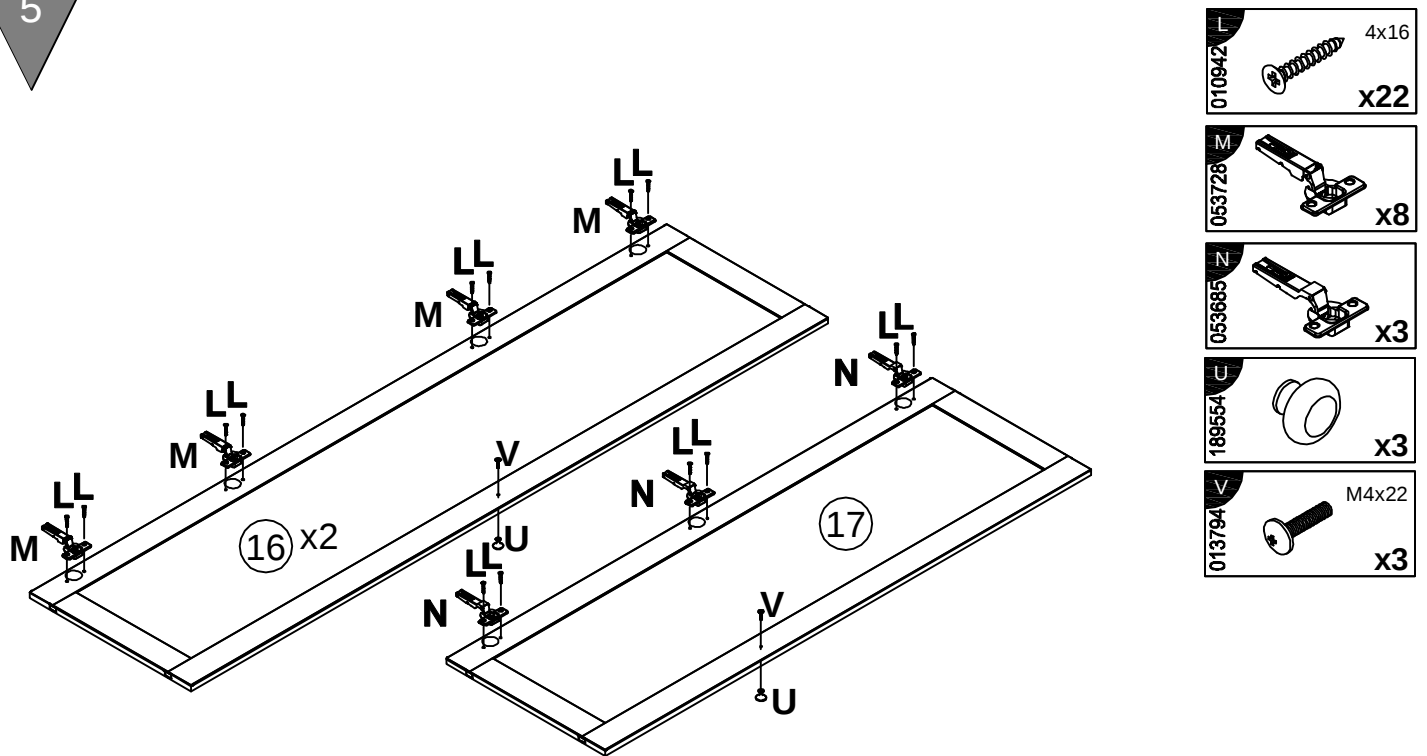

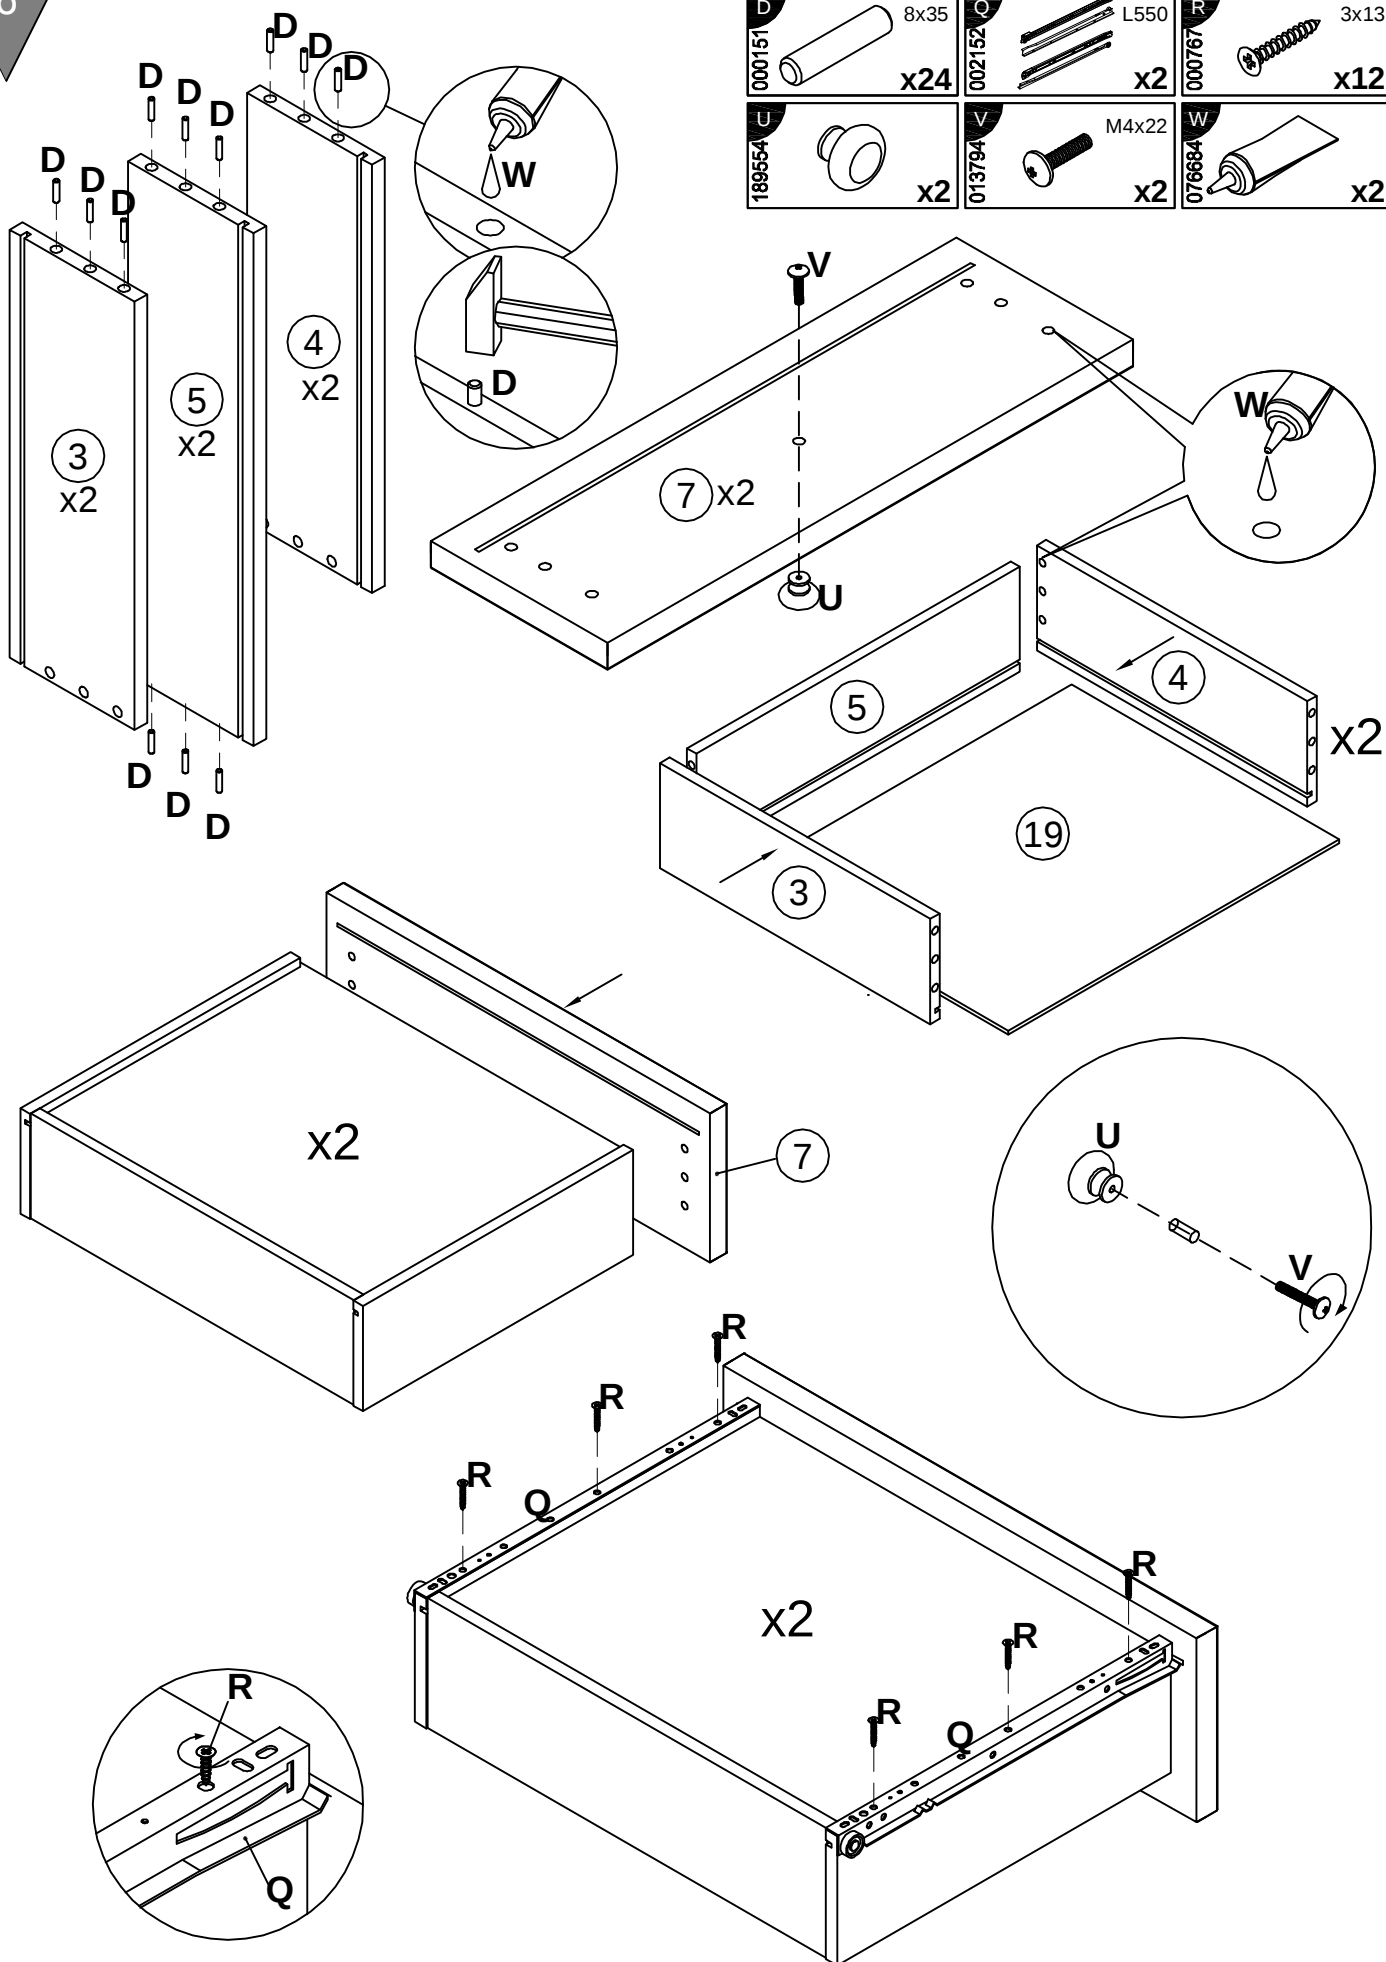


7

100640 C 20x0.5
x8

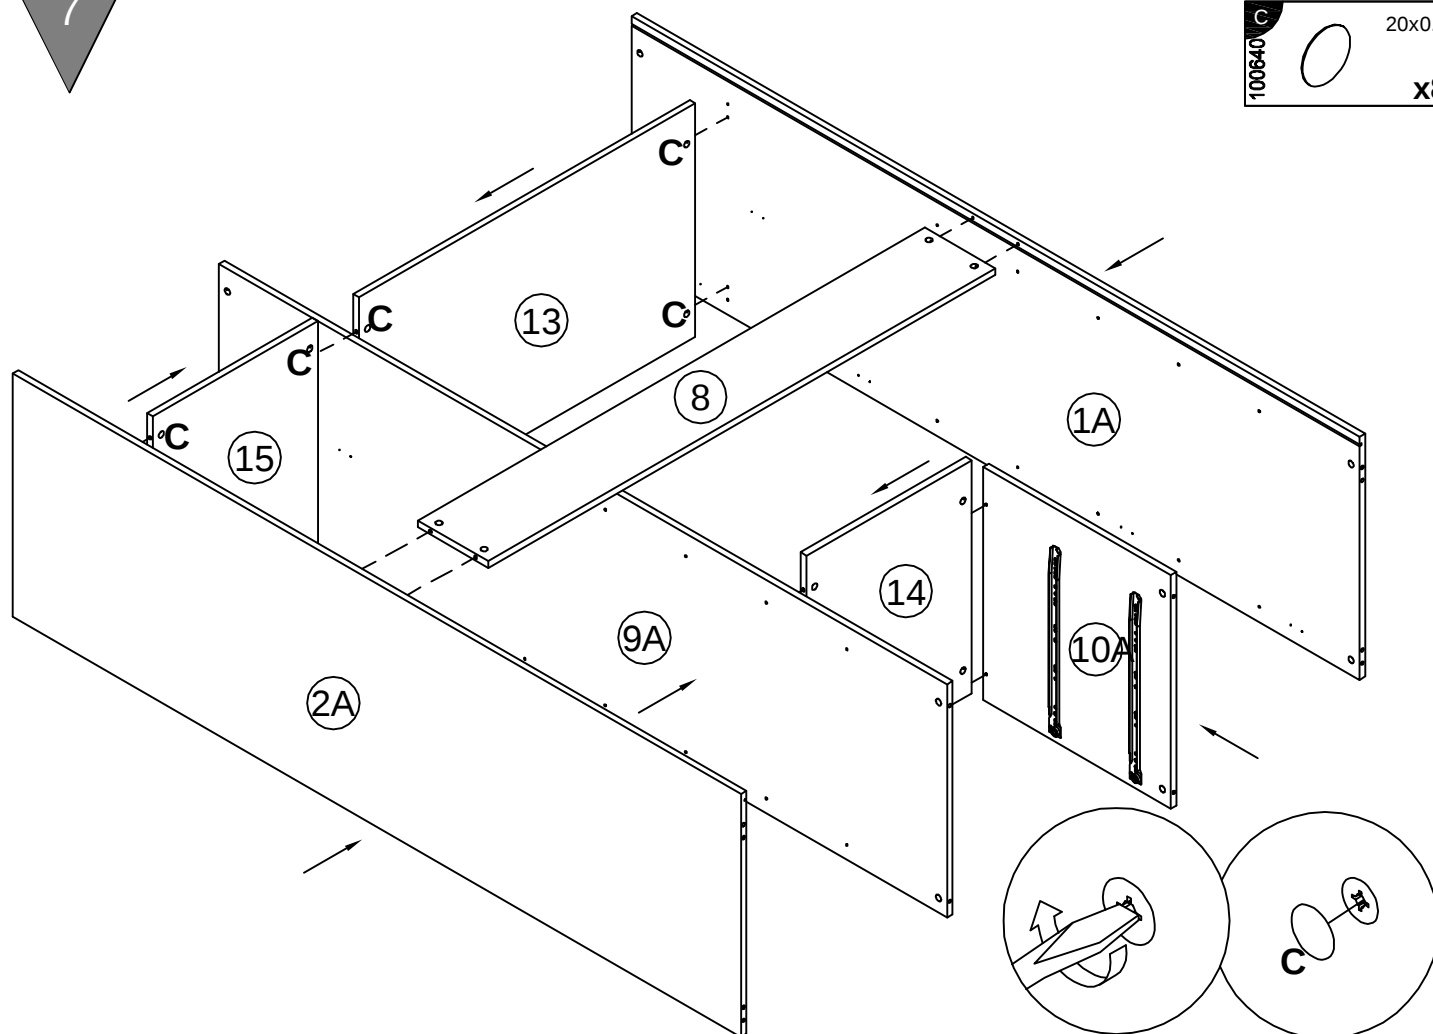


8

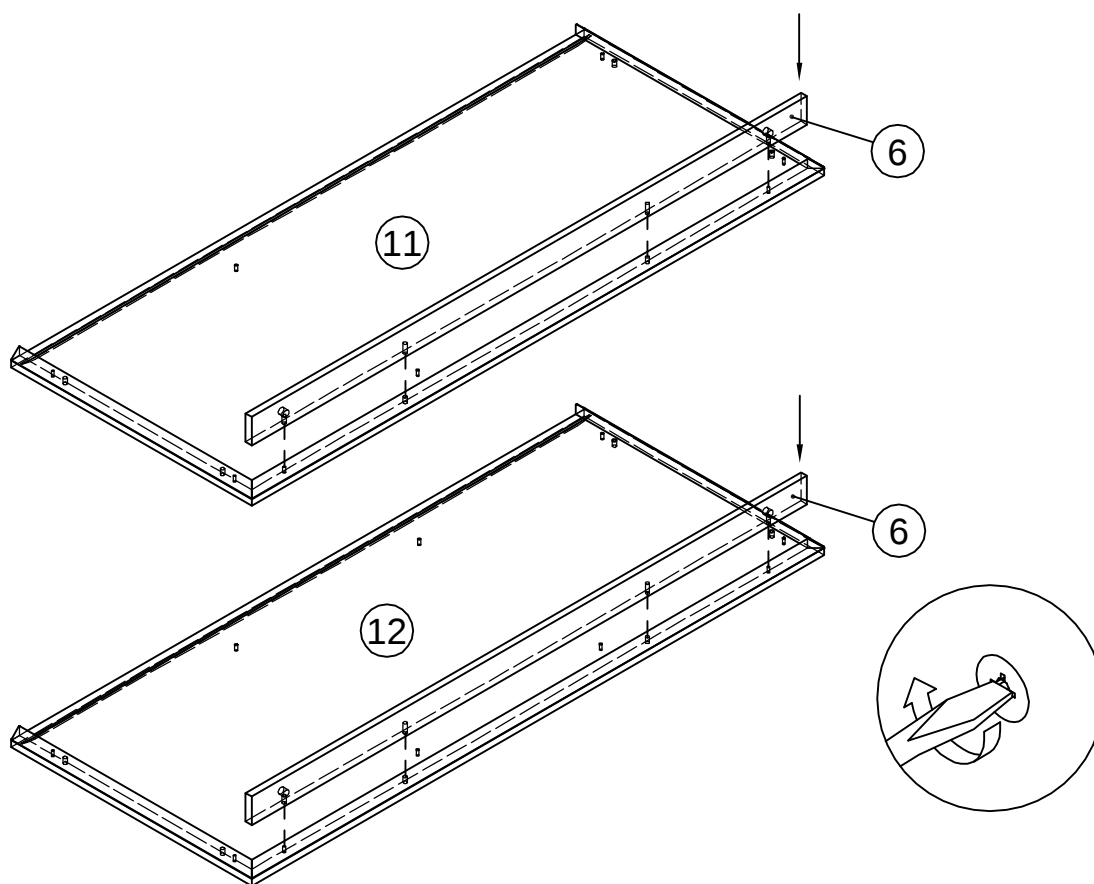



9

100640 C 20x0.5
x6

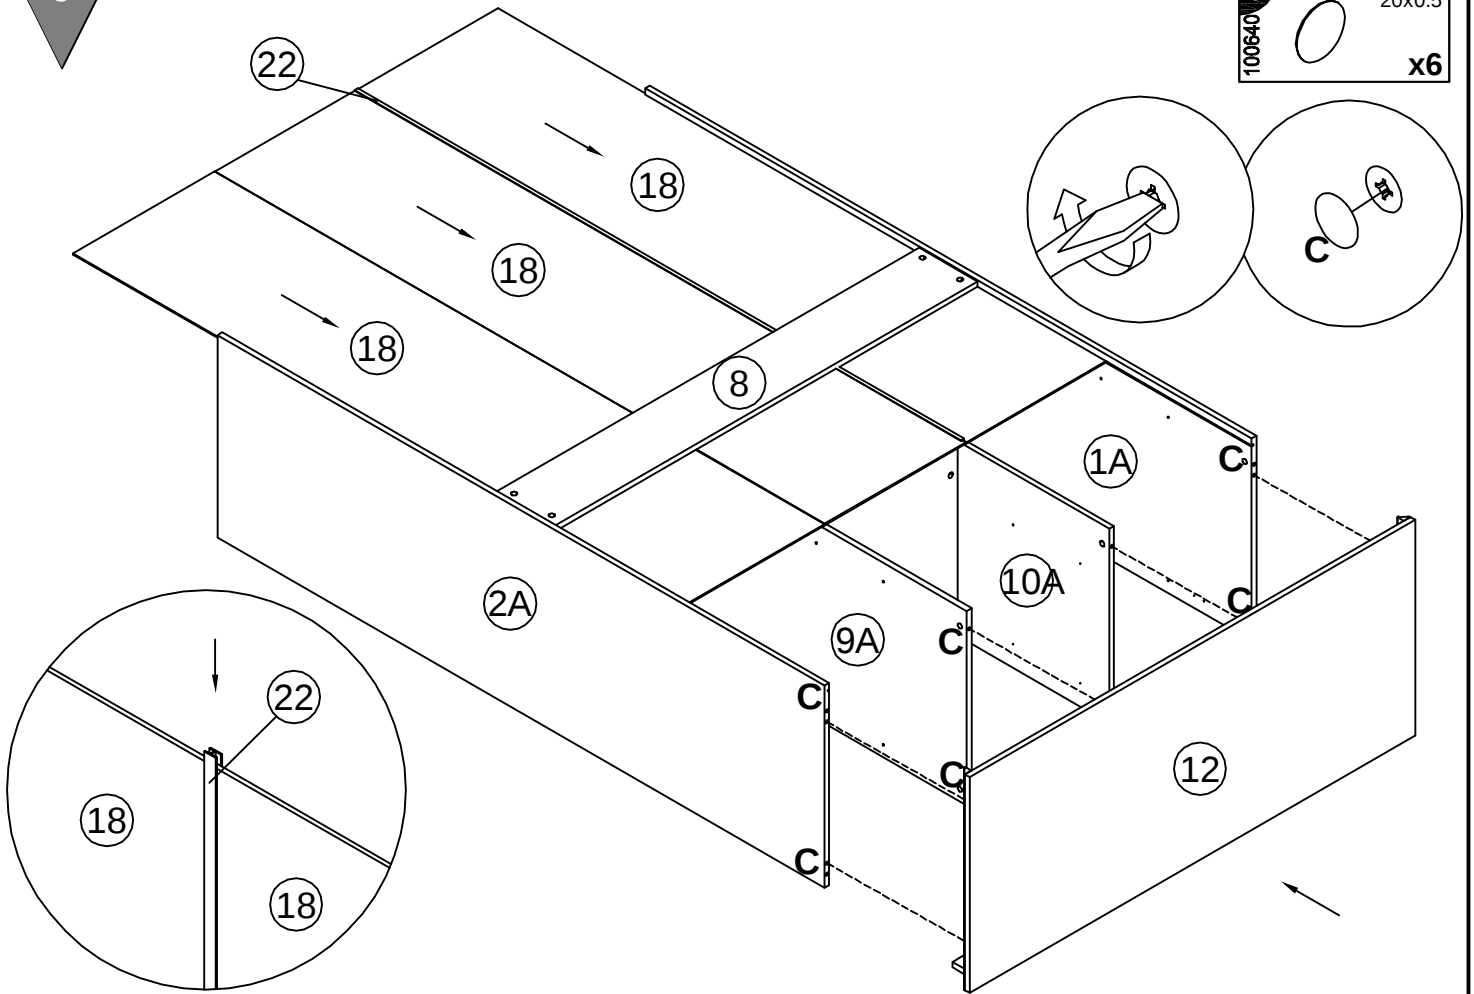

10

100640 C 20x0.5
x6

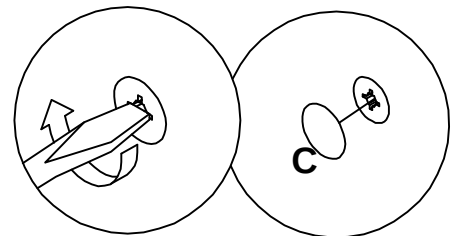
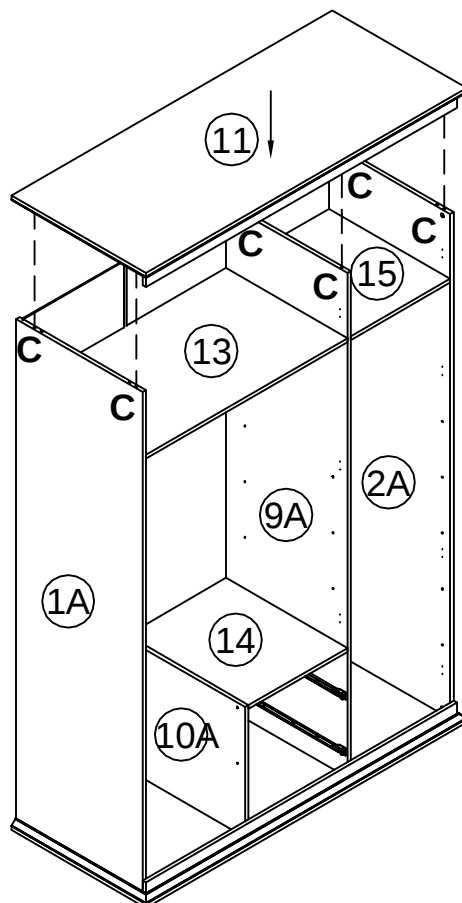


E
062367


x5

F
135021


x20

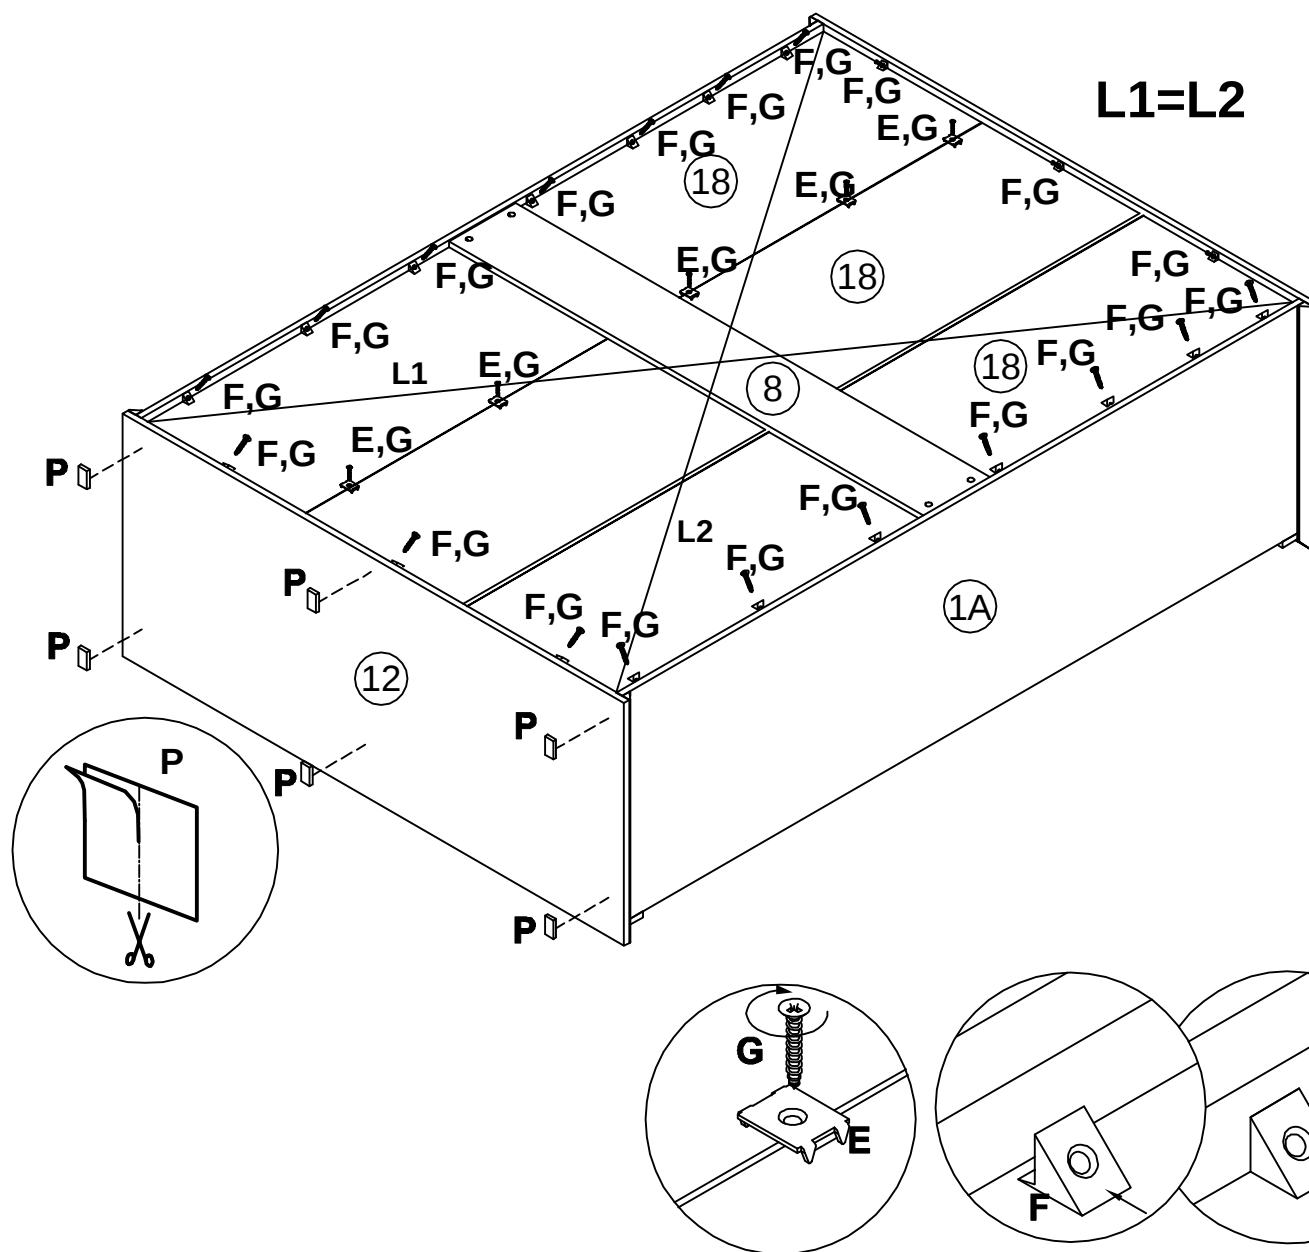G
0007593x20
x25P
10177770x50
x3



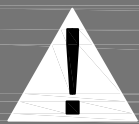

Achtung • Attention • Attenzione
Opgelet • Uwaga • Pozor • Figyelem
Atenție • Dikkat • Внимание

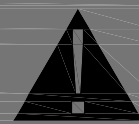

(D)	Wandbefestigung dient als Kippschutz – unbedingt anbringen! Bei einigen Wandtypen kann ein Spezialdübel erforderlich sein!
(GB)	The wall fastening serves to prevent tipping – be absolutely sure to mount it! For certain wall types, a special wall plug may be necessary!
(FR)	La fixation murale sert de protection contre le basculement – à installer impérativement ! Pour certains types de murs il faut des chevilles spéciales !
(IT)	Il fissaggio alla parete serve da protezione anti-ribaltamento – attaccarla assolutamente ! Per alcune strutture di parete può essere necessario un tassello speciale !
(NL)	Bevestiging aan de muur dient als kantelbescherming – zeker en vast bevestigen ! Bij enkele muurtypes is een speciale plug misschien vereist !
(PL)	Mocowanie do ściany jest jednocześnie zabezpieczeniem przed przewróceniem – koniecznie zamontować! Do niektórych rodzajów ścian koniecznie zastosować specjalne kołki mocujące.
(CZ)	Montáž na stěnu slouží jako ochrana proti převrhnutí – bezpodmienečně umístěte! Uněkterých typů stěn může být zapotřebí speciální hmoždinka !
(SK)	Upevnenie na stenu slúži ako ochrana proti prevráteniu – bezpodmienečne použite! Pre niektoré druhy stien môže byť potrebná špeciálna hmoždenka !
(HU)	A terméket a falhoz kel rögzíteni, különben az felborulhat! Egyes faltípusoknál speciális tiplit kell használni !
(RO)	Sistemul de fixare la perete servește ca protecție la răsturnare – de montat obligatoriu! Pentru unele tipuri de pereți este posibil să fie necesar un diblu special !
(TR)	Duvardaki sabitleme, devrilmeye karşı bir emniyet tedbiridir ve mutlaka monte edilmelidir! Bazı duvar tiplerinde bunun için özel bir düble gerekli olabilir !
(RU)	Обязательно установите крепление на стене во избежание опрокидывания ! Для некоторых типов стен может потребоваться специальный дюбель !