

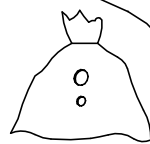


Montageanleitung – Model MONACO

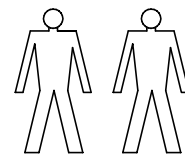

Montagezubehör

A

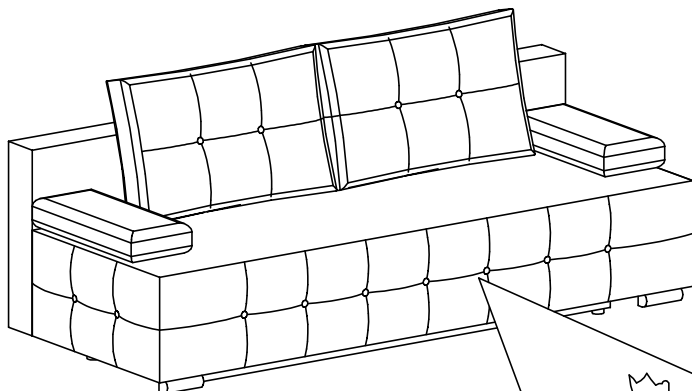

Ø13mm

4x



B





Ø20mm

4x

Colli 1

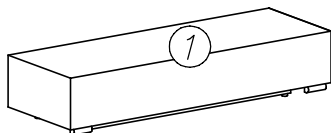


Colli 2

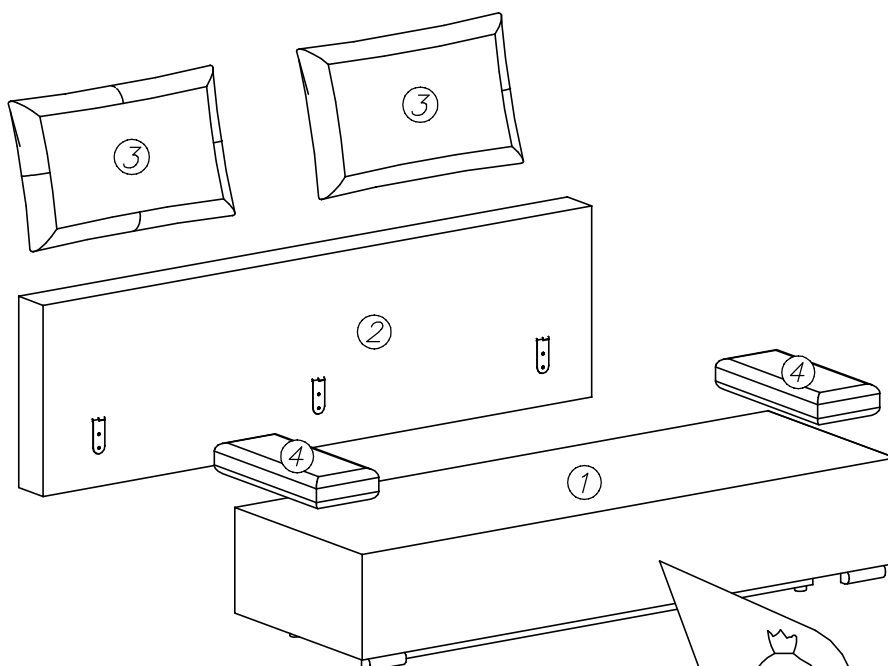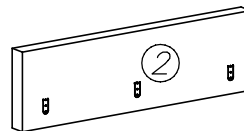

Montagezubehör

1

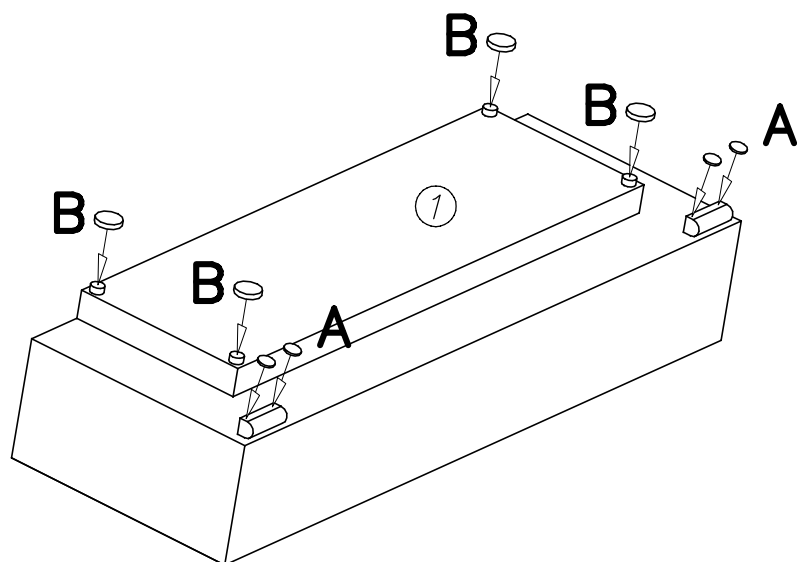

2

