

Art. Nr. 37804346, 59527056

LKZ 41629



DE Montageanleitung

FR Notice de montage

NL Handieding voor de montage

CZ Montážní návod

HU Szerelési útmutató

TR Montaj talimati

GB Assembly instructions



IT Istruzioni di montaggio


PL Instrukcja montażu

SK Návod na montáž






RO Instruktiuni de montaj


RU Инструкция по монтажу

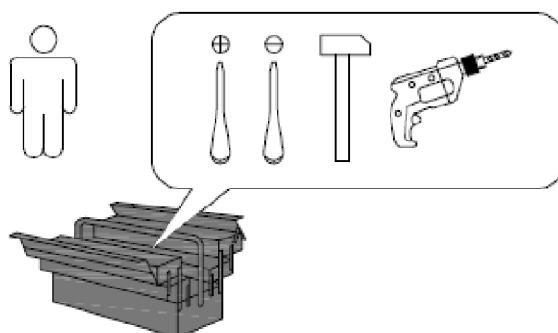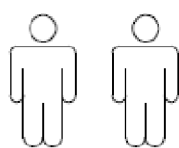


















№	Size (mm)	Qty	№	Size (mm)	Qty
1	1174x373x43	1	10	1420x390x50	1
2	1114x343x120	1	11	300x175x18	2
3	1425x320x18	1	12	300x145x18	2
4	1425x320x18	1	13	300x145x18	2
5	1425x316x18	1	14	236x128x18	2
6	1425x175x18	1	15	300x245x4	2
7	298x316x18	1	16	1443x315x4	2
8	298x316x18	2	17	1443x315x4	1
9	1420x390x50	1			

A1 8*30  x28	B1  x26	C1 7*24  x26	D168 3.5*16  x33	D169 4.0*16  x25	E41  x7	L38 20*20  x5
H147  x6	J86 l=770  x10	P79 M4*22  x4	V216  x4	S70 D17  x24	O30 1.4*25  x46	Z87  x1
G110 l=300  x4	P248 7*50  x8	J48 SW4  x1	N41  x1	N1 8.0*40  x1	D170 4.0*45  x1	Z245  x4
E42  x2						

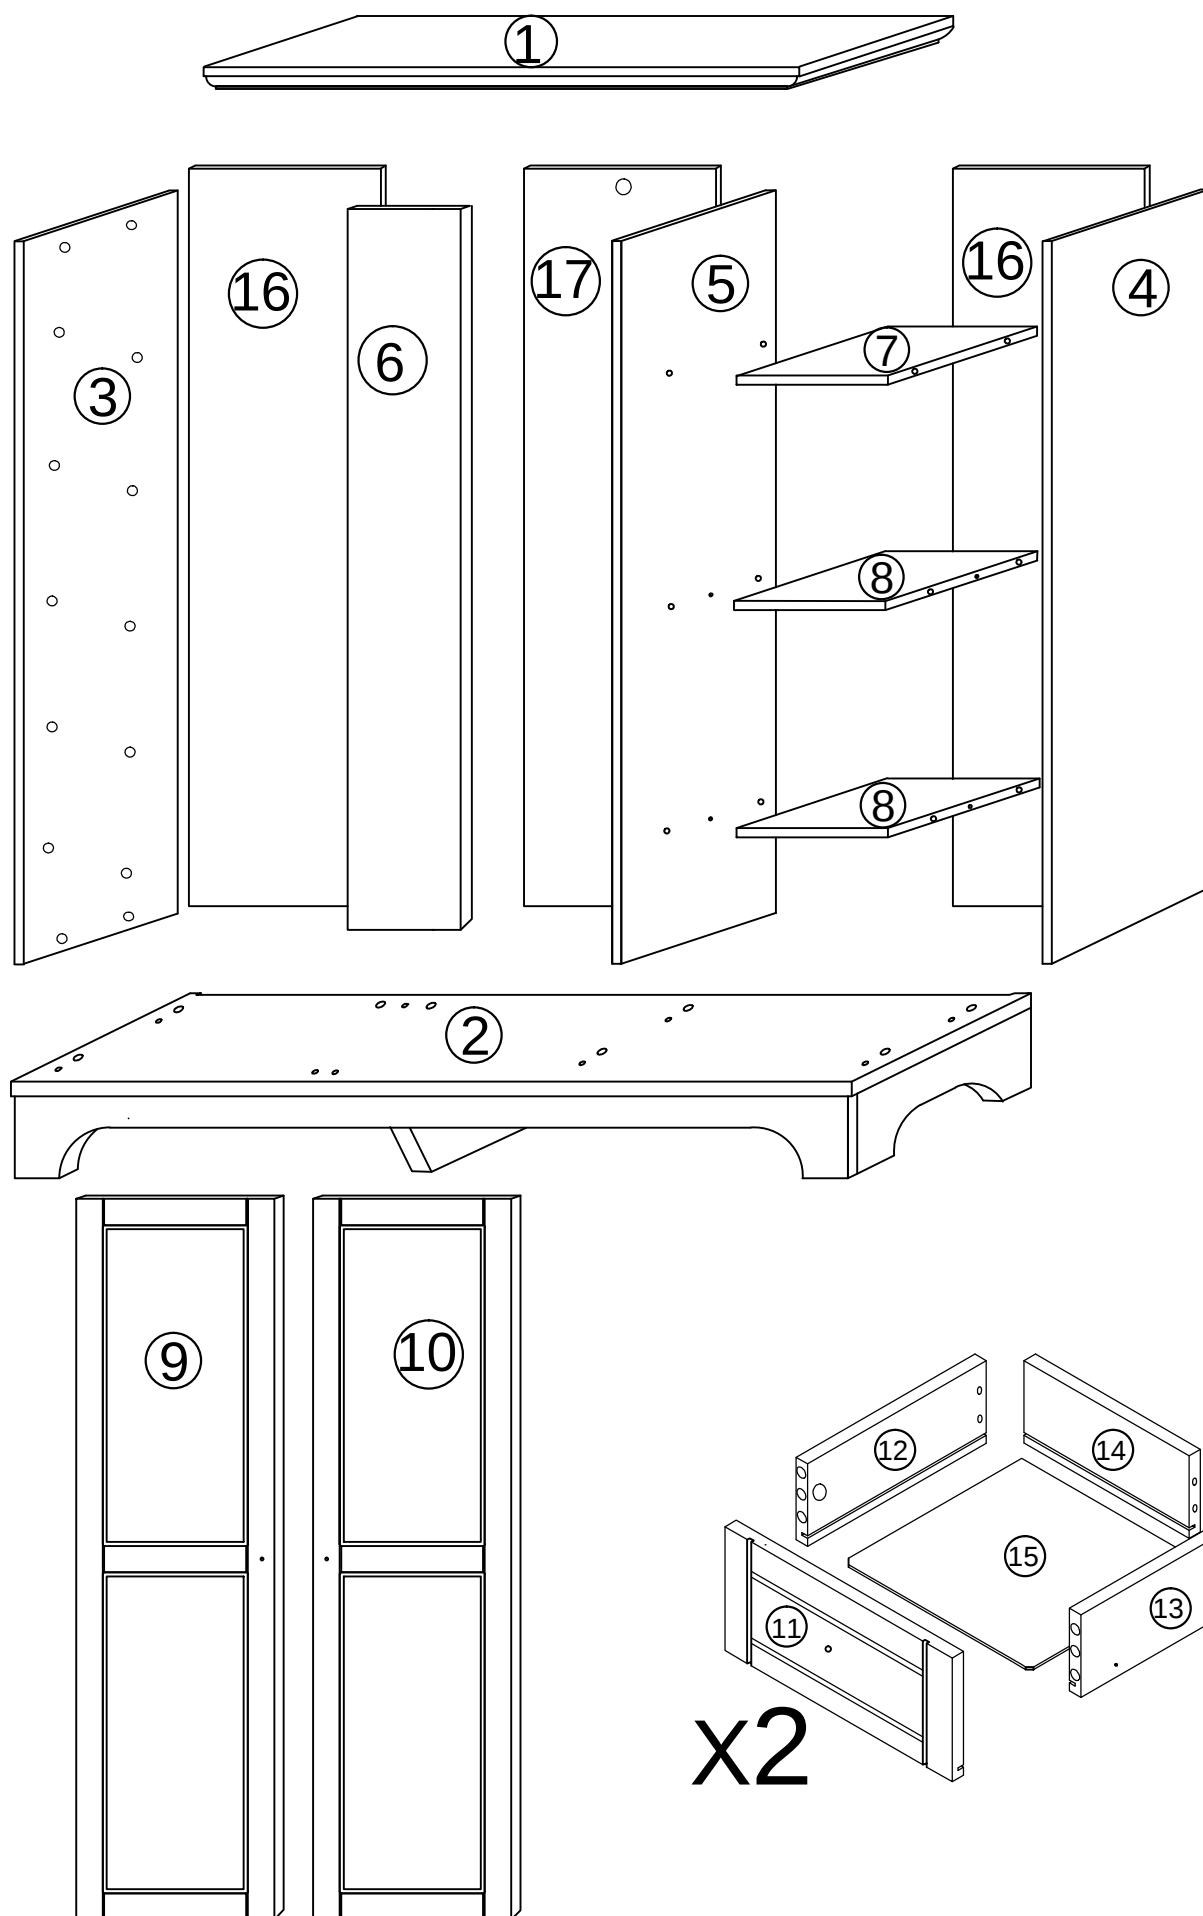

1

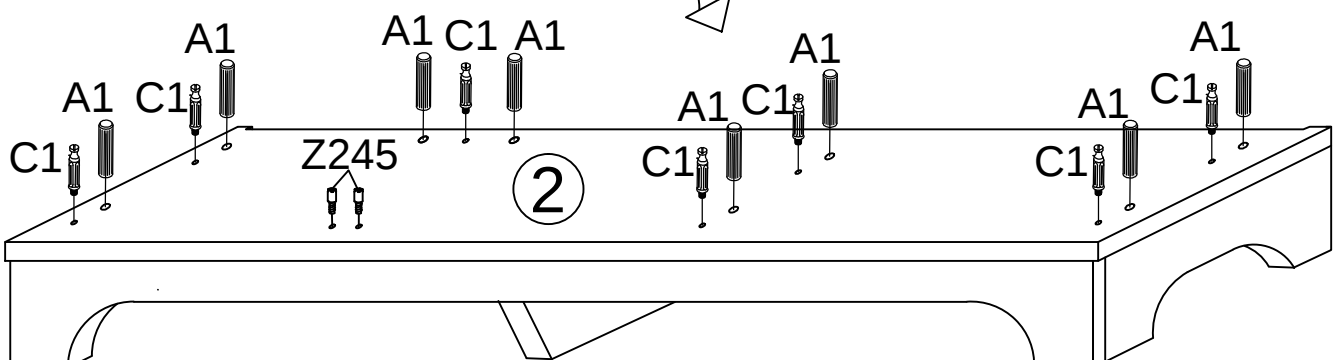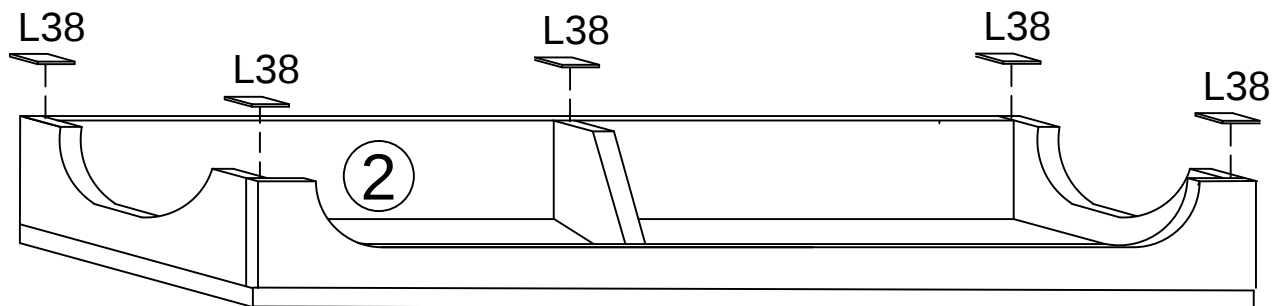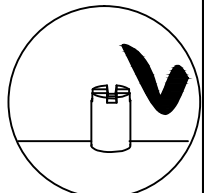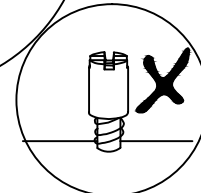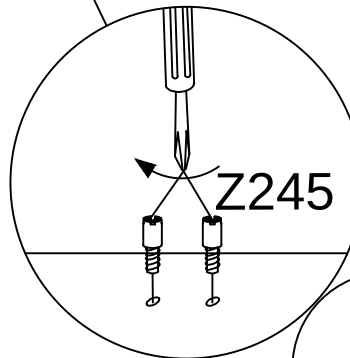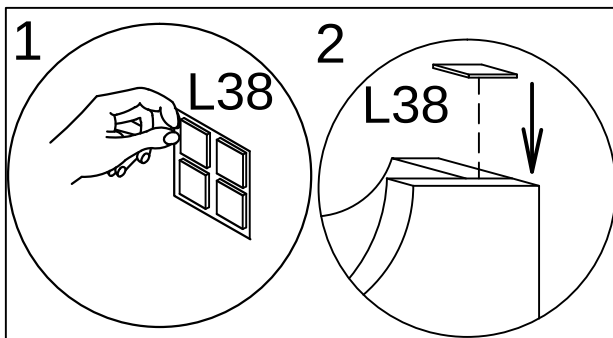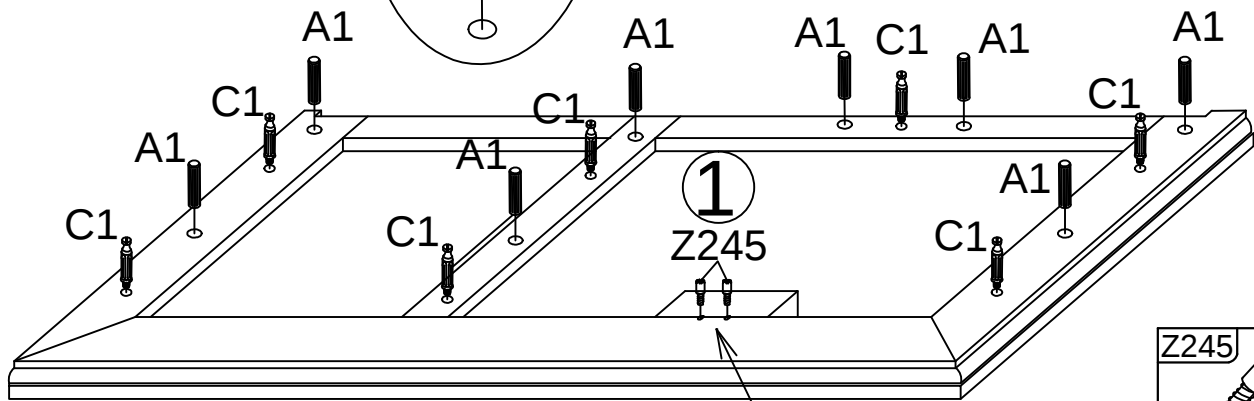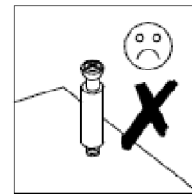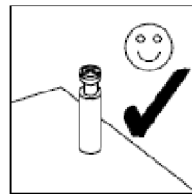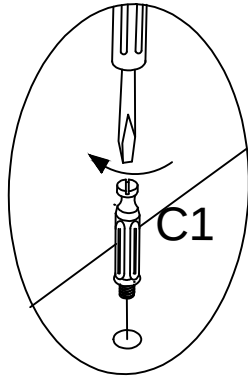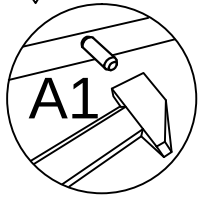


4

The diagram illustrates the assembly of components H147 and H147(1). On the left, a screwdriver is shown adjusting a screw on component H147, which is connected to component H147(1). A double-headed arrow indicates the adjustment. The assembly is then shown in two states: H147(1) and H147(2).

Diagram 5 illustrates the final step of mounting the door to the frame. The door is shown being swung open, as indicated by the curved arrow. The door features a handle (V216) and a lock (P79). The frame consists of three horizontal bars (9, 10, 11) and a vertical bar (12). The door is secured to the frame using H147(2) brackets and D169 screws. A detailed inset shows the screw (D169) being driven into the door frame. A parts list on the right identifies the components: H147(2) (x6), D169 (4.0x16, x12), V216 (x2), and P79 (M4x22, x2).

5

4

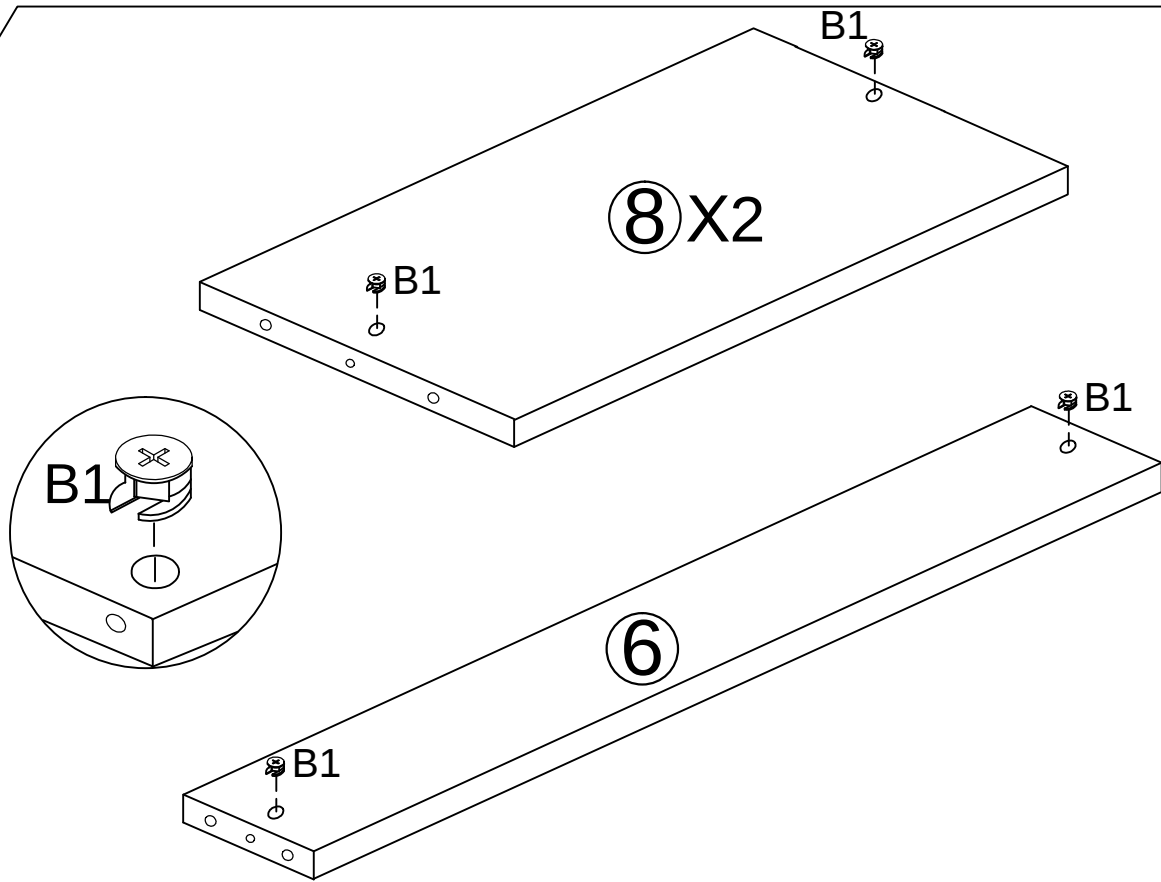


B1



x4

5

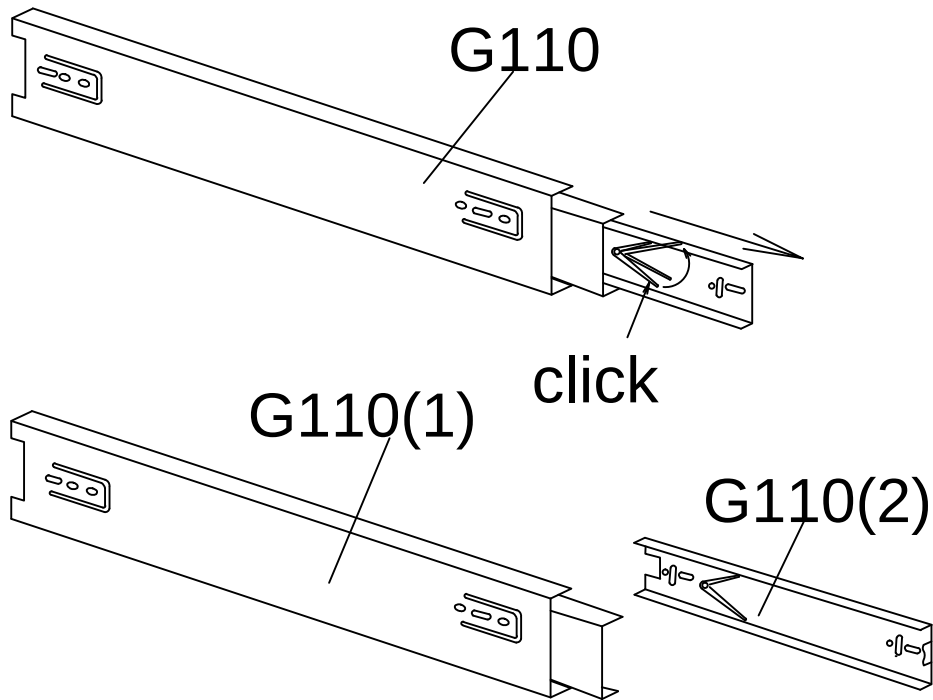

















G110

















G110(1)



click


G110(2)

6

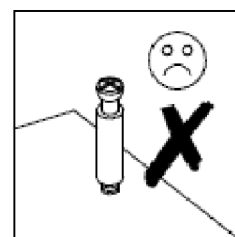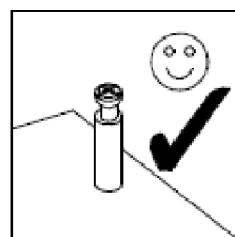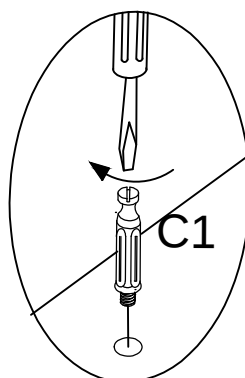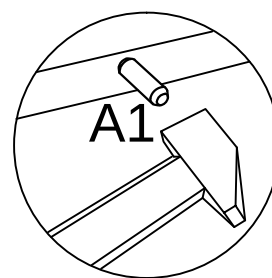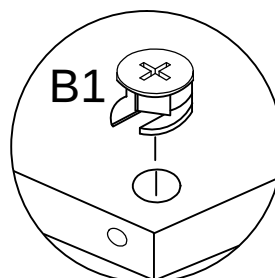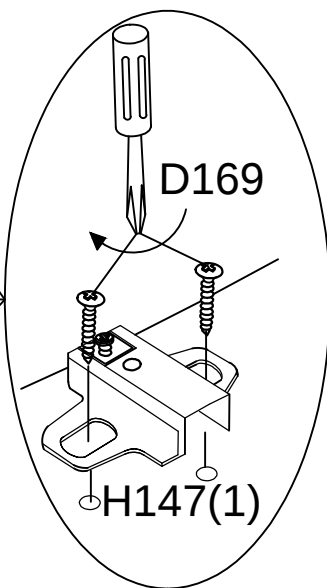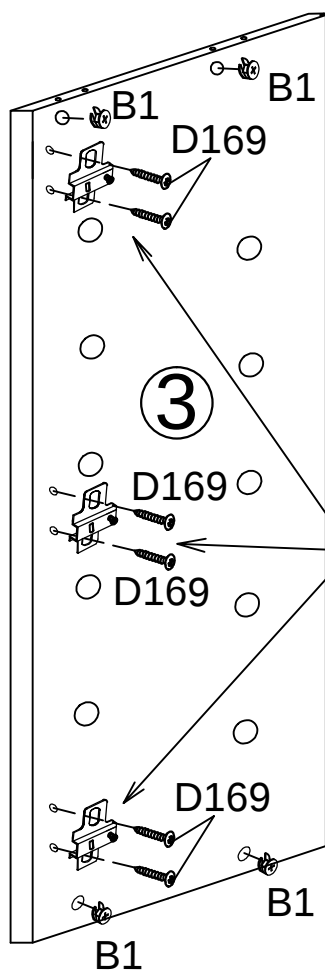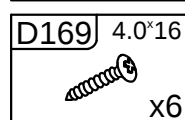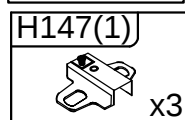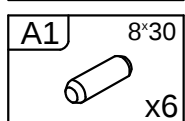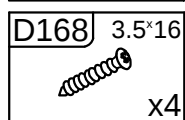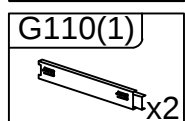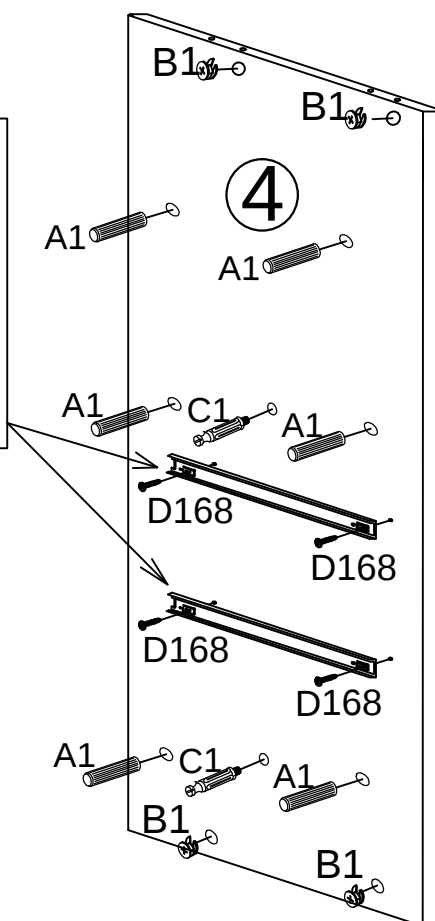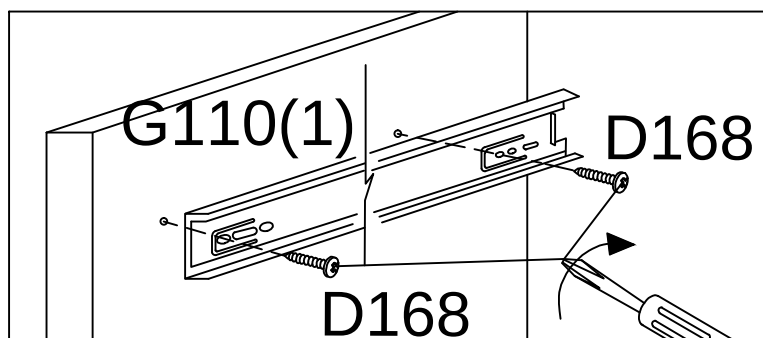


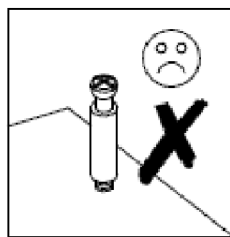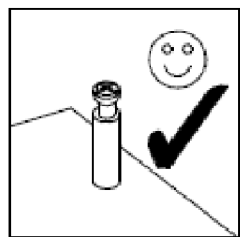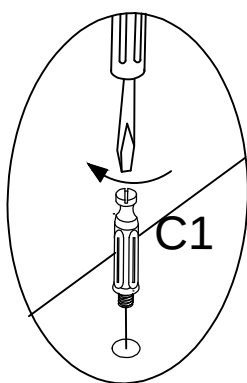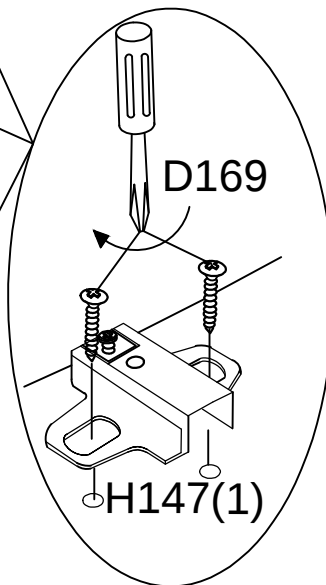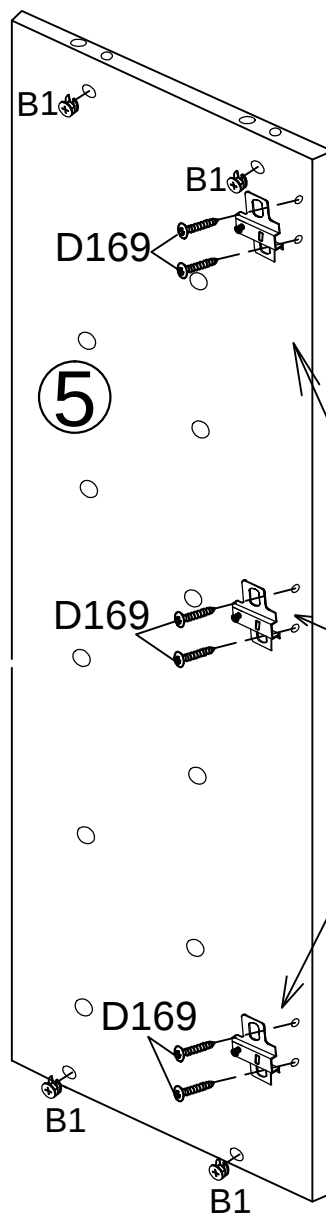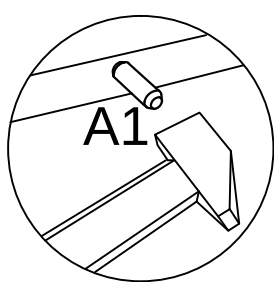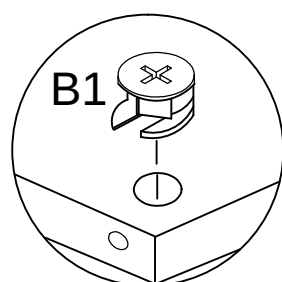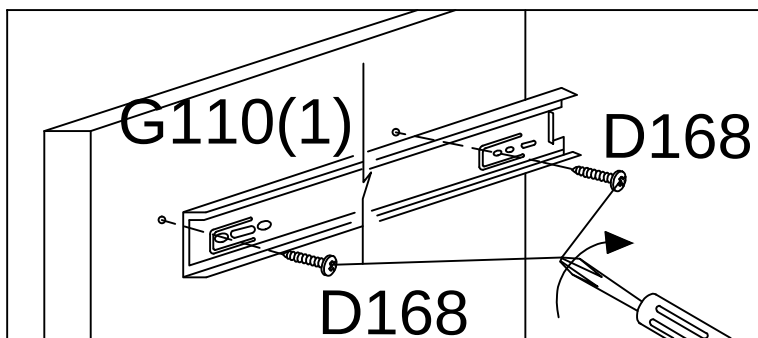
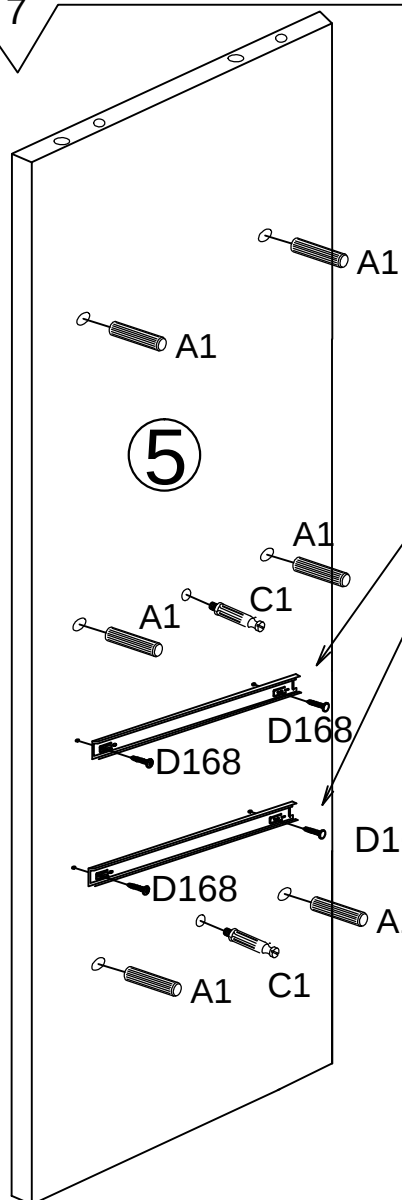


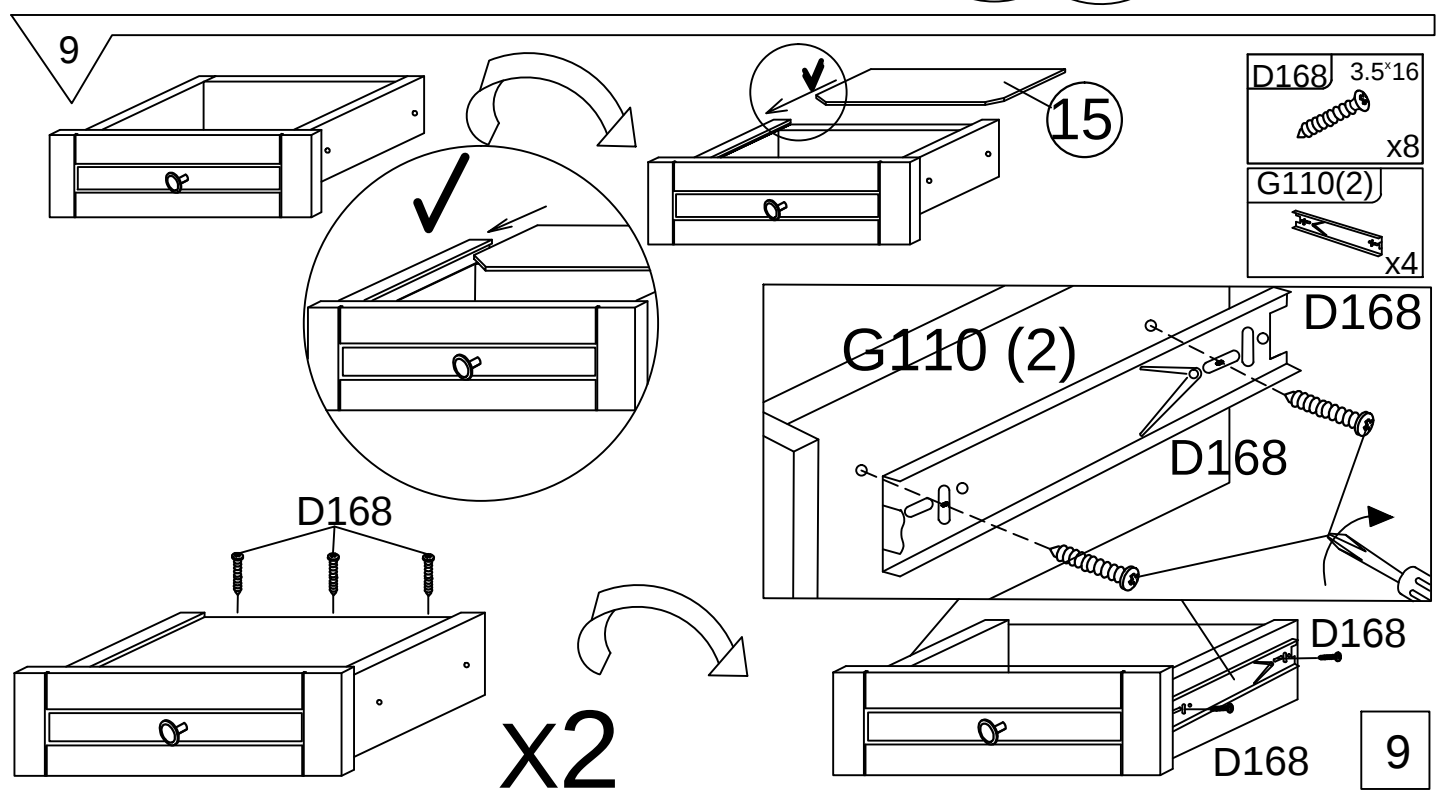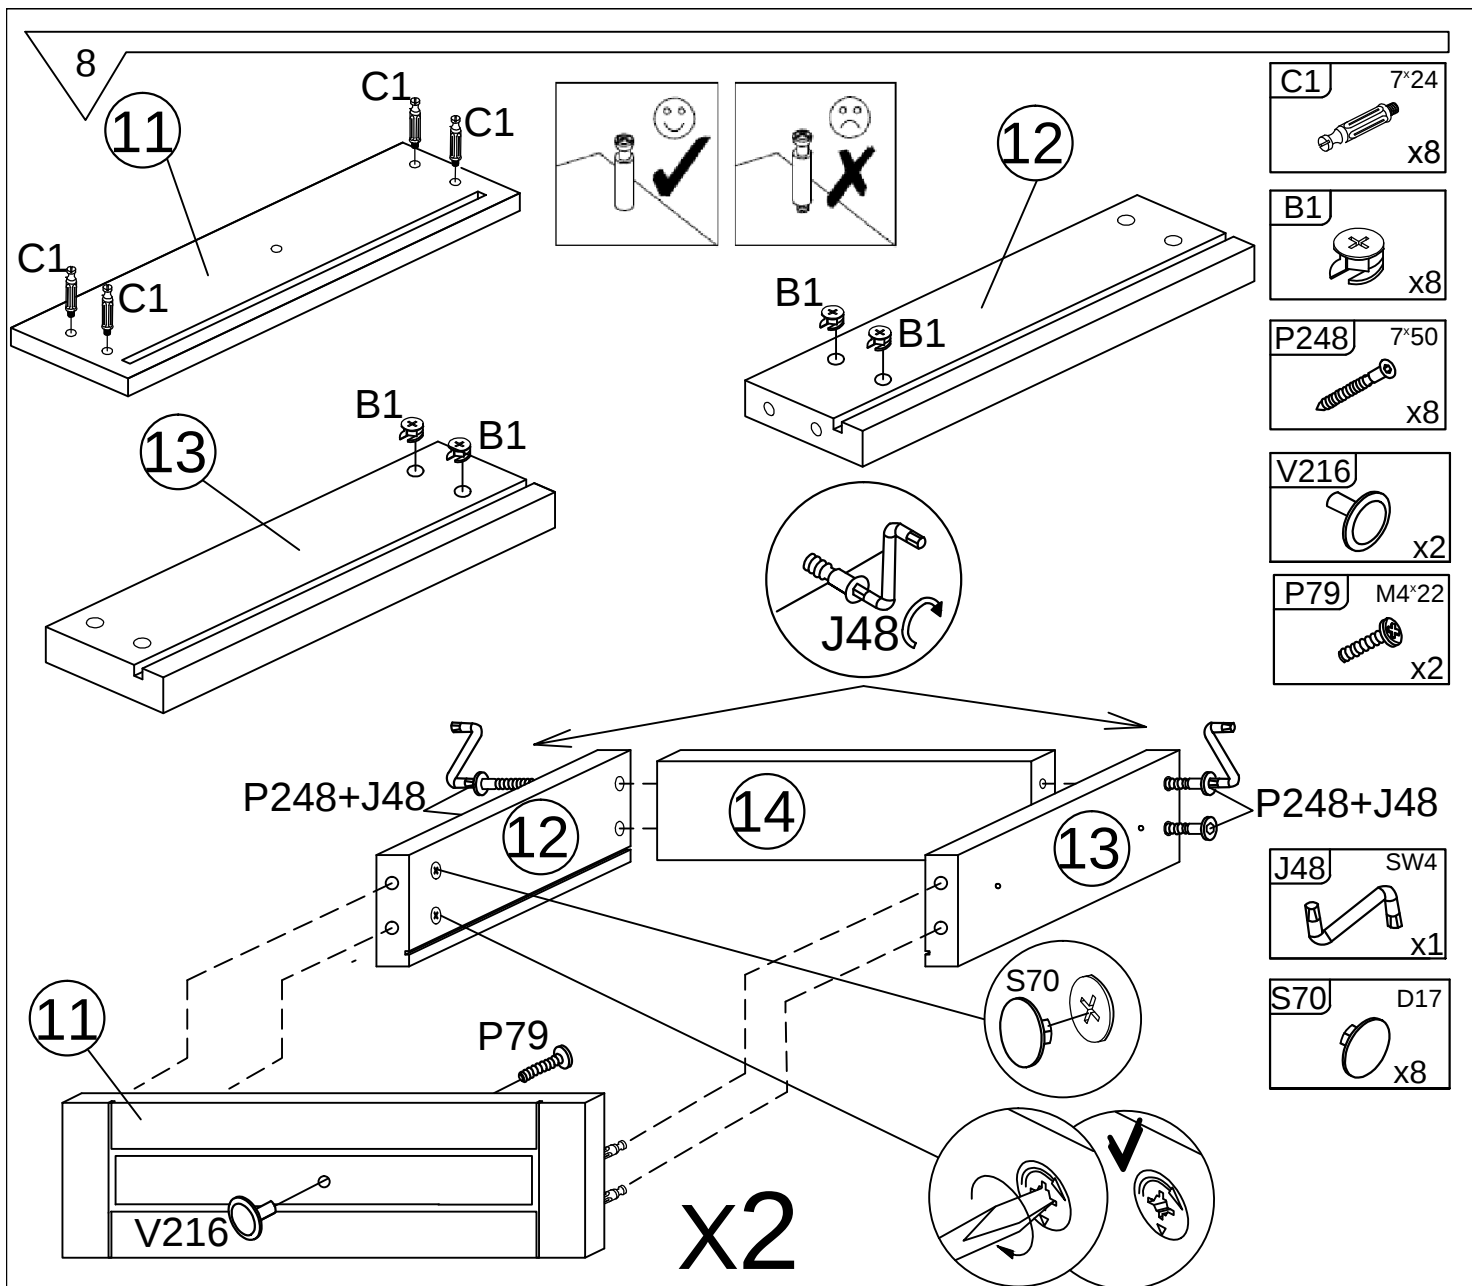


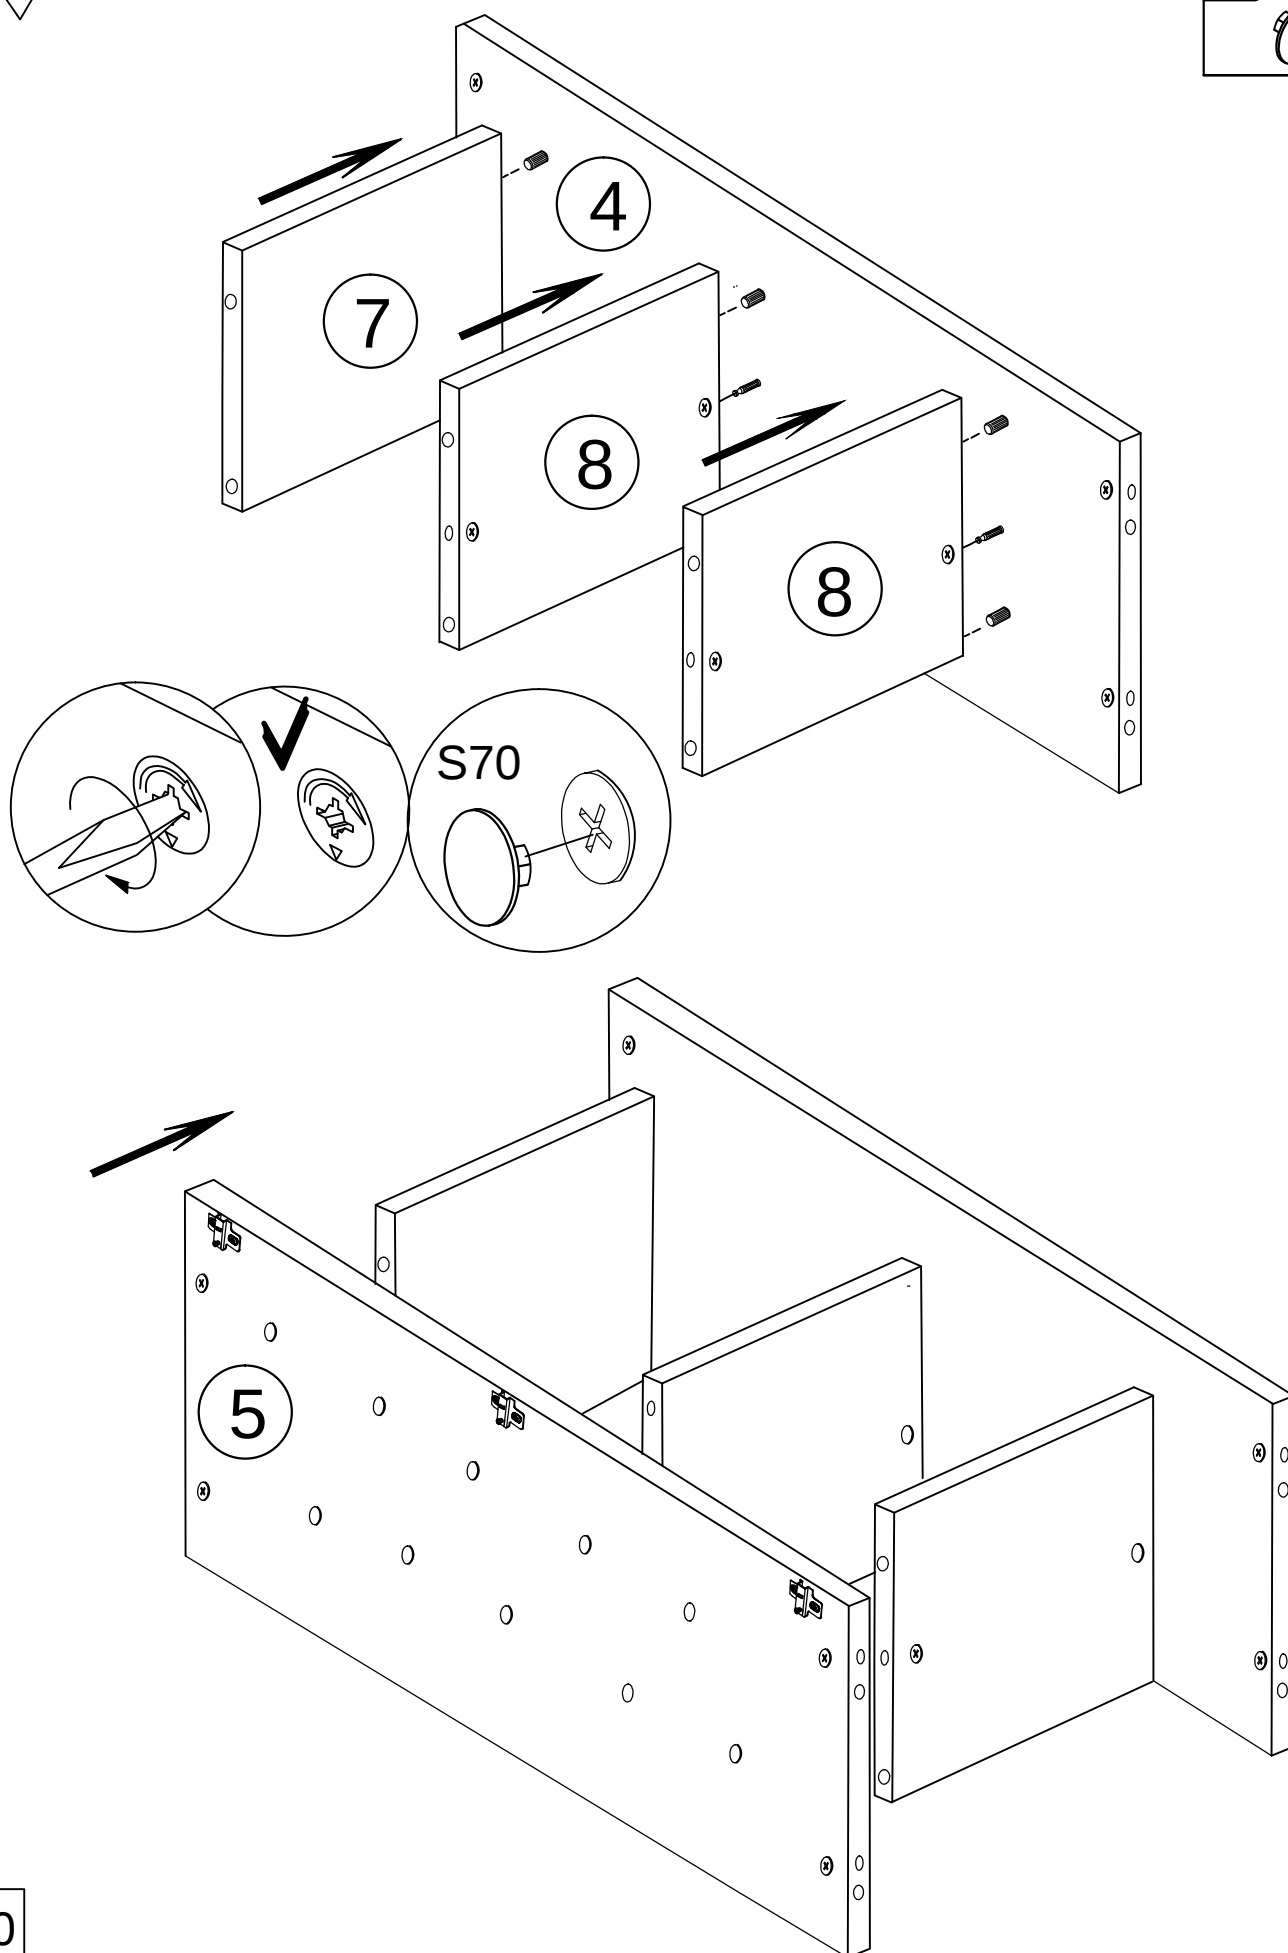


S70	D17
	x12
J86	l=770
	x10

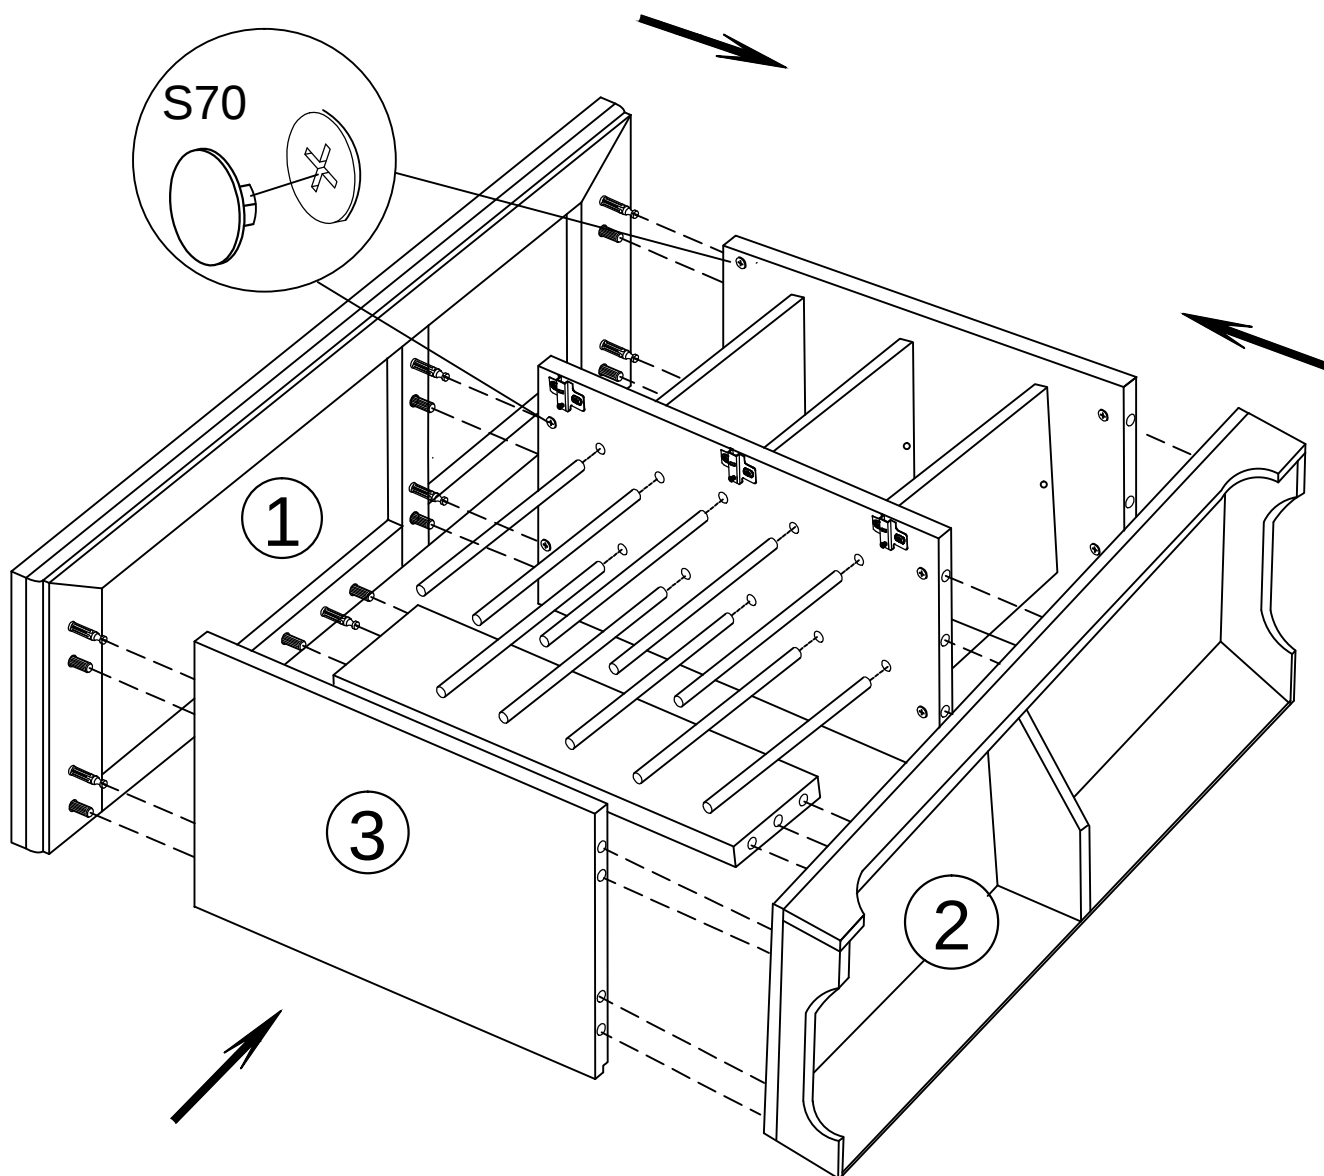

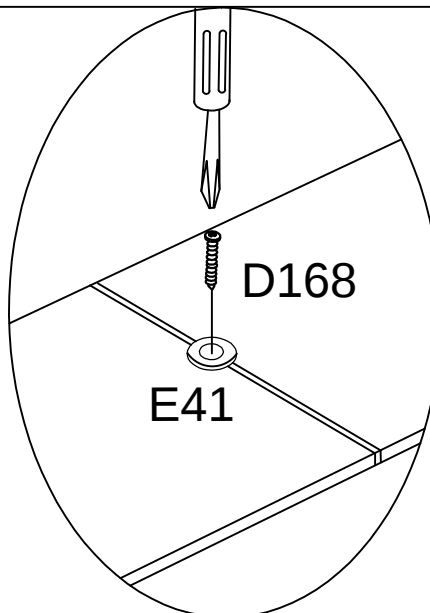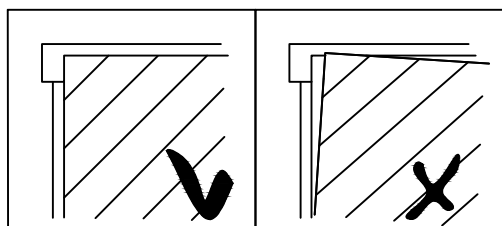

E41		x7
O30		1.4x25 x46
D168		3.5x16 x7

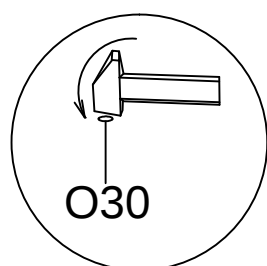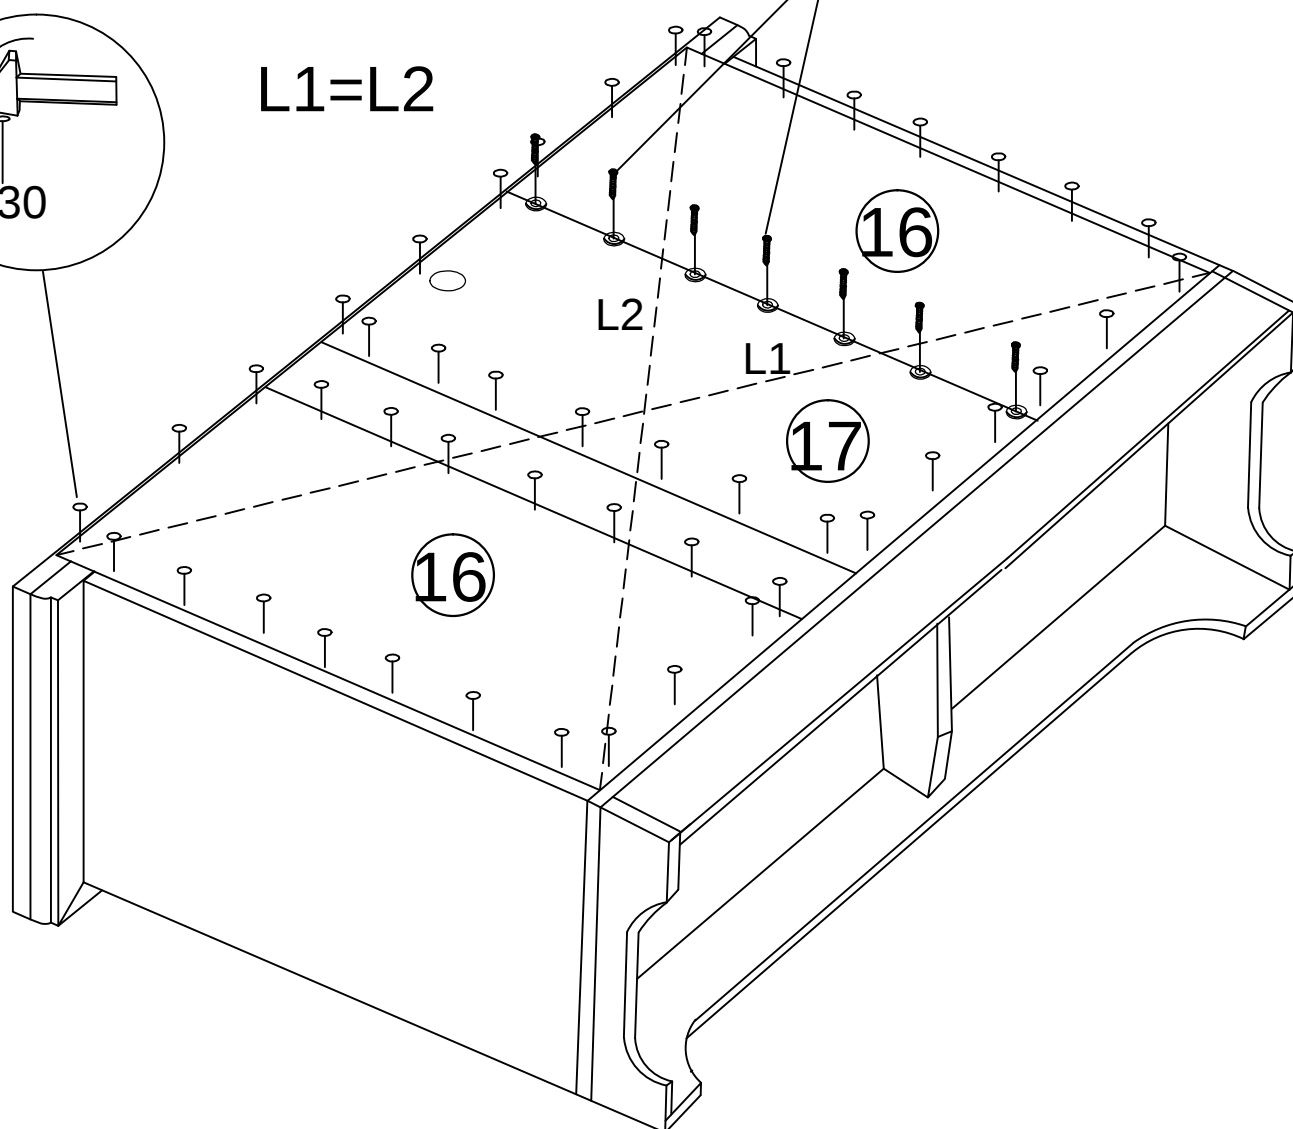 $L1=L2$ 

D168 3.5*16




x4













Z87



x1

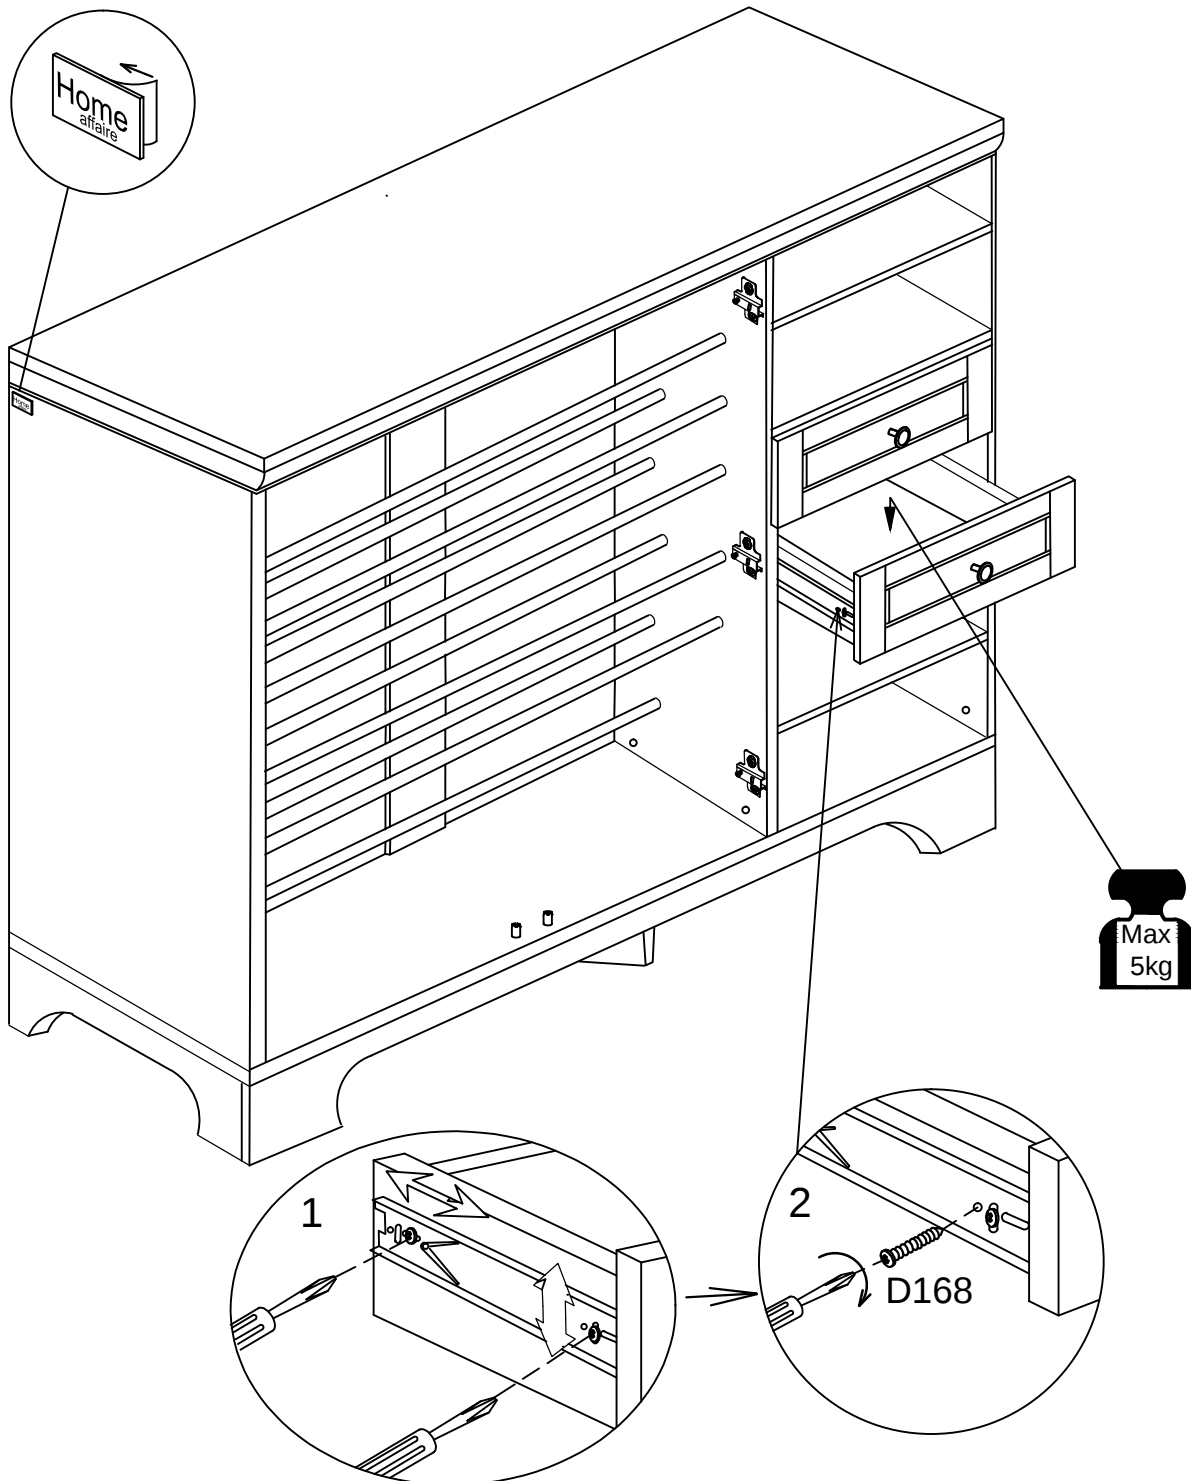

14

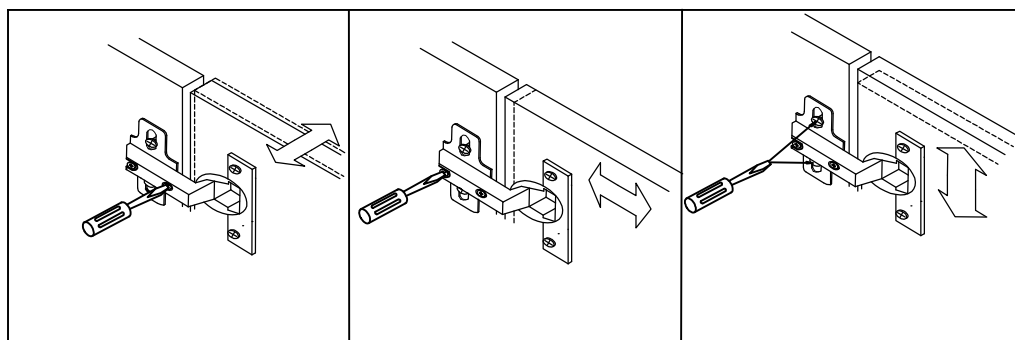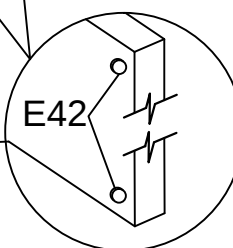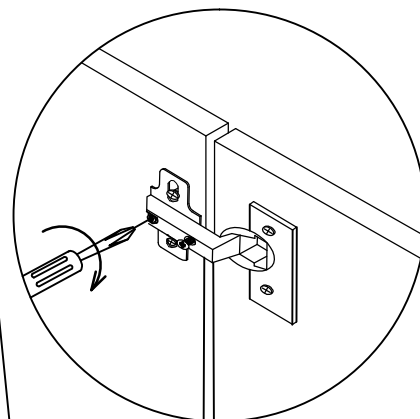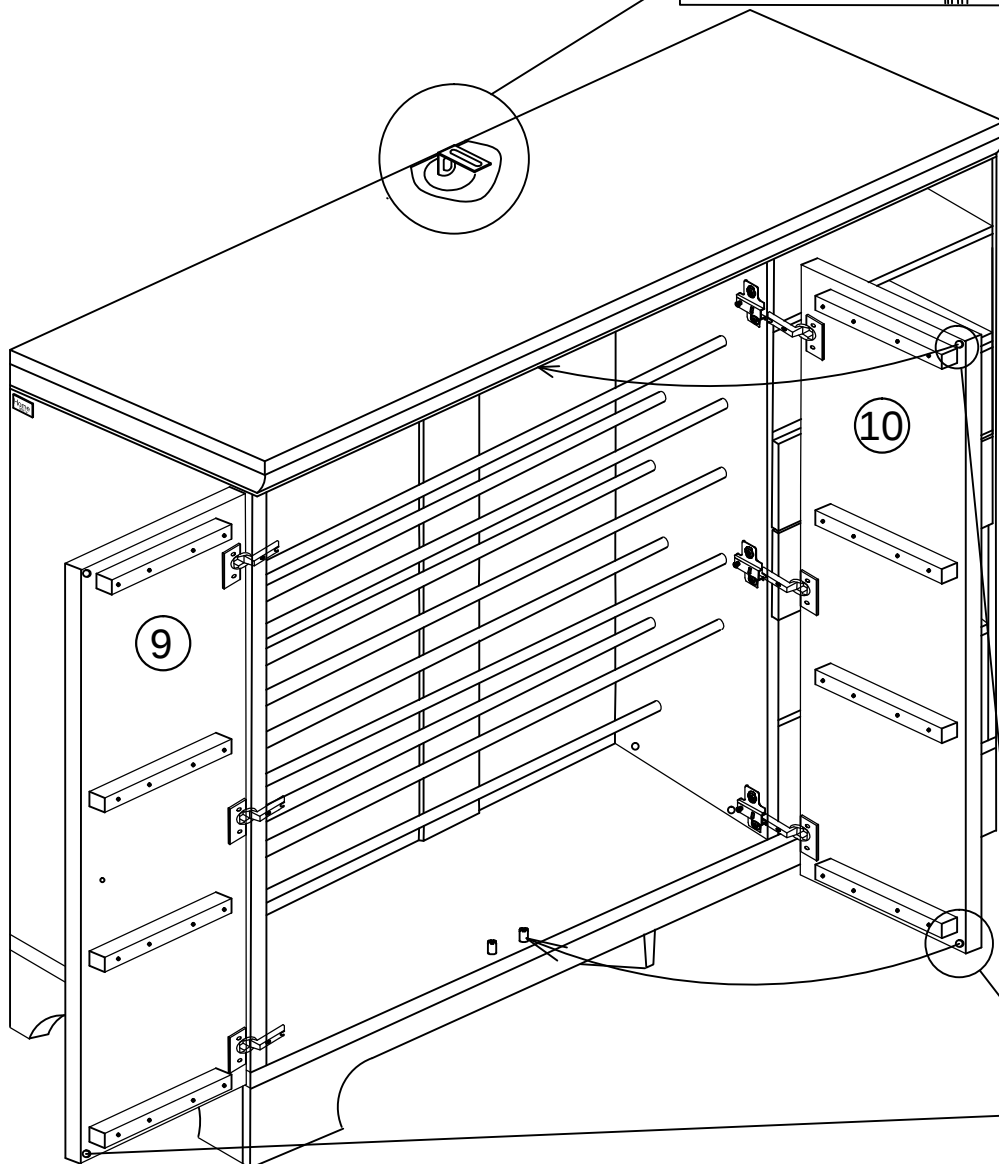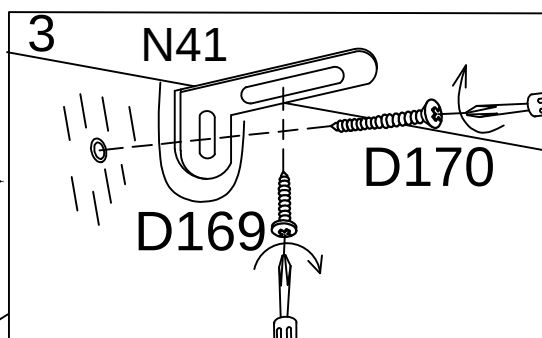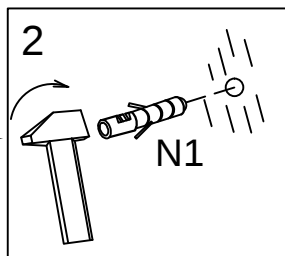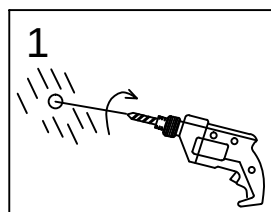

14



Achtung • Attention • Attenzione
Opgelet • Uwaga • Pozor • Figyelem
Atenție • Dikkat • Внимание



(D)	Wandbefestigung dient als Kippschutz – unbedingt anbringen! Bei einigen Wandtypen kann ein Spezialdübel erforderlich sein!
(GB)	The wall fastening serves to prevent tipping – be absolutely sure to mount it! For certain wall types, a special wall plug may be necessary!
(FR)	La fixation murale sert de protection contre le basculement – à installer impérativement ! Pour certains types de murs il faut des chevilles specials !
(IT)	Il fissaggio alla parete serve da protezione anti-ribaltamento – attaccarla assolutamente ! Per alcune strutture di parete può essere necessario un tassello speciale !
(NL)	Bevestiging aan de muur dient als kantelbescherming – zeker en vast bevestigen ! Bij enkele muurtypes is een speciale plug misschien vereist !
(PL)	Mocowanie do ściany jest jednocześnie zabezpieczeniem przed przewróceniem – koniecznie zamontować! Do niektórych rodzajów ścian koniecznie zastosować specjalne kołki mocujące.
(CZ)	Montáž na stěnu slouží jako ochrana proti převrhnutí – bezpodmienečně umístěte! Uněkterých typů stěn může být zapotřebí speciální hmoždinka !
(SK)	Upevnenie na stenu slúži ako ochrana proti prevráteniu – bezpodmienečne použite! Pre niektoré druhy stien môže byť potrebná špeciálna hmoždenka !
(HU)	A terméket a falhoz kel rögzíteni, különben az felborulhat! Egyes faltípusoknál speciális tiplit kell használni !
(RO)	Sistemul de fixare la perete serve ște ca protecție la răsturnare – de montat obligatoriu! Pentru unele tipuri de pereți este posibil să fie necesar un diblu special !
(TR)	Duvardaki sabitleme, devrilmeye karşı bir emniyet tedbiridir ve mutlaka monte edilmelidir! Bazı duvar tiplerinde bunun için özel bir düble gerekli olabilir !
(RU)	Обязательно установите крепление на стене во избежание опрокидывания ! Для некоторых типов стен может потребоваться специальный дюбель !