
## NOVA LUCE


## 9870043



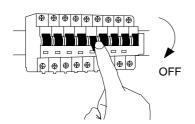


Turn off the general switch

(2)




Detach the cover, drill holes & apply plastic anchors with the screws

(3)

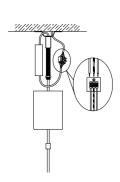


Connect the wires

(4




Adjust the cable length & fix it in to place with a screw

5



Push the canopy to the ceiling & apply the metal cap by rotating

(6)

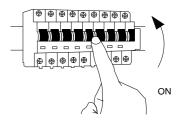

Turn on the general switch



