
NOVA LUCE

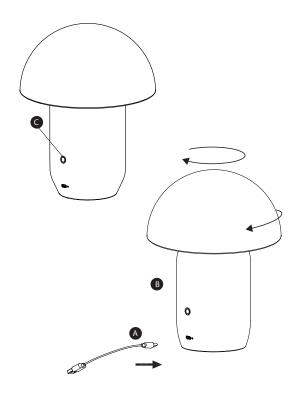

Step 1

Connect the DC connector (A) to the product (B).

Step 2

Charge the battery, which is already fitted to the product before first use.

Plug in the power adapter and ensure the product is fully charged before operating. The light indicator on button (C) will turn from red to green when fully charged. Your table lamp is now ready for use.

To operate the on/off dimmer, touch the button (C) on the back of your lamp. (one touch low light level, second touch brighter, third touch brightest and fourth to turn off).

When used on the brightest setting the light will start to dim after 6-8 hours of use. Top up the battery by charging the lamp until the light turns green (approx. 4 hours).

Always unplug after charging.

Note:

The shade had been pre-assembled for your convenience. If the shade is loose, tighten by rotating clockwise.

